

Eko Bookcase 1800H

 
Assembly Instructions

Tools Required: Powered Screwdriver



Assembly Instructions


- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.



**Recommended
2-person Step**

PARTS LIST

Item	Description	Quantity	Item	Description	Quantity
A	Top Panel	1	c1	6x35 Cam Bolt	16
X	Left side panel	1	d1	8x30 Dowel Pin	12
Z	Right side panel	1	c2	(5/8") Cam Cover	16
D	Back panel	2	p1	Threaded Dowel Pin	16
G	Bottom panel	1	s1	4x16 Screw	42
E	Adjustable Shelf	4	b4	Backing Strip	1
O	Batten	2			

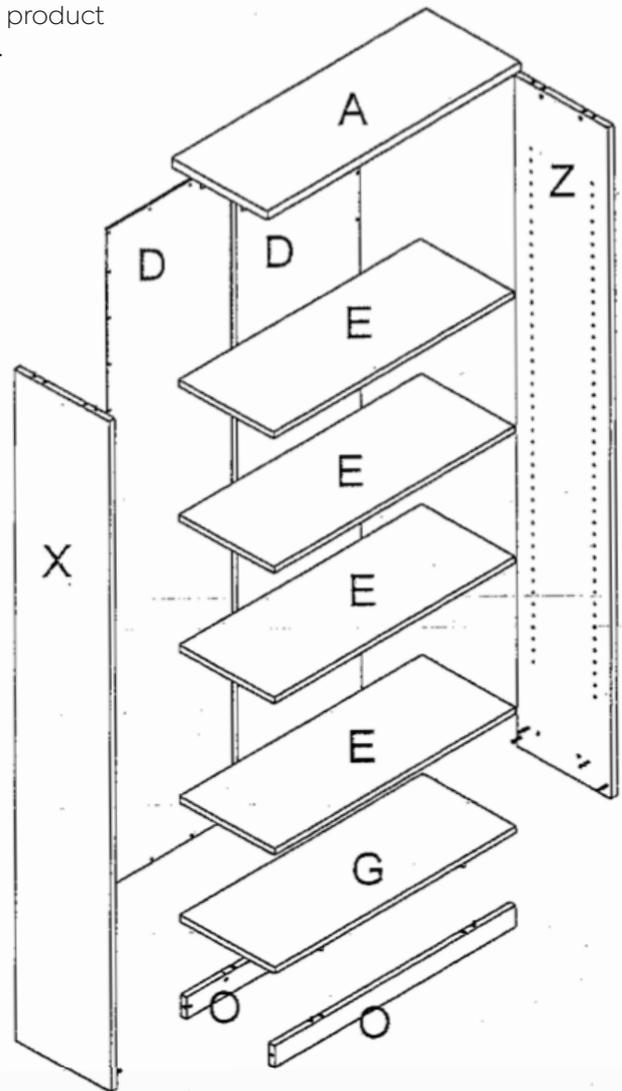

c1 6x35 Cam Bolt-16




d1 8x30 Dowel Pin-12



c2 (5/8") Cam Cover-16



s1 4x16 Screw-42

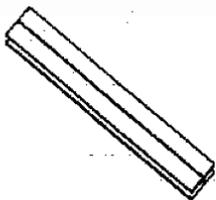

b4 Backing Strip-1



p1 Threaded Dowel Pin-16




c5 Cam

Pre-installed parts

Step 1


Preparation for bookcase top panel A, bottom panel G, left side panel X, right side panel Z, Batten O, back panel D.

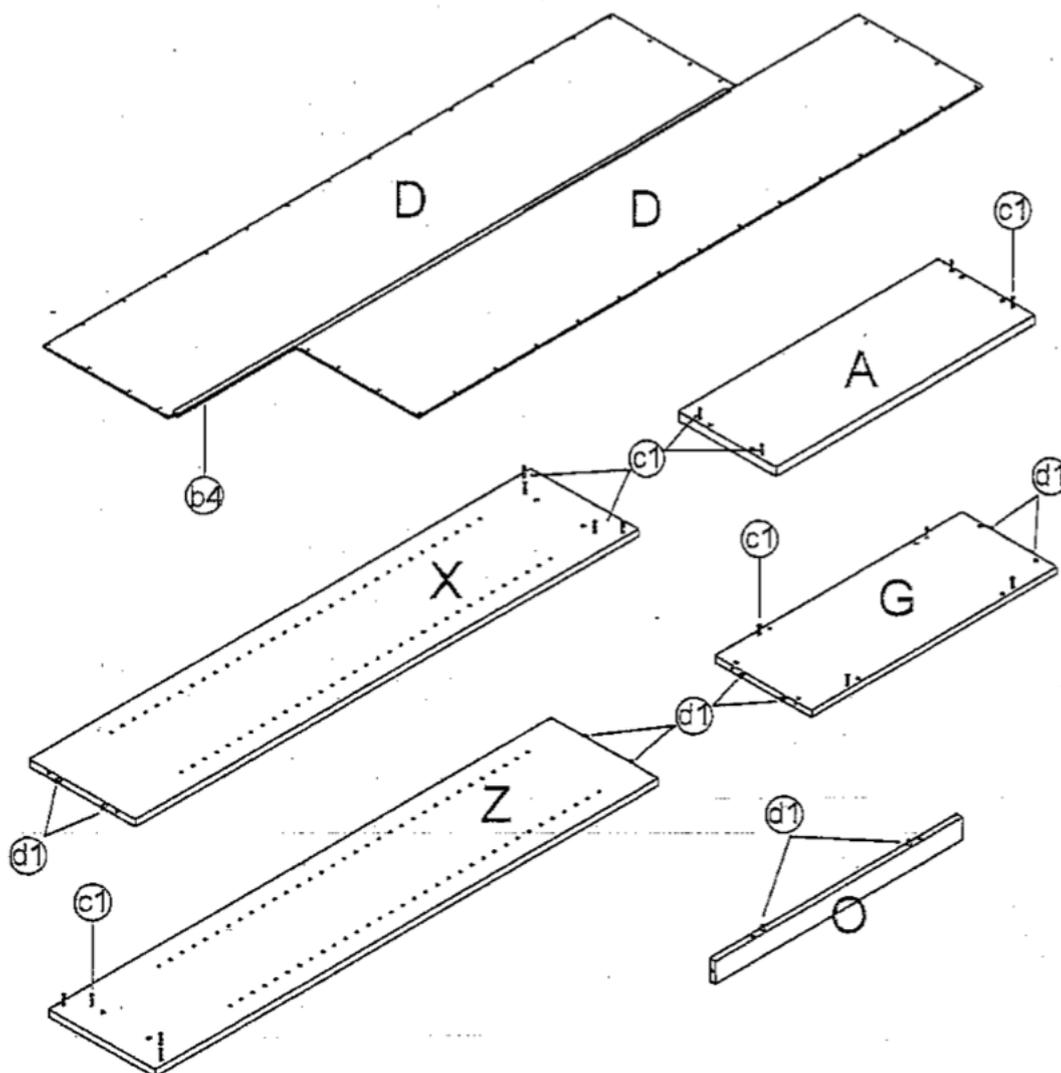

1. Insert cam bolts (c1) and dowel pins (d1) into panel A, G, X and Z as illustrated above.
2. Insert dowel pins (d1) in to panel X, Z, G and O as illustrated above.
3. Connect two back panel D by backing strip (d4).


Step 2

Insert cam bolts (c1) on panel G into cams on panel O and fully tighten.

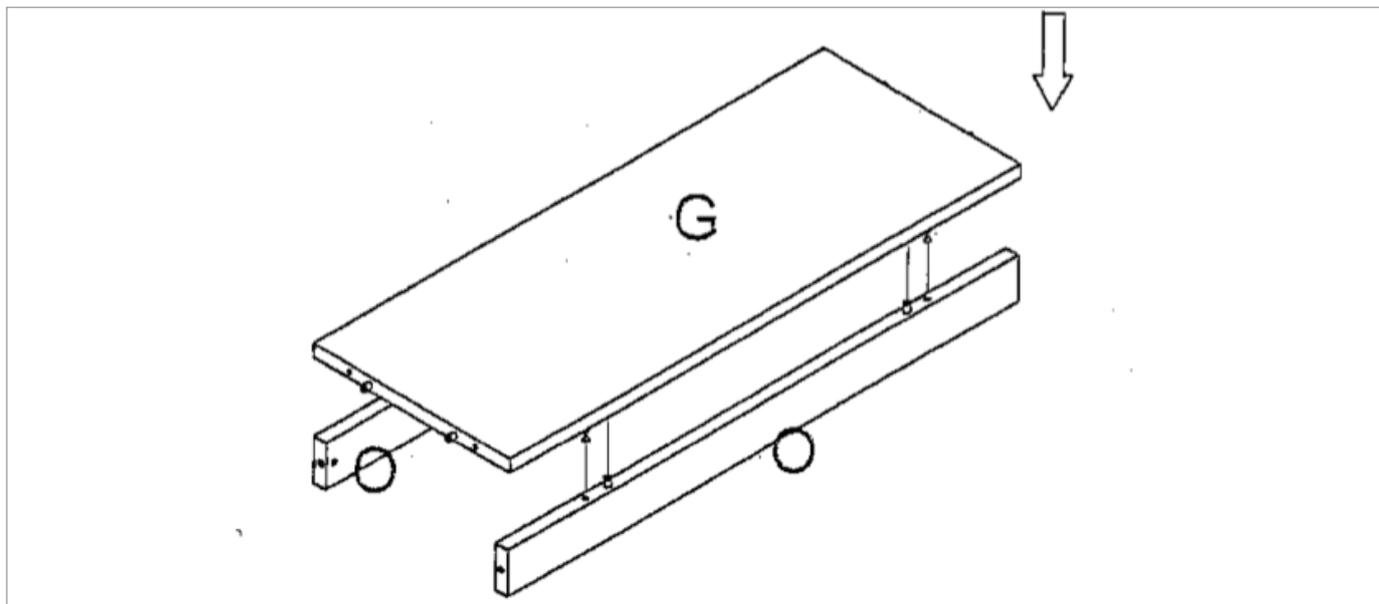


Step 3

Insert cam bolts (c1) on panel X and Z into cams on panels G, O and fully tighten.

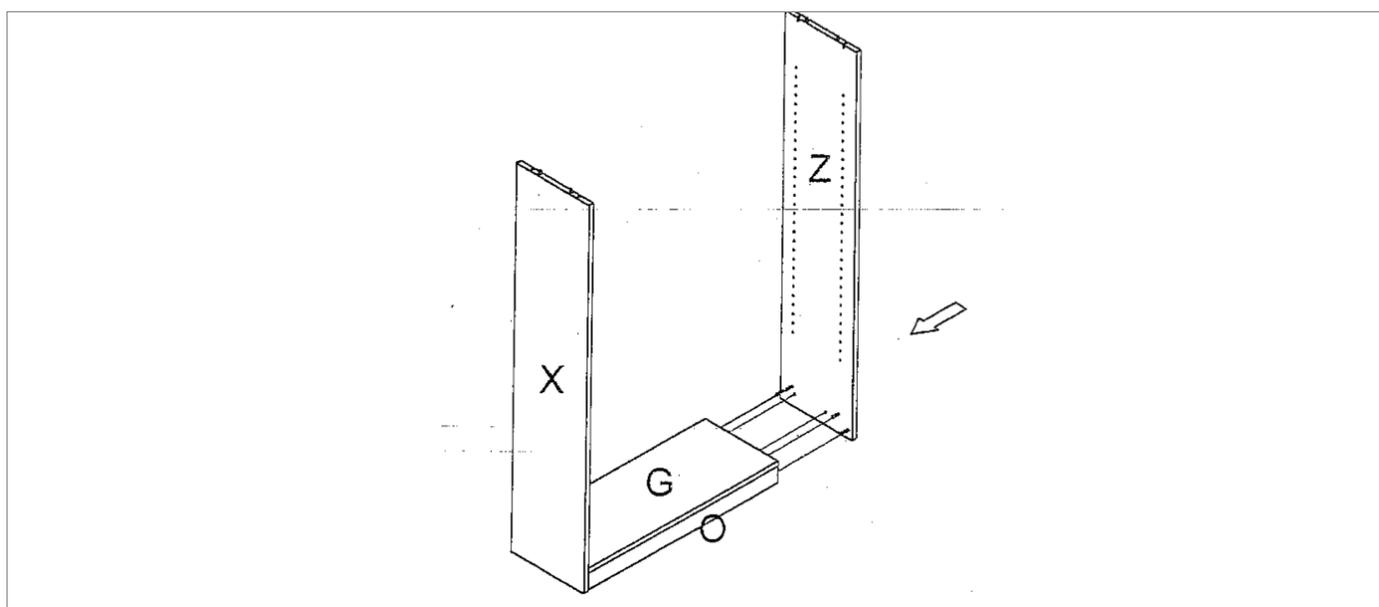


Step 4

Insert cam bolts (c1) on panel A into cams on panel X, Z, G & O, then fully tighten. Cover the cam cover (c2) on the top of cams.

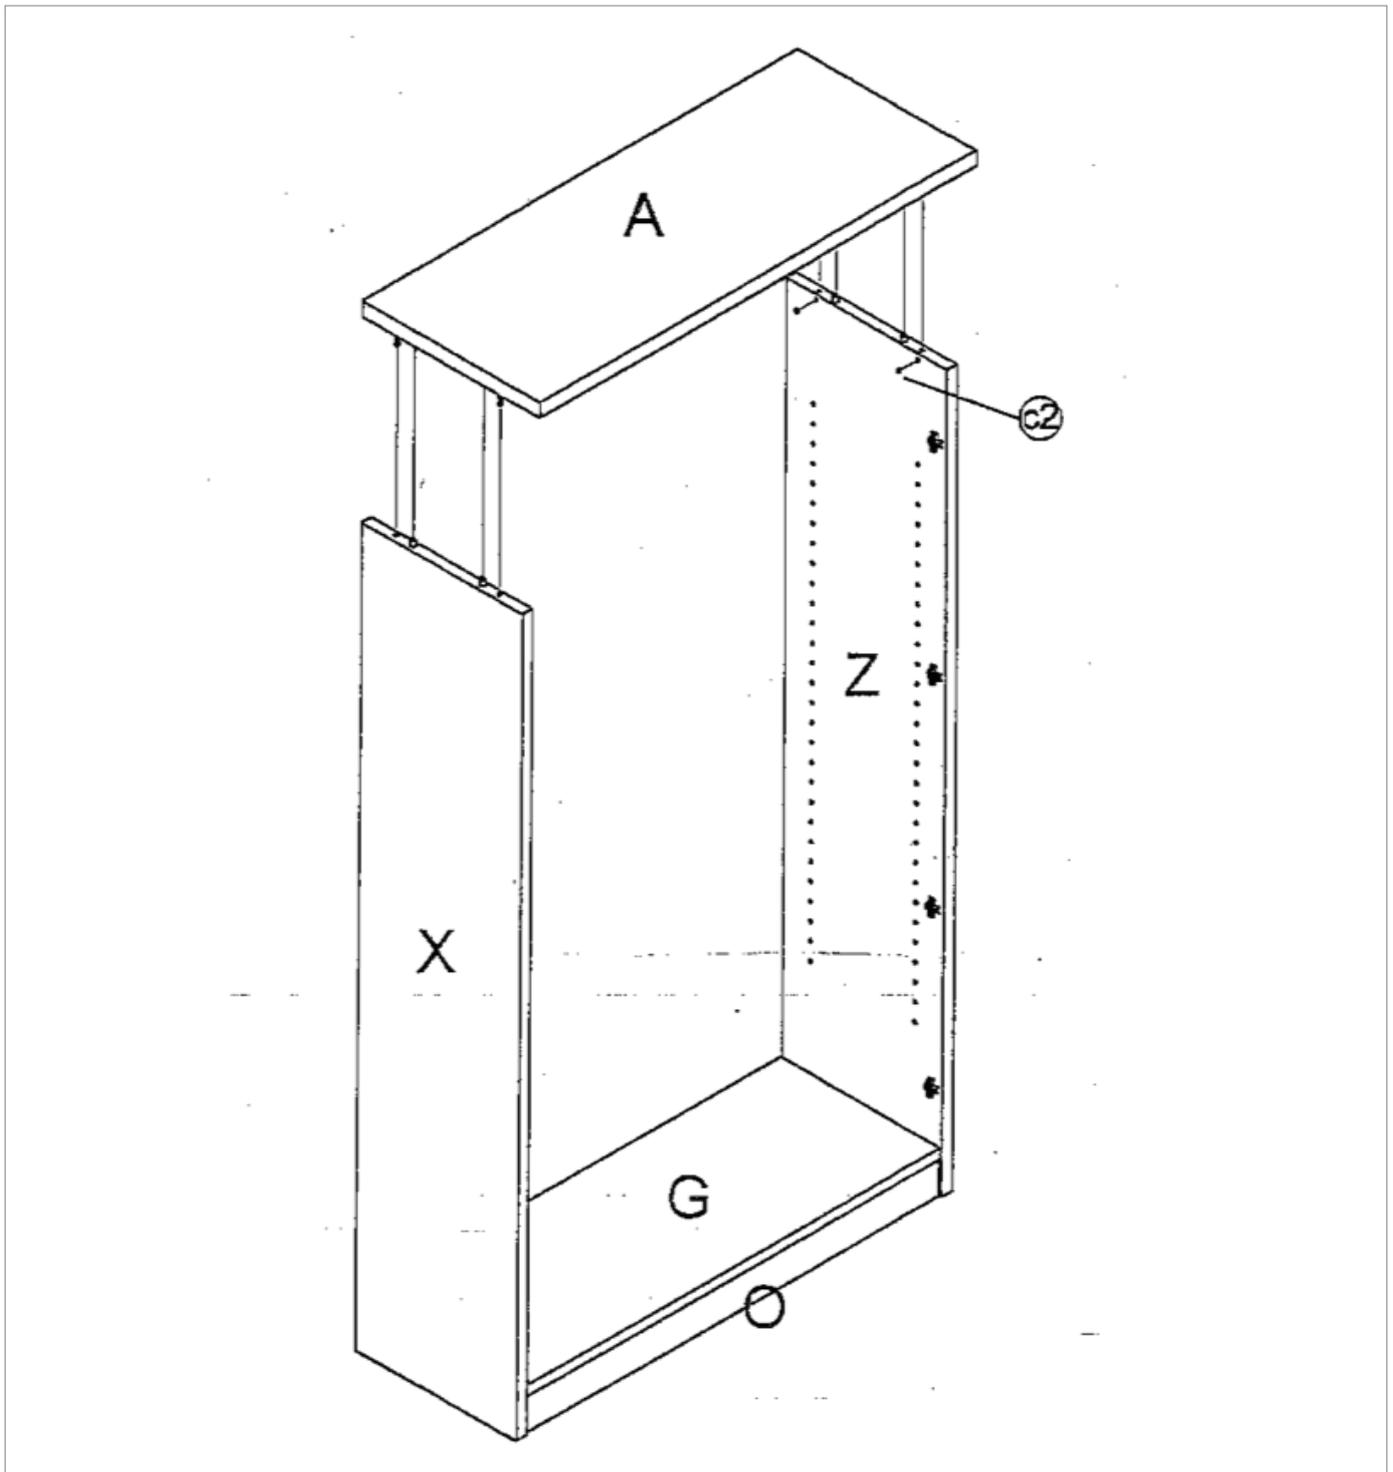


Step 5

Connect back panel D and panel X, Z, G, A with screw (s1).

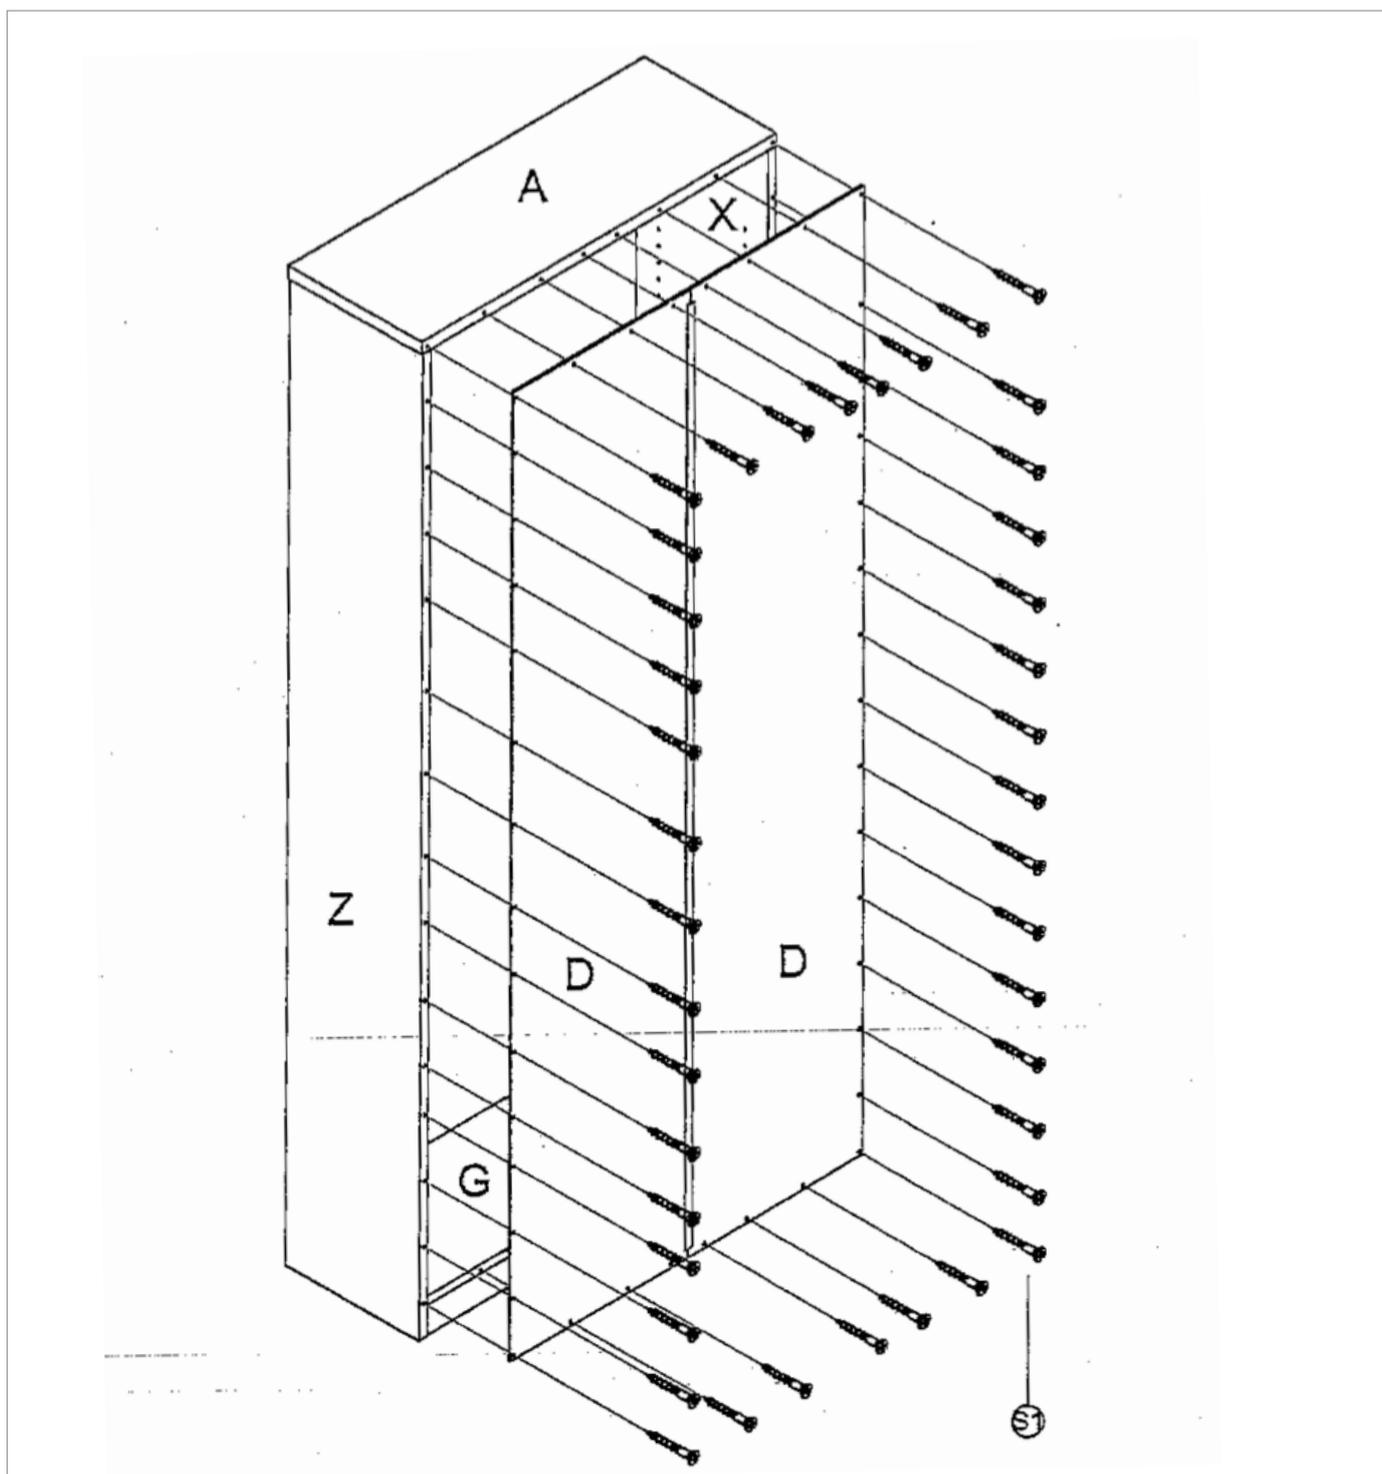

Step 6

Insert threaded dowel pins (p1) into panels X and Z as illustrated, then put panel E on the threaded dowel pins (p1).

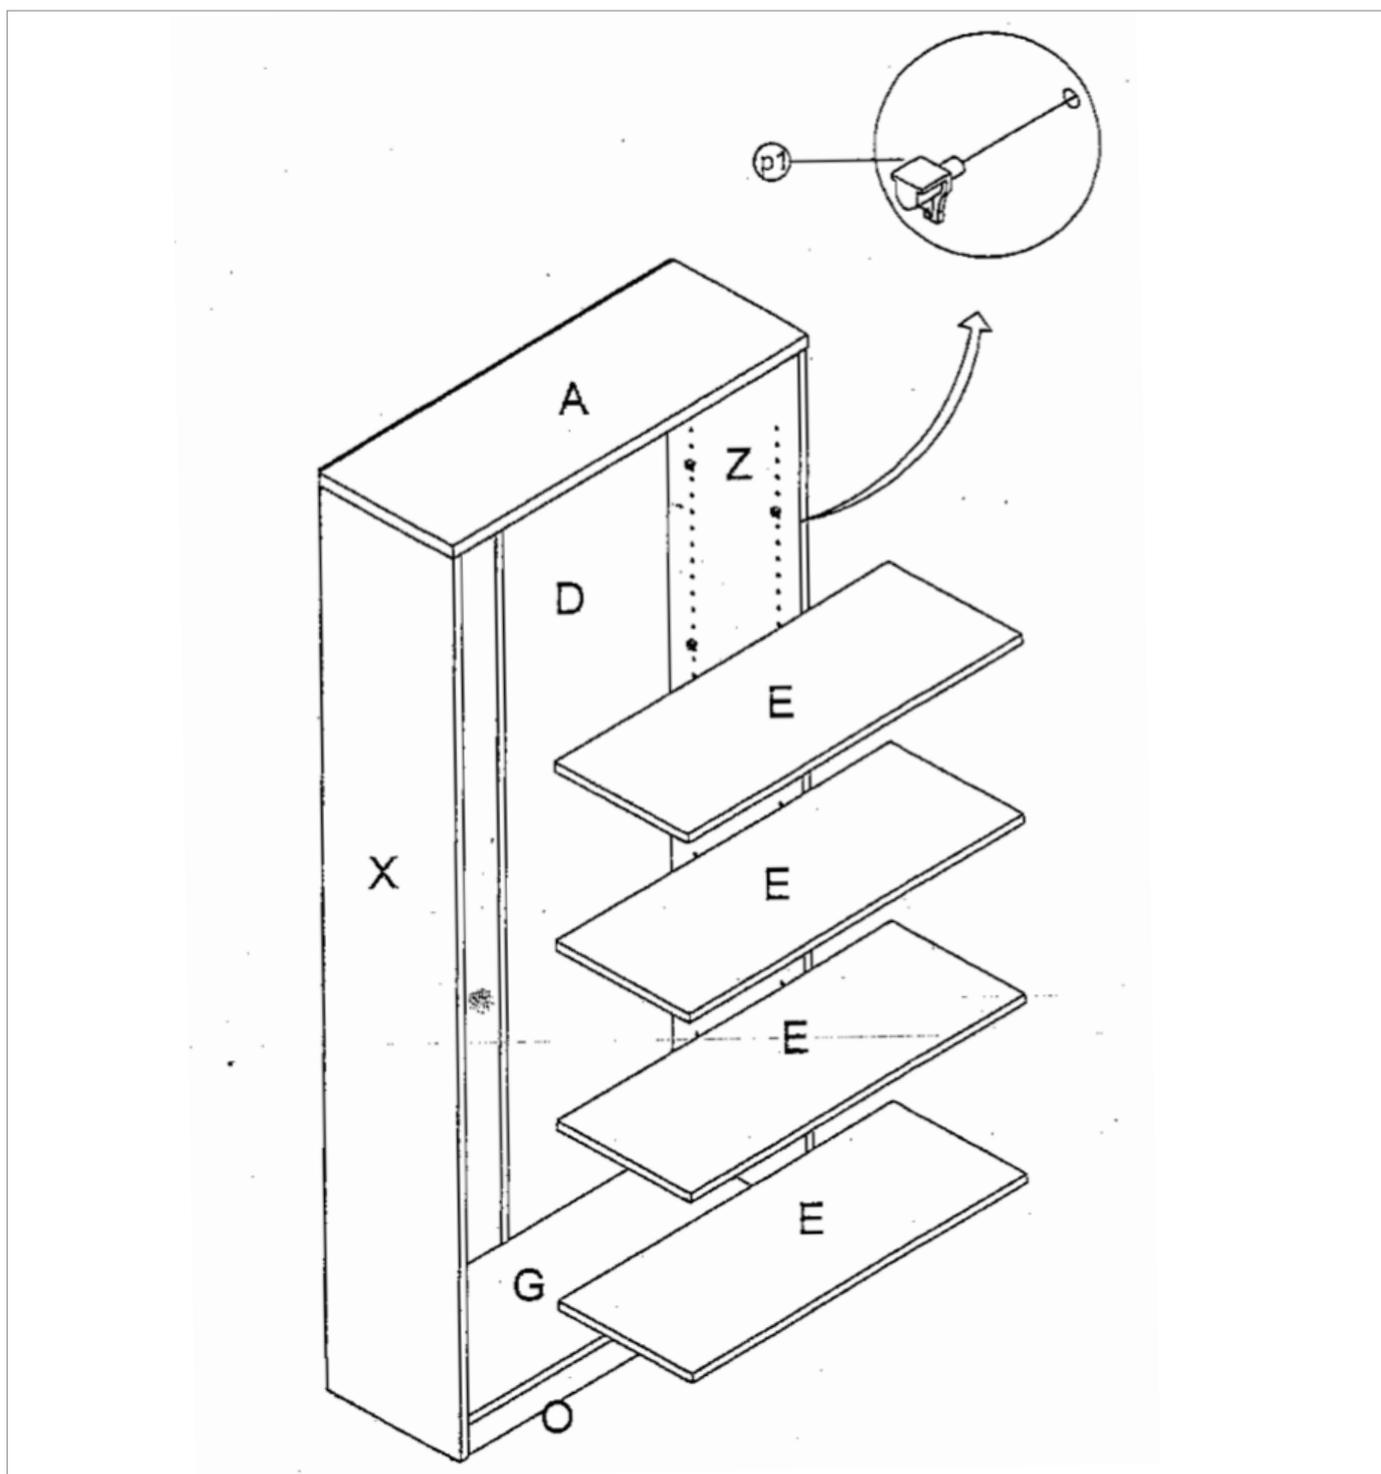

Complete

