

# Ergoplan Fixed Return

(Suits 1500/1800mm Desk)

## Assembly Instructions

**Tools Required:** Powered Screwdriver



# Ergoplan Fixed Return (Suits 1500/1800mm Desk)

## Assembly Instructions

---

Thank you for purchasing Knight product, please carefully read the assembly instructions prior to installment to gain a complete understanding of the product. It provides you with important information about the safety, use, installation and maintenance.

**WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.**

### SAFETY

- The product must be used in a safe manner. Inappropriate use may cause damage to the product and/or cause bodily harm to the user or persons nearby.
- Don't locate furniture in direct sunlight or near air-conditioning inlet or heating radiator.
- Don't put high-temperature or frozen objects on furniture.
- Safely carry product to location of assembly.
- Retain this operation manual and pass it on to any future owner.

### SET UP AND INSTALLATION

- Assemble the product according to the assembly instructions.
- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.
- Place the product a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.

It is recommended that this product is assembled by 2 people.

**Any questions contact Knight on 0800 143 143**

Due to continuous improvement of our products, our assembly instructions may not be in complete accordance with the product and we apologise in advance.



# Ergoplan Fixed Return (Suits 1500/1800mm Desk)

## Assembly Instructions



### Parts

Item	Description	Quantity
A	Top Panel	1
X	End Panel	1
D	Modesty Panel	1

The turning direction  
of attaching



Incorrect Correct

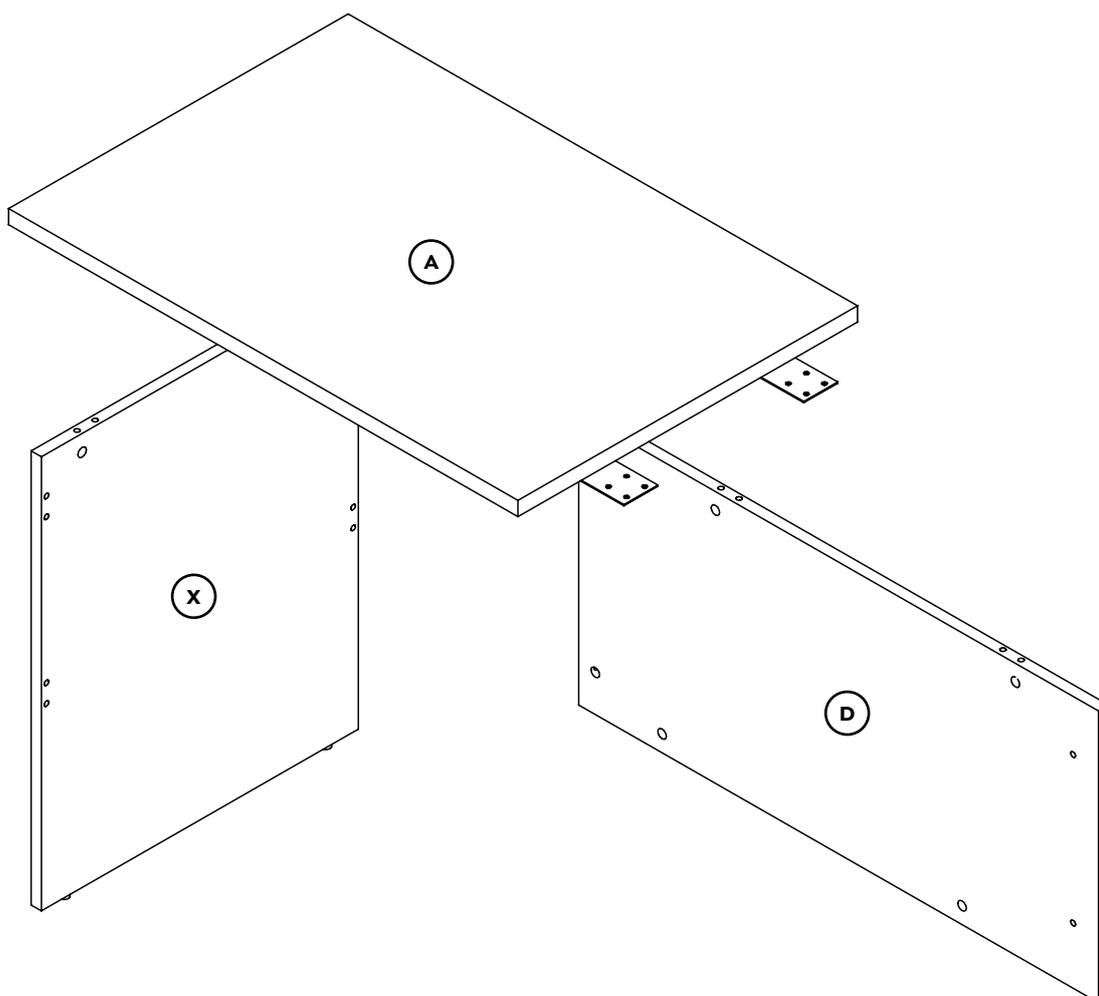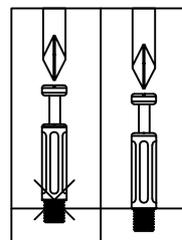

# Ergoplan Fixed Return (Suits 1500/1800mm Desk)

## Assembly Instructions

### Parts

Item	Description	Quantity
<b>c1</b>	6x35 Cam Bolt	6
<b>d1</b>	8x30 Dowel Pin	6
<b>c2</b>	Cam Sticker	6
<b>b1</b>	Bracket	2
<b>c3</b>	Connector Plate	2
<b>s1</b>	3.5x15 Screw	8
<b>s5</b>	6x12 Screw	16
<b>s10</b>	6x28 Screw	2



 
**c1** 6x35 Cam Bolt




**d1** 8x30 Dowel Pin



**c2** Cam Sticker



**b1** Bracket

 

**c3** Connector Plate



**s1** 3.5x15 Screw



**s5** 6x12 Screw



**s10** 6x25 Screw




Cam  
(pre-installed)

## Step 1

### Preparation for top panel A, end panel X and modesty panel D for right hand return.


1. Insert cam bolts (c1) and dowel pins (d1) into panels A and X.
2. Fix connectors (c3) to panel A using screws (s5).
3. Insert dowel pins (d1) into panels X and D.

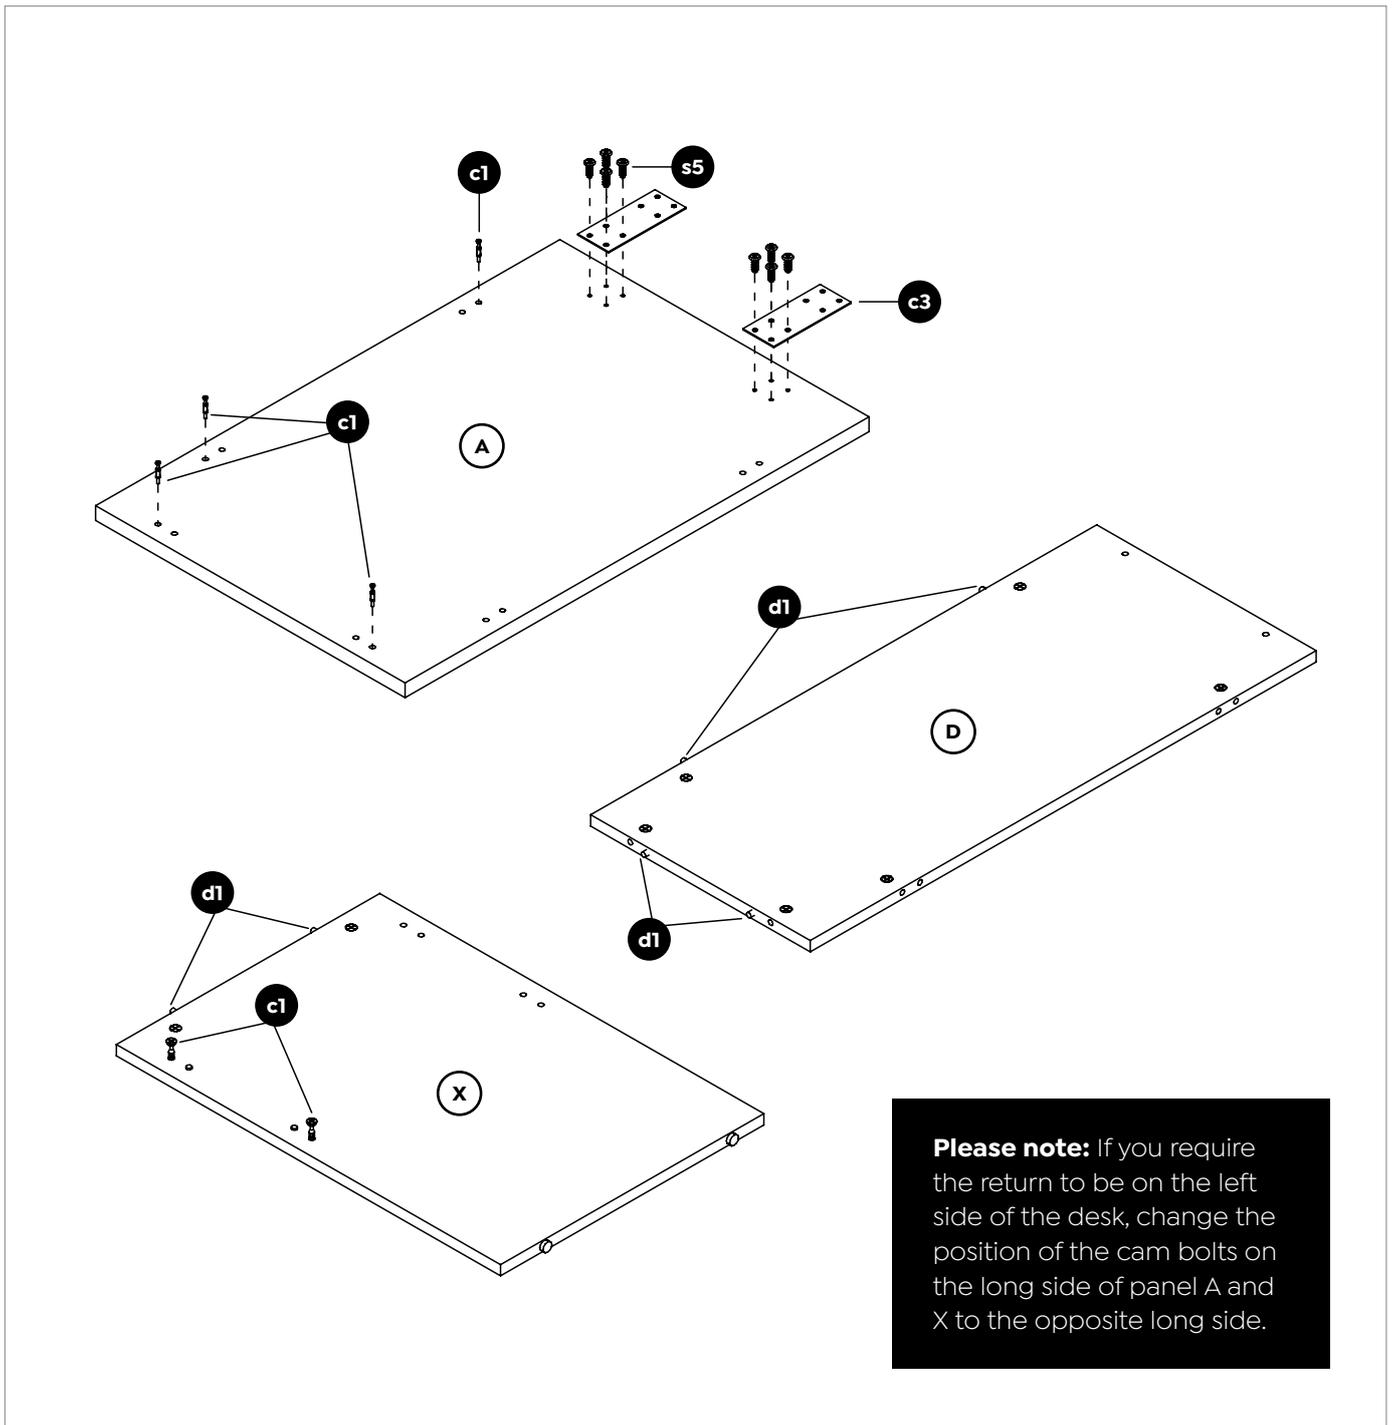

## Step 2

### End panel X and modesty panel D assembly for right hand return.


Insert cam bolts (c) on panel X into cams on panel D and tighten in a clockwise direction.

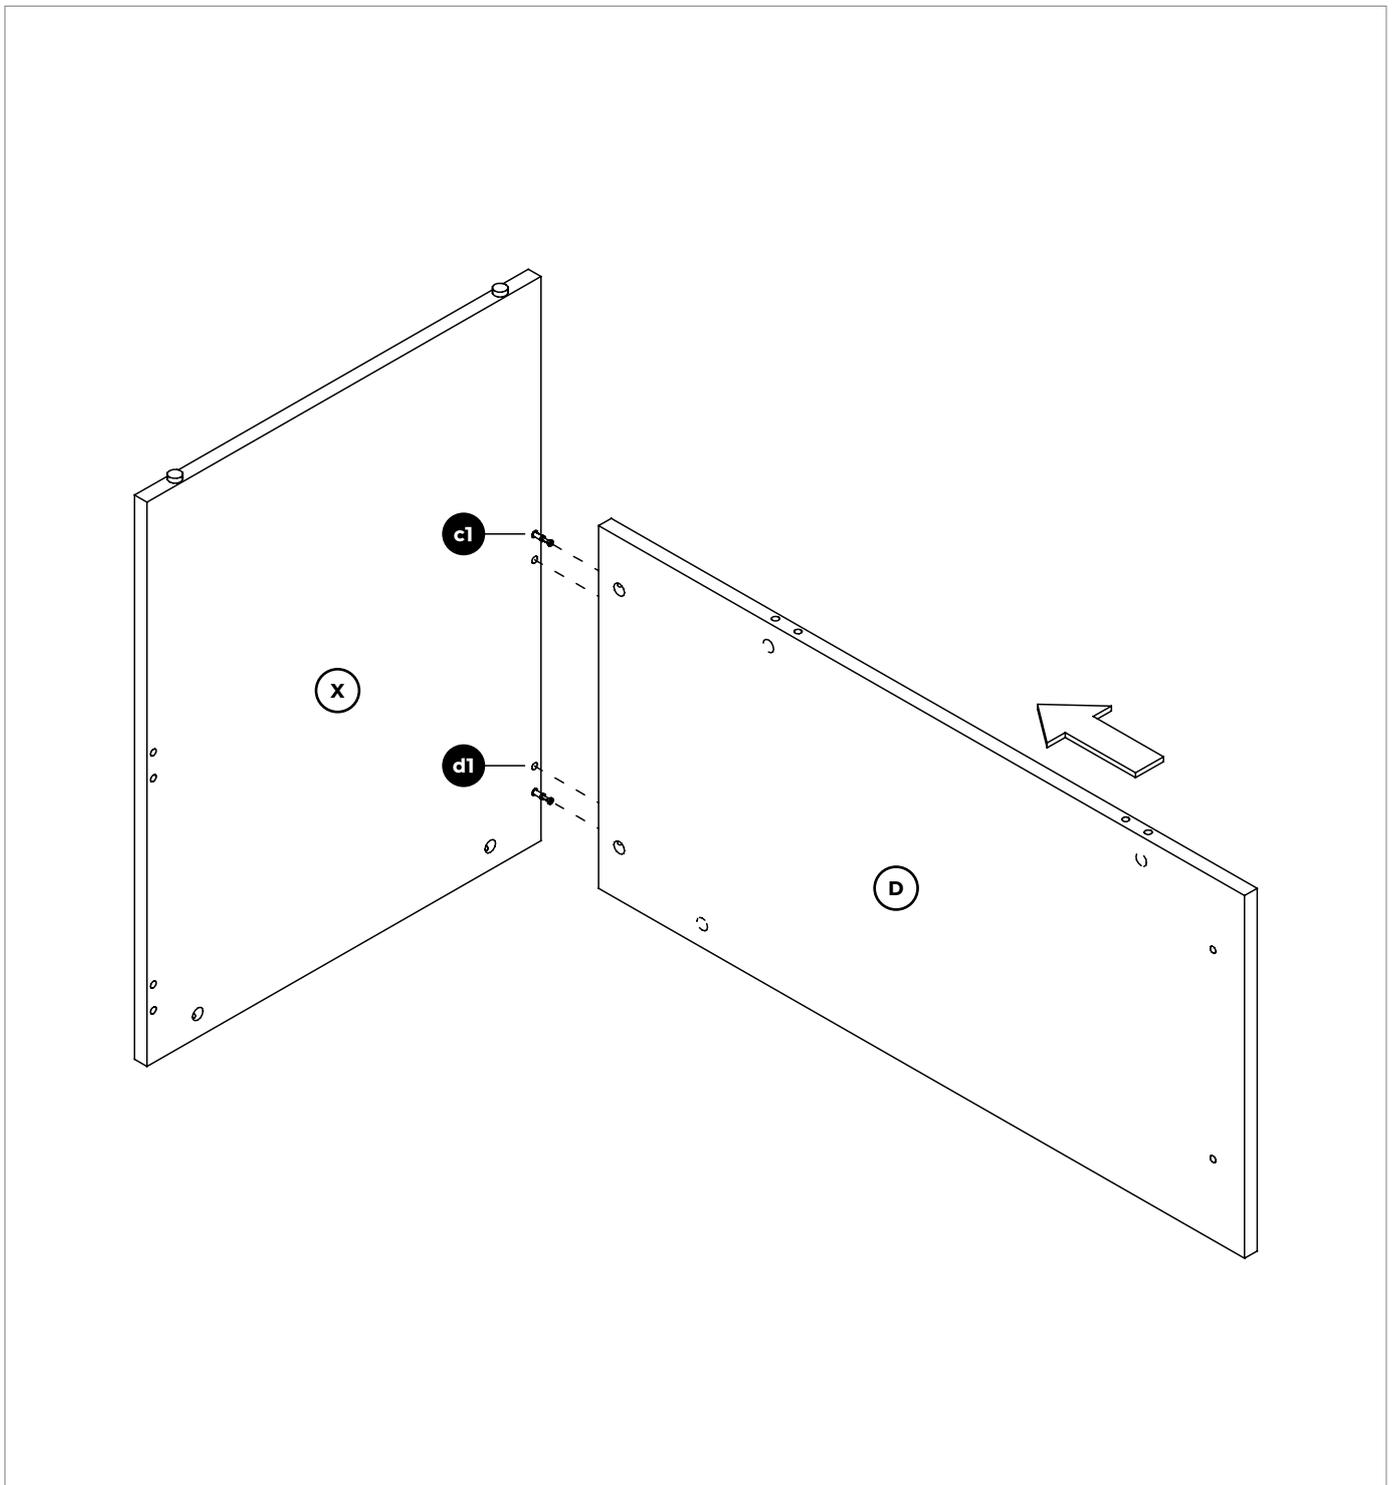

## Step 3

### Top panel A assembly for right hand return.

1. Insert cam bolts (c1) on panel A into cams on panel X and D and tighten in a clockwise direction.
2. Cover top of cams with cam stickers (c2).
3. Secure panels X and D with brackets (b1) using screws (s1).
4. Turn return over to upright position and attach to 1500 or 1800mm Ergoplan desk with connector plates (c3).

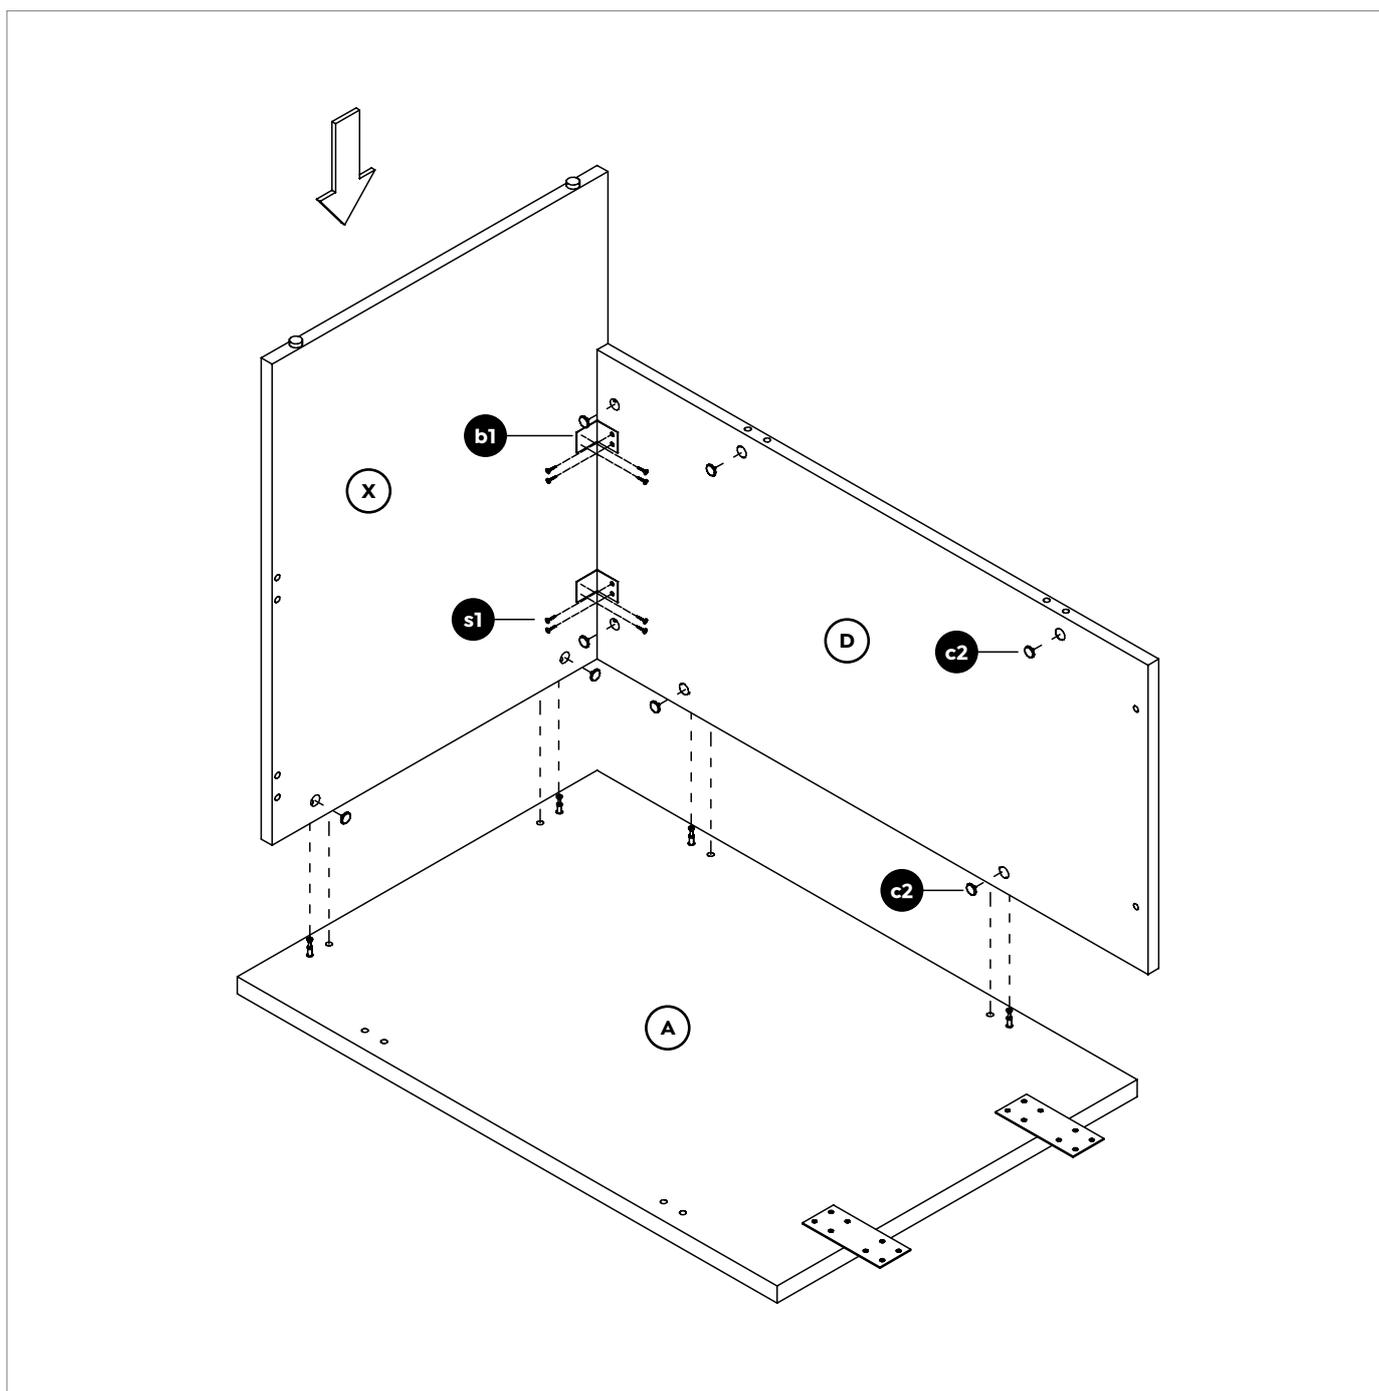

**Complete**

---

