

Ergoplan Hutch

Assembly Instructions

Tools Required: Powered Screwdriver



Thank you for purchasing Knight product, please carefully read the assembly instructions prior to installment to gain a complete understanding of the product. It provides you with important information about the safety, use, installation and maintenance.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The product must be used in a safe manner. Inappropriate use may cause damage to the product and/or cause bodily harm to the user or persons nearby.
- Don't locate furniture in direct sunlight or near air-conditioning inlet or heating radiator.
- Don't put high-temperature or frozen objects on furniture.
- Safely carry product to location of assembly.
- Retain this operation manual and pass it on to any future owner.

SET UP AND INSTALLATION

- Assemble the product according to the assembly instructions.
- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.
- Place the product a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.

It is recommended that this product is assembled by 2 people.

Any questions contact Knight on 0800 143 143

Due to continuous improvement of our products, our assembly instructions may not be in complete accordance with the product and we apologise in advance.



Ergoplan Hutch

Assembly Instructions



Parts

Item	Description	Quantity
A	Top Panel	1
X	Left Side Panel	1
Z	Right Side Panel	1
D	Back Panel	1
Y	Centre Panel	1
E	Movable Shelf	4

The turning direction
of attaching



Incorrect Correct

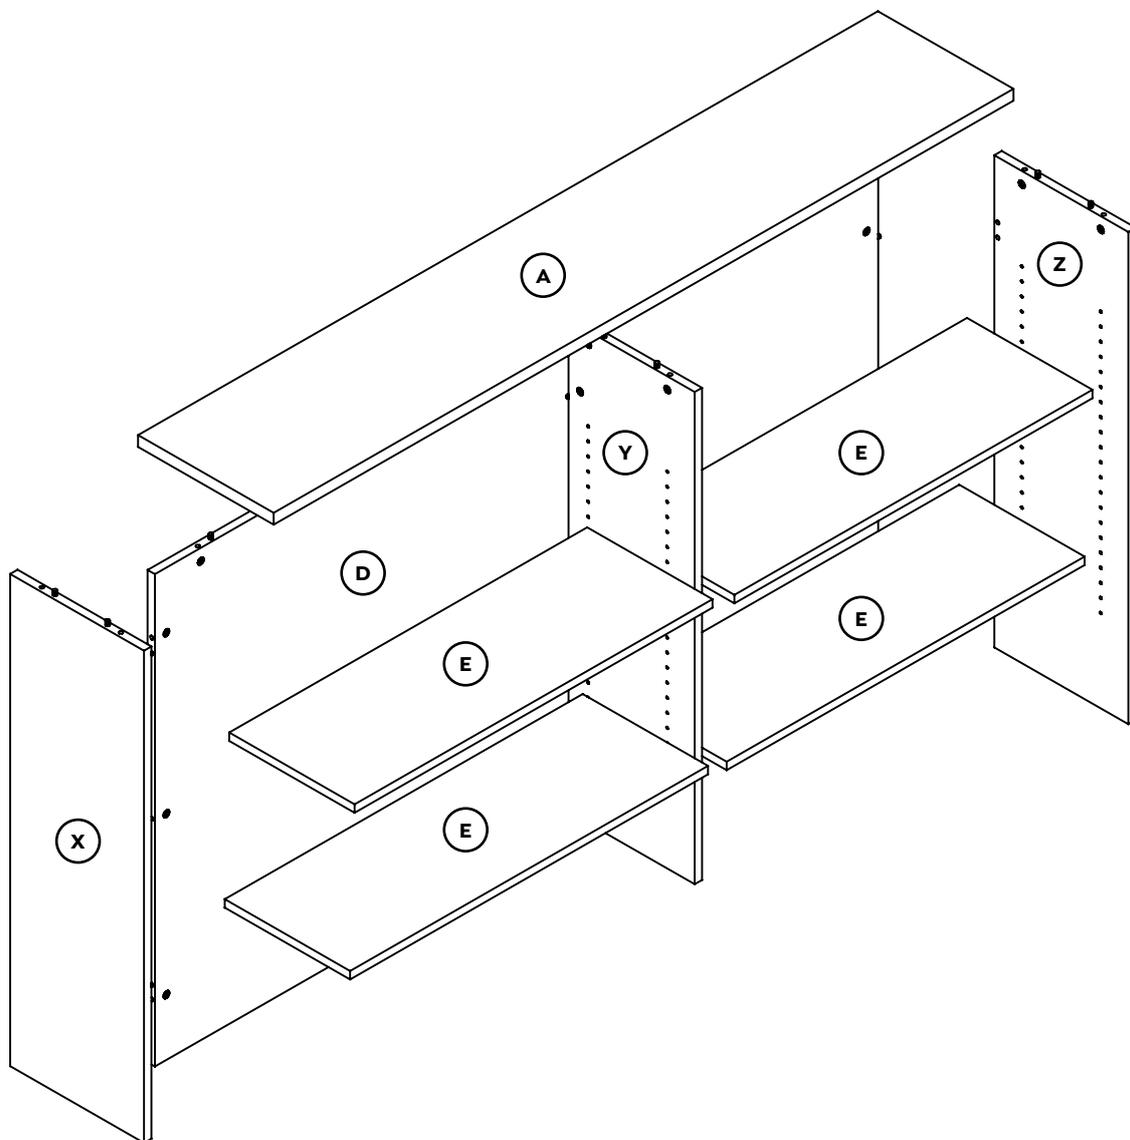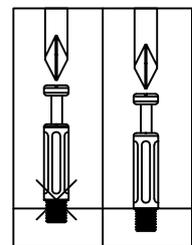

Ergoplan Hutch

Assembly Instructions

Parts

Item	Description	Quantity
c1	6x35 Cam Bolt	19
d1	8x30 Dowel Pin	16
c2	Cam Sticker	19
p1	Shelf Pin	16



c1 6x35 Cam Bolt



d1 8x30 Dowel Pin



c2 Cam Sticker



p1 Shelf Pin




Cam
(pre-installed)

Step 1

Preparation for back panel D and middle panel Y.


1. Insert cam bolts (c1) into panel D.
2. Insert dowel pins (d1) into panel D and Y.

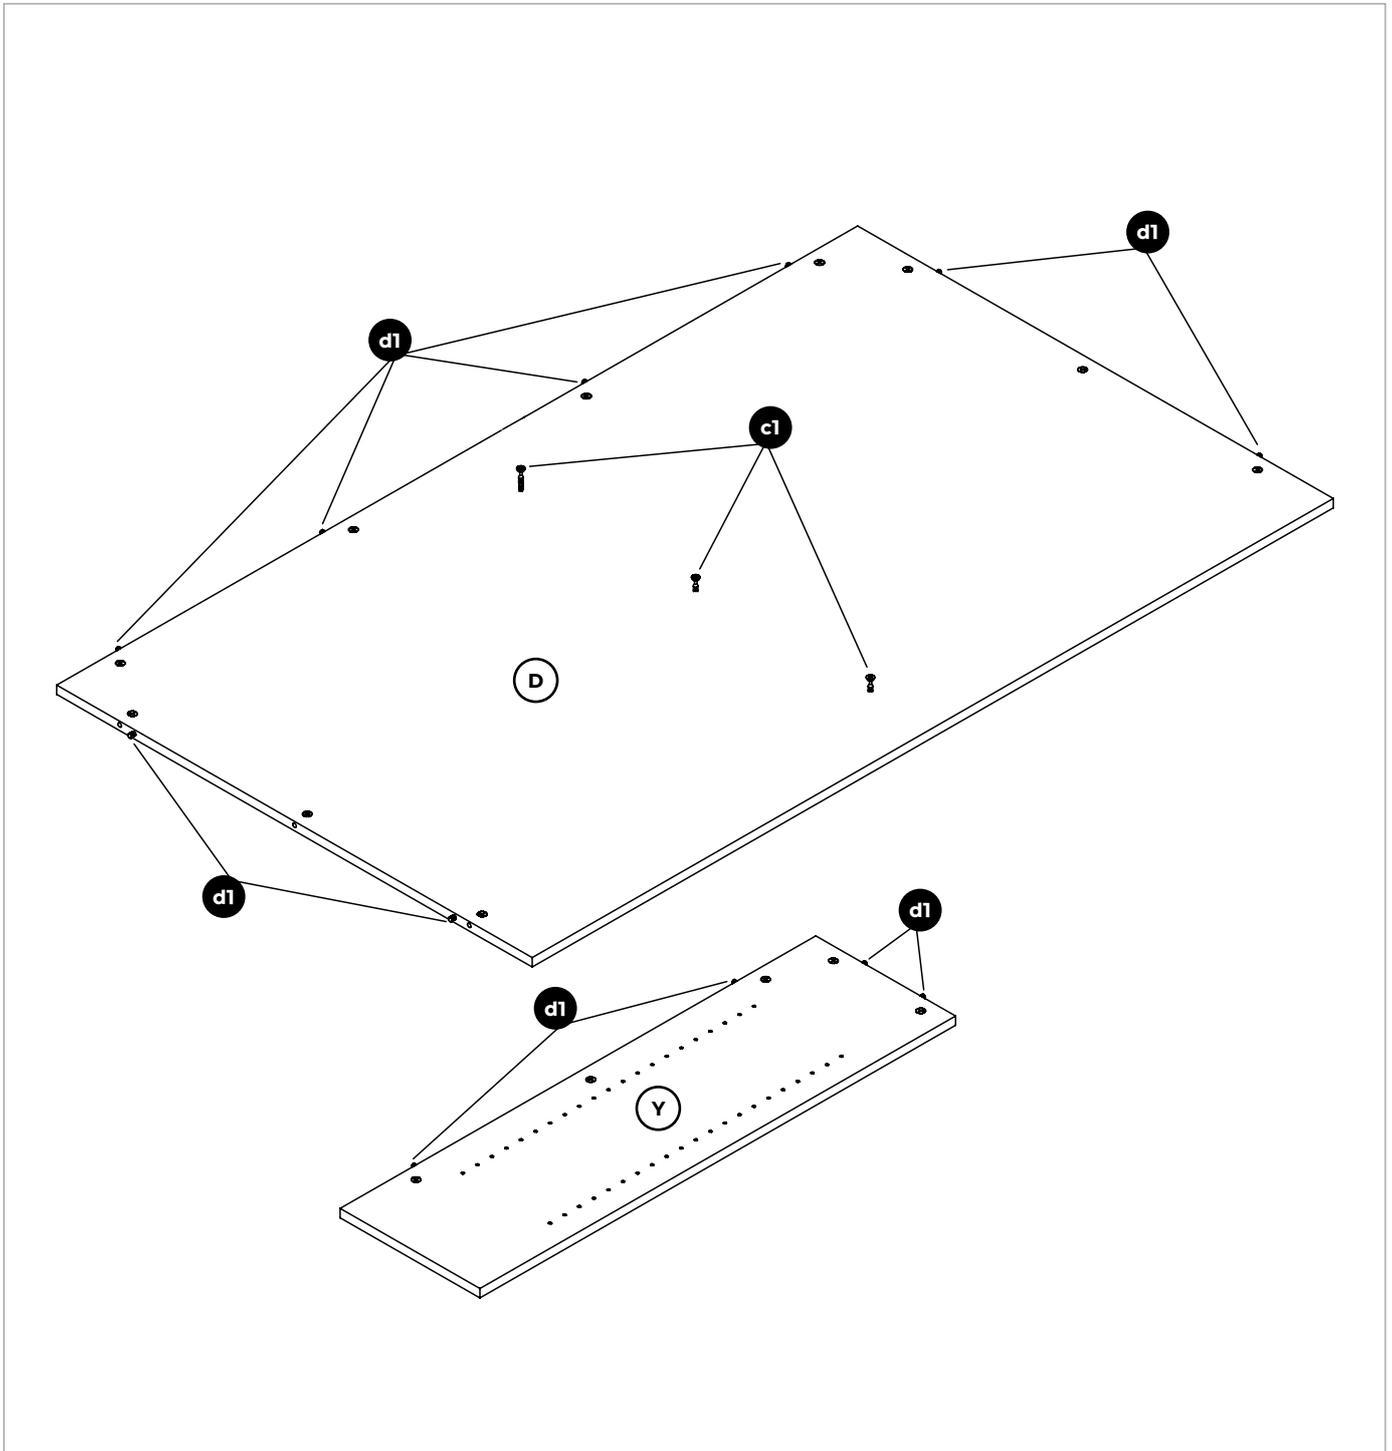

Step 2

Preparation for left side panel X, right side panel Z and top panel A.


1. Insert cam bolts (c1) into panel X, Z and A.
2. Insert dowel pins (d1) into panel X and Z.

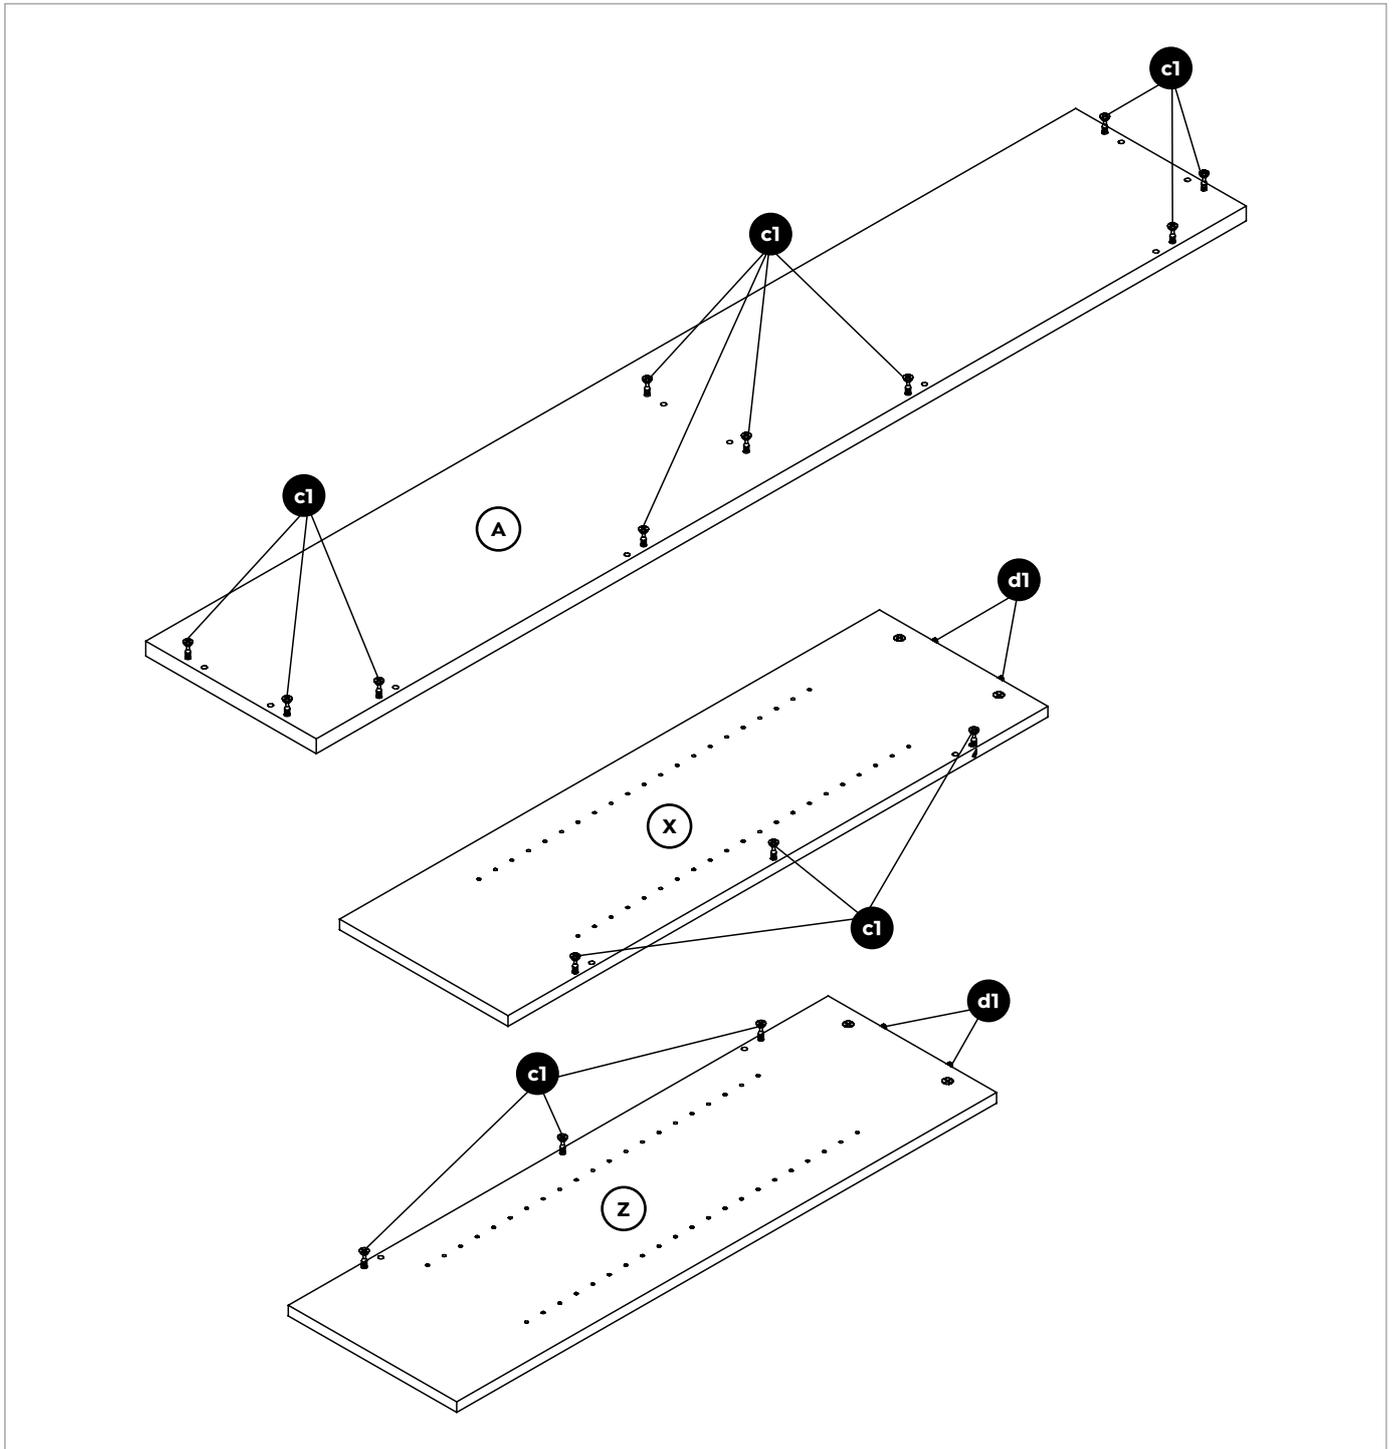

Step 3

Middle panel Y and back panel D assembly.


Insert cam bolts (c) on panel D into cams on panel Y and tighten in a clockwise direction.

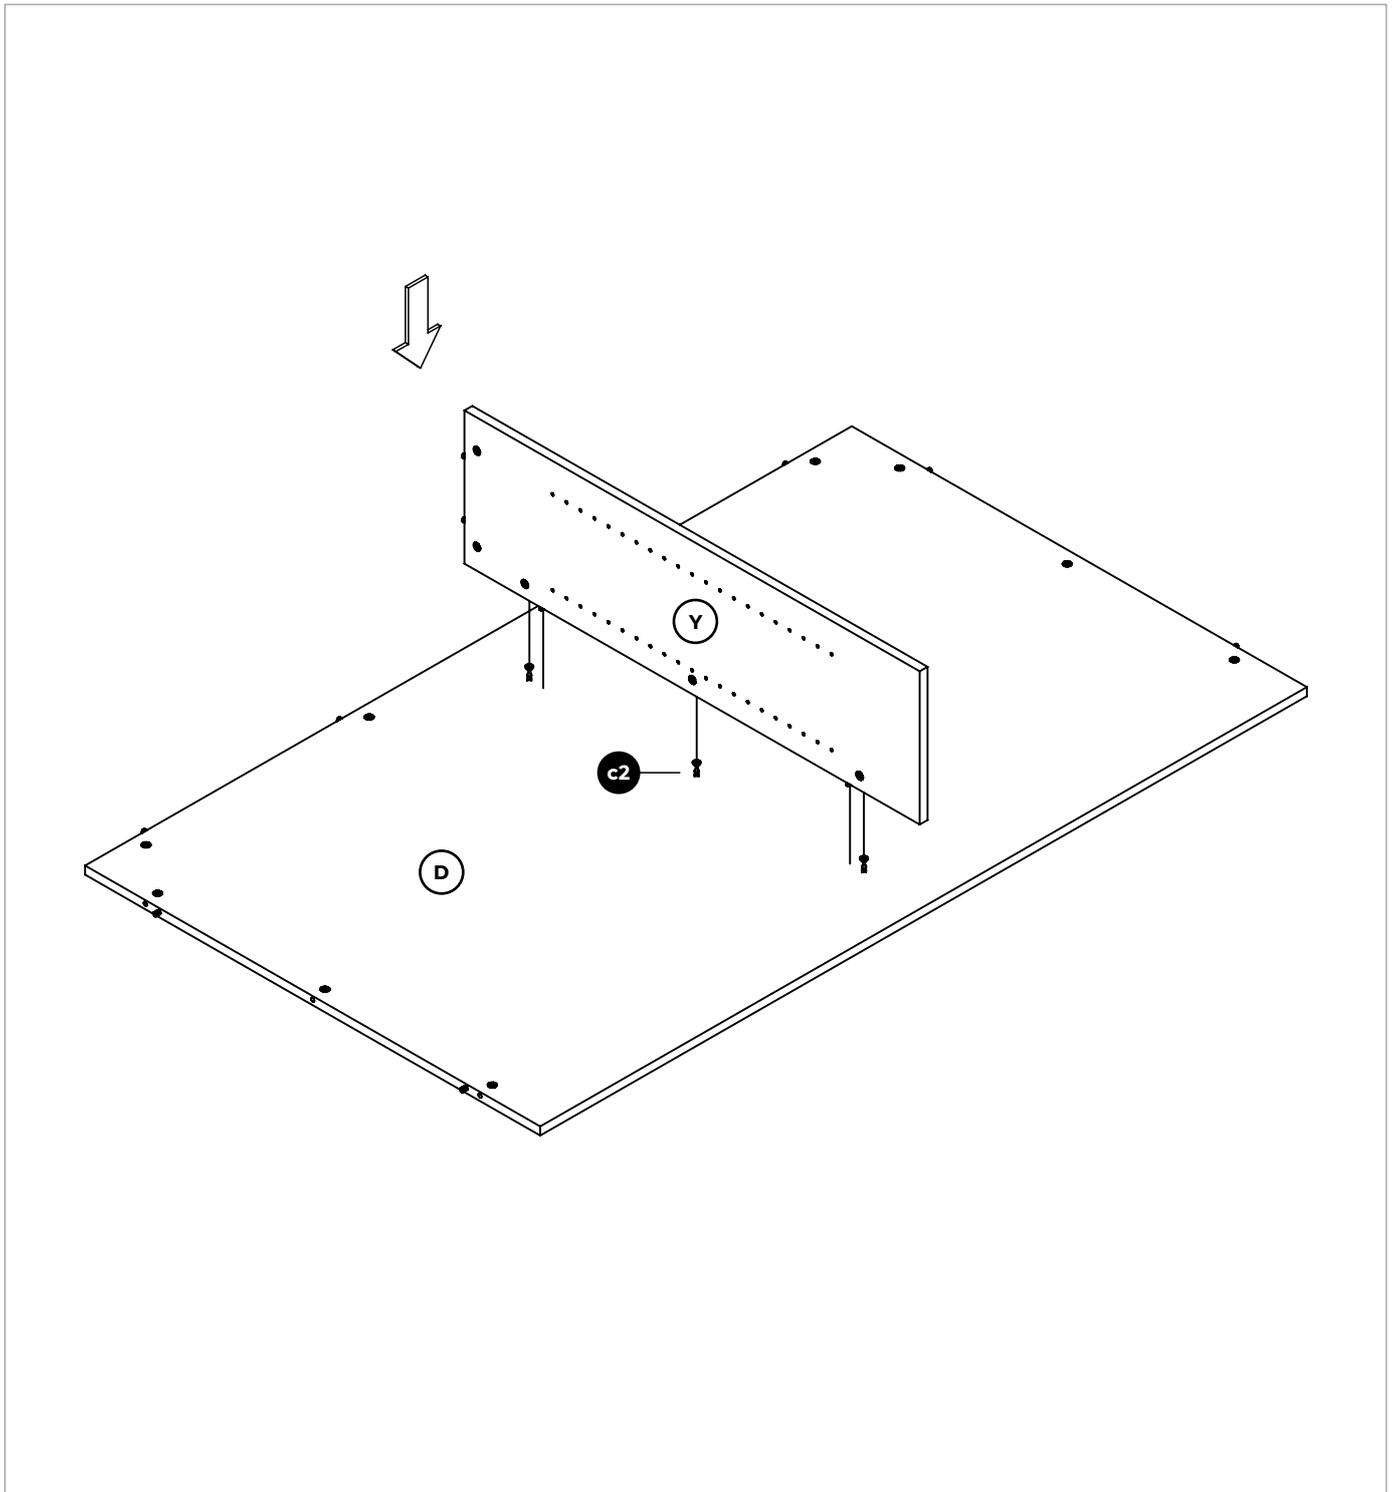

Step 4

Left side panel X and right side panel Z assembly.


Insert cam bolts (c1) on panel X and Z into cams on panel D and tighten in a clockwise direction.

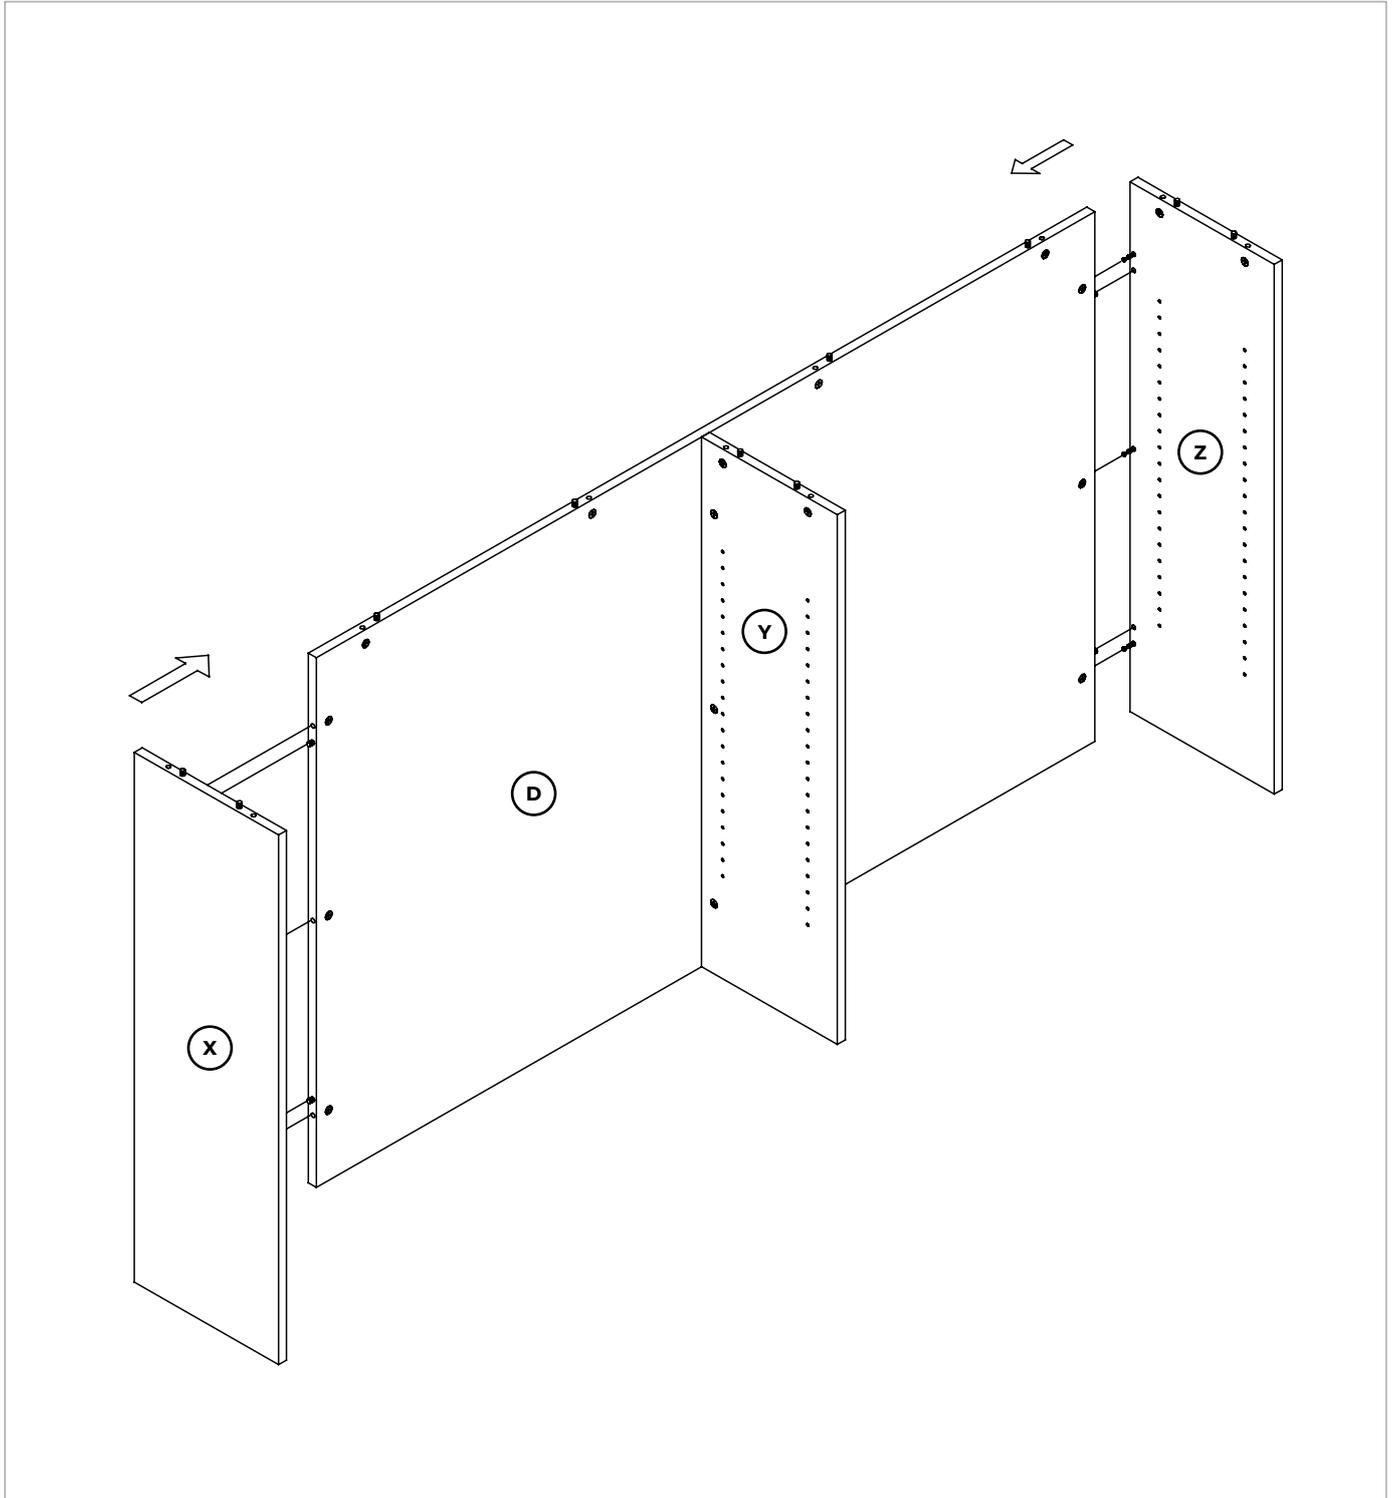

Step 5

Top panel A assembly.


1. Insert cam bolts (c1) on panel A into cams on panel D, X, Y and Z and tighten in a clockwise direction.
2. Cover top of cams with cam stickers (c2).

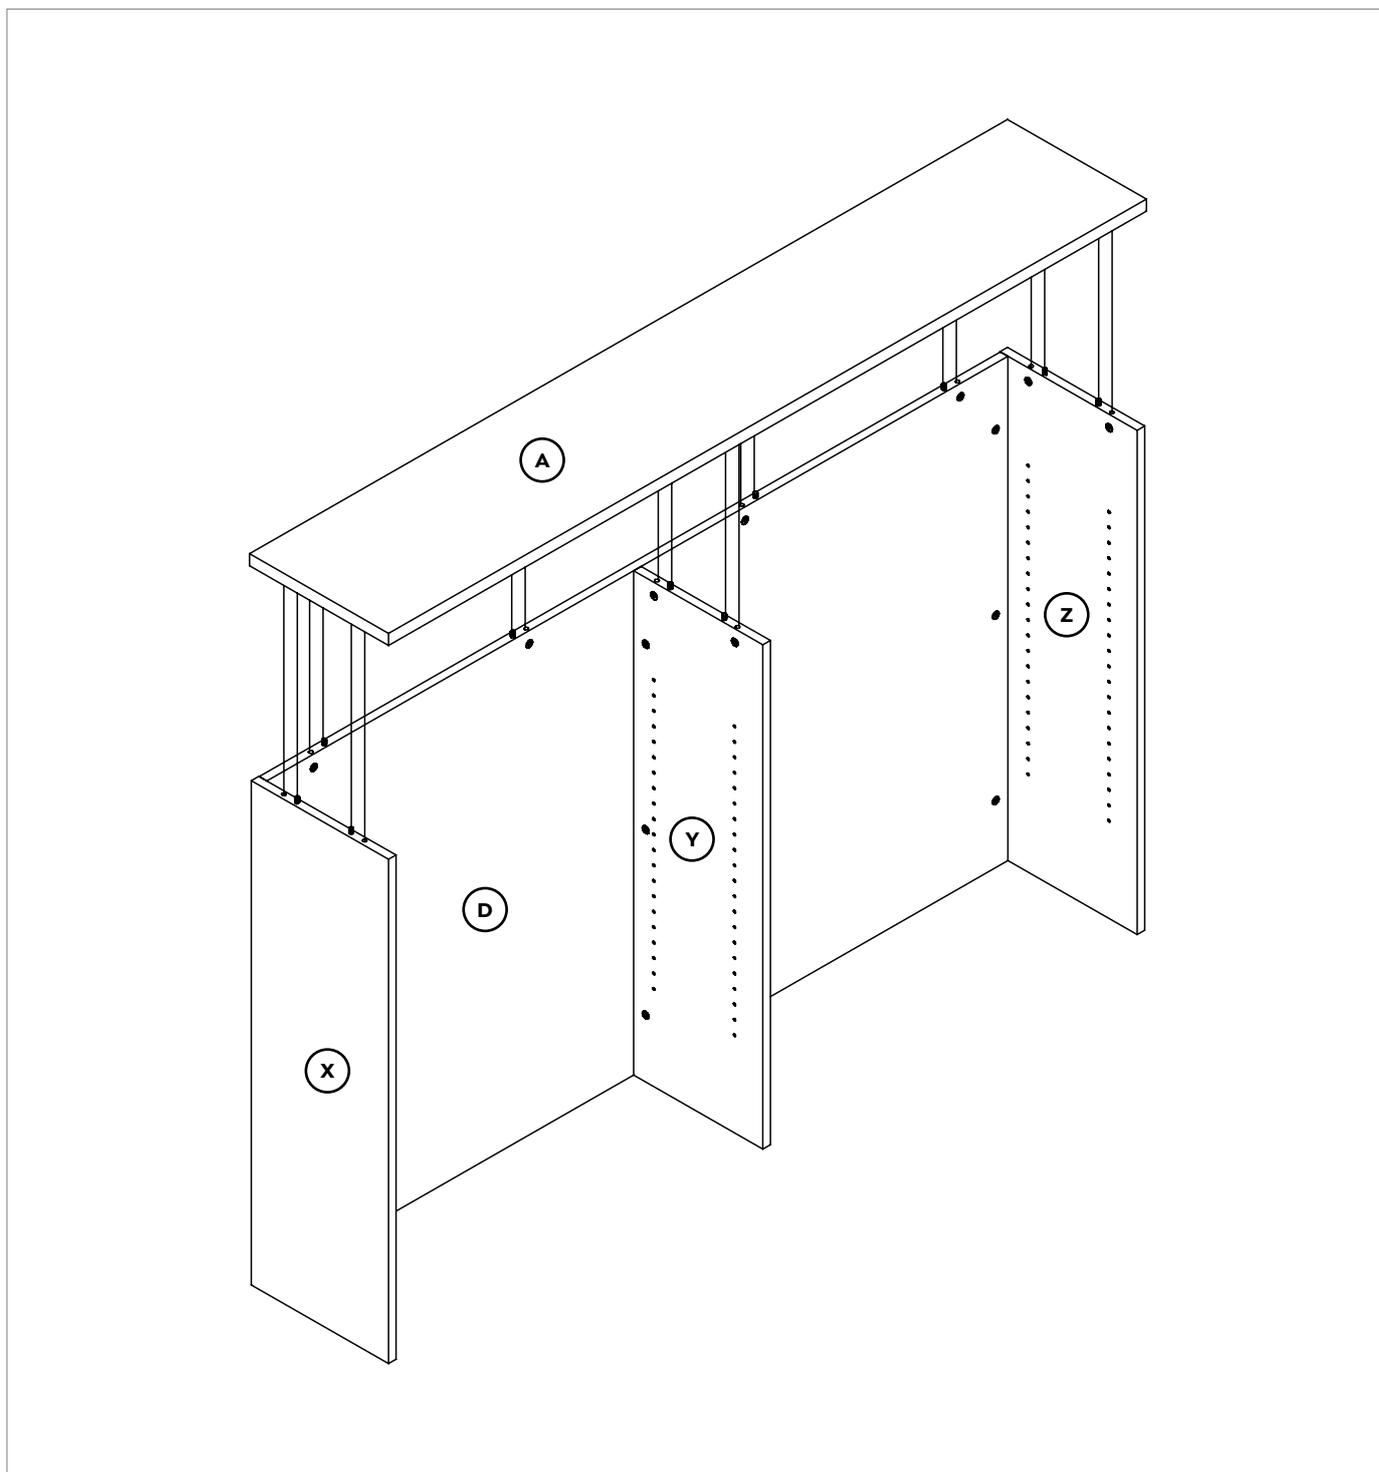

Step 6

Moveable shelf E assembly.

1. Insert shelf pins (p1) into panels X, Y and Z at desired shelf height.
2. Place the four panels E on the top of the shelf pins (p1).

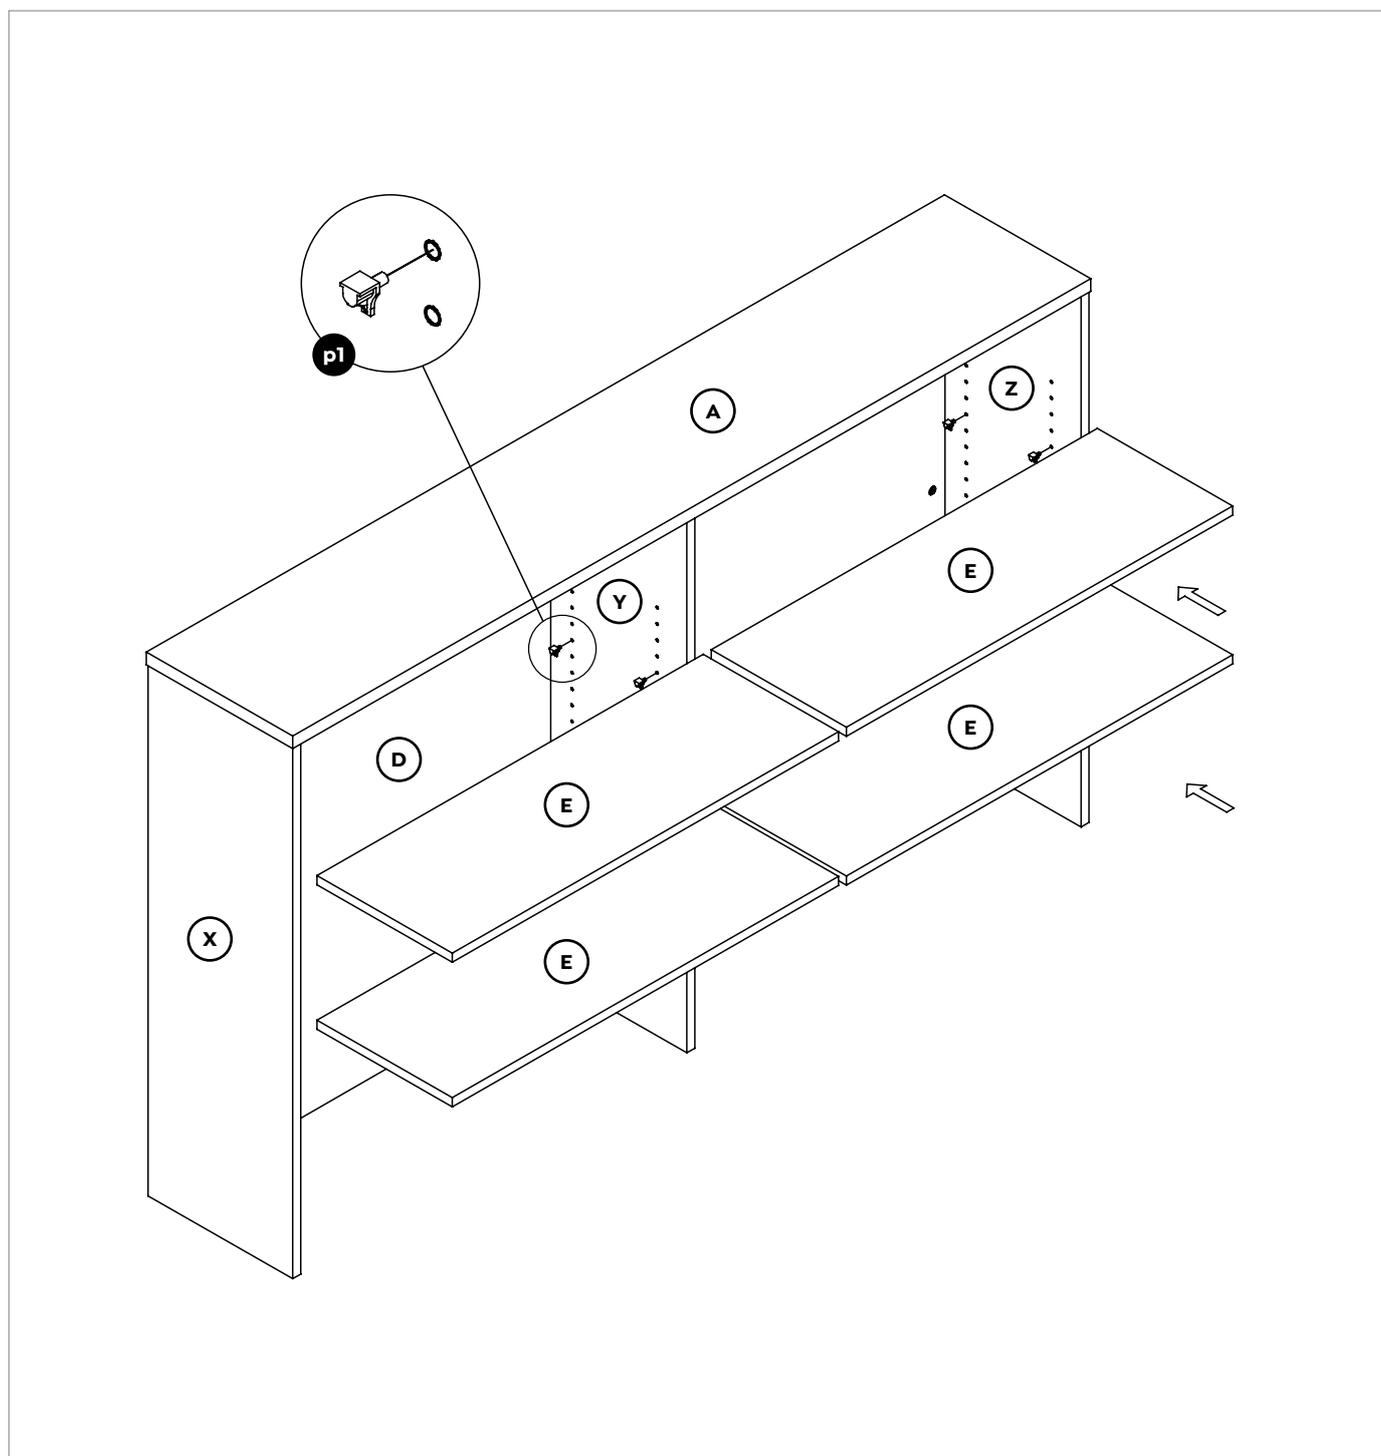

Complete

