

Ergoplan Bookcase 1200H

Assembly Instructions

Tools Required: Powered Screwdriver



Ergoplan Bookcase 1200H

Assembly Instructions

Thank you for purchasing Knight product, please carefully read the assembly instructions prior to installment to gain a complete understanding of the product. It provides you with important information about the safety, use, installation and maintenance.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The product must be used in a safe manner. Inappropriate use may cause damage to the product and/or cause bodily harm to the user or persons nearby.
- Don't locate furniture in direct sunlight or near air-conditioning inlet or heating radiator.
- Don't put high-temperature or frozen objects on furniture.
- Safely carry product to location of assembly.
- Retain this operation manual and pass it on to any future owner.


SET UP AND INSTALLATION

- Assemble the product according to the assembly instructions.
- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.
- Place the product a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.

It is recommended that this product is assembled by 2 people.

Any questions contact Knight on 0800 143 143

Due to continuous improvement of our products, our assembly instructions may not be in complete accordance with the product and we apologise in advance.

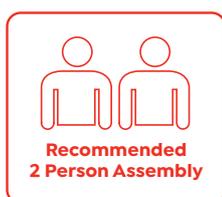

Ergoplan Bookcase 1200H

Assembly Instructions



Parts

Item	Description	Quantity
A	Top Panel	1
X	Left Side Panel	1
Z	Right Side Panel	1
D	Back Panel	1
G	Bottom Panel	1
E	Movable Shelf	2

The turning direction
of attaching



Incorrect Correct

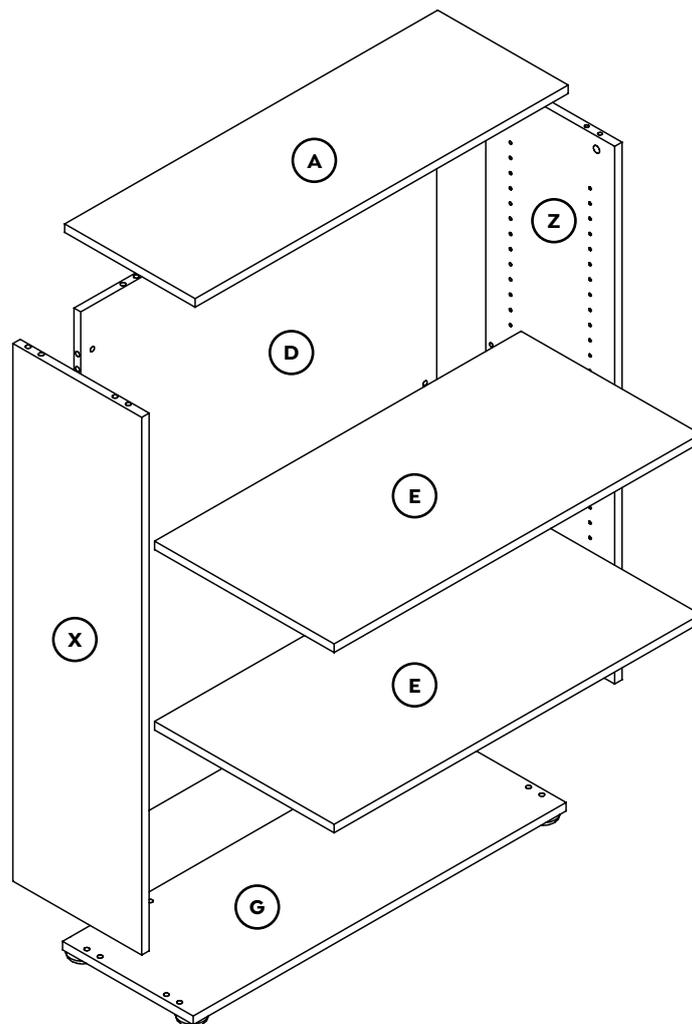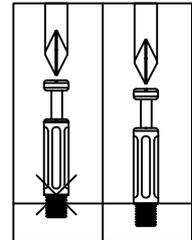

Ergoplan Bookcase 1200H

Assembly Instructions

Parts

Item	Description	Quantity
c1	6x35 Cam Bolt	18
d1	8x30 Dowel Pin	16
c2	Cam Sticker	18
p1	Shelf Pin	8
c6	Foot	4
s2	3,5x35 Screw	4



c1 6x35 Cam Bolt



 
d1 8x30 Dowel Pin



c2 Cam Sticker



p1 Shelf Pin



c6 Foot



s2 3,5x35 Screw




Cam
(pre-installed)

Step 1

Preparation for top panel A, bottom panel G, left side panel X and right side panel Z.


1. Insert cam bolts (c1) and dowel pins (d1) into panels A, G, X and Z.
2. Assemble feet (c6) with screws (s2) on underneath of bottom panel G.

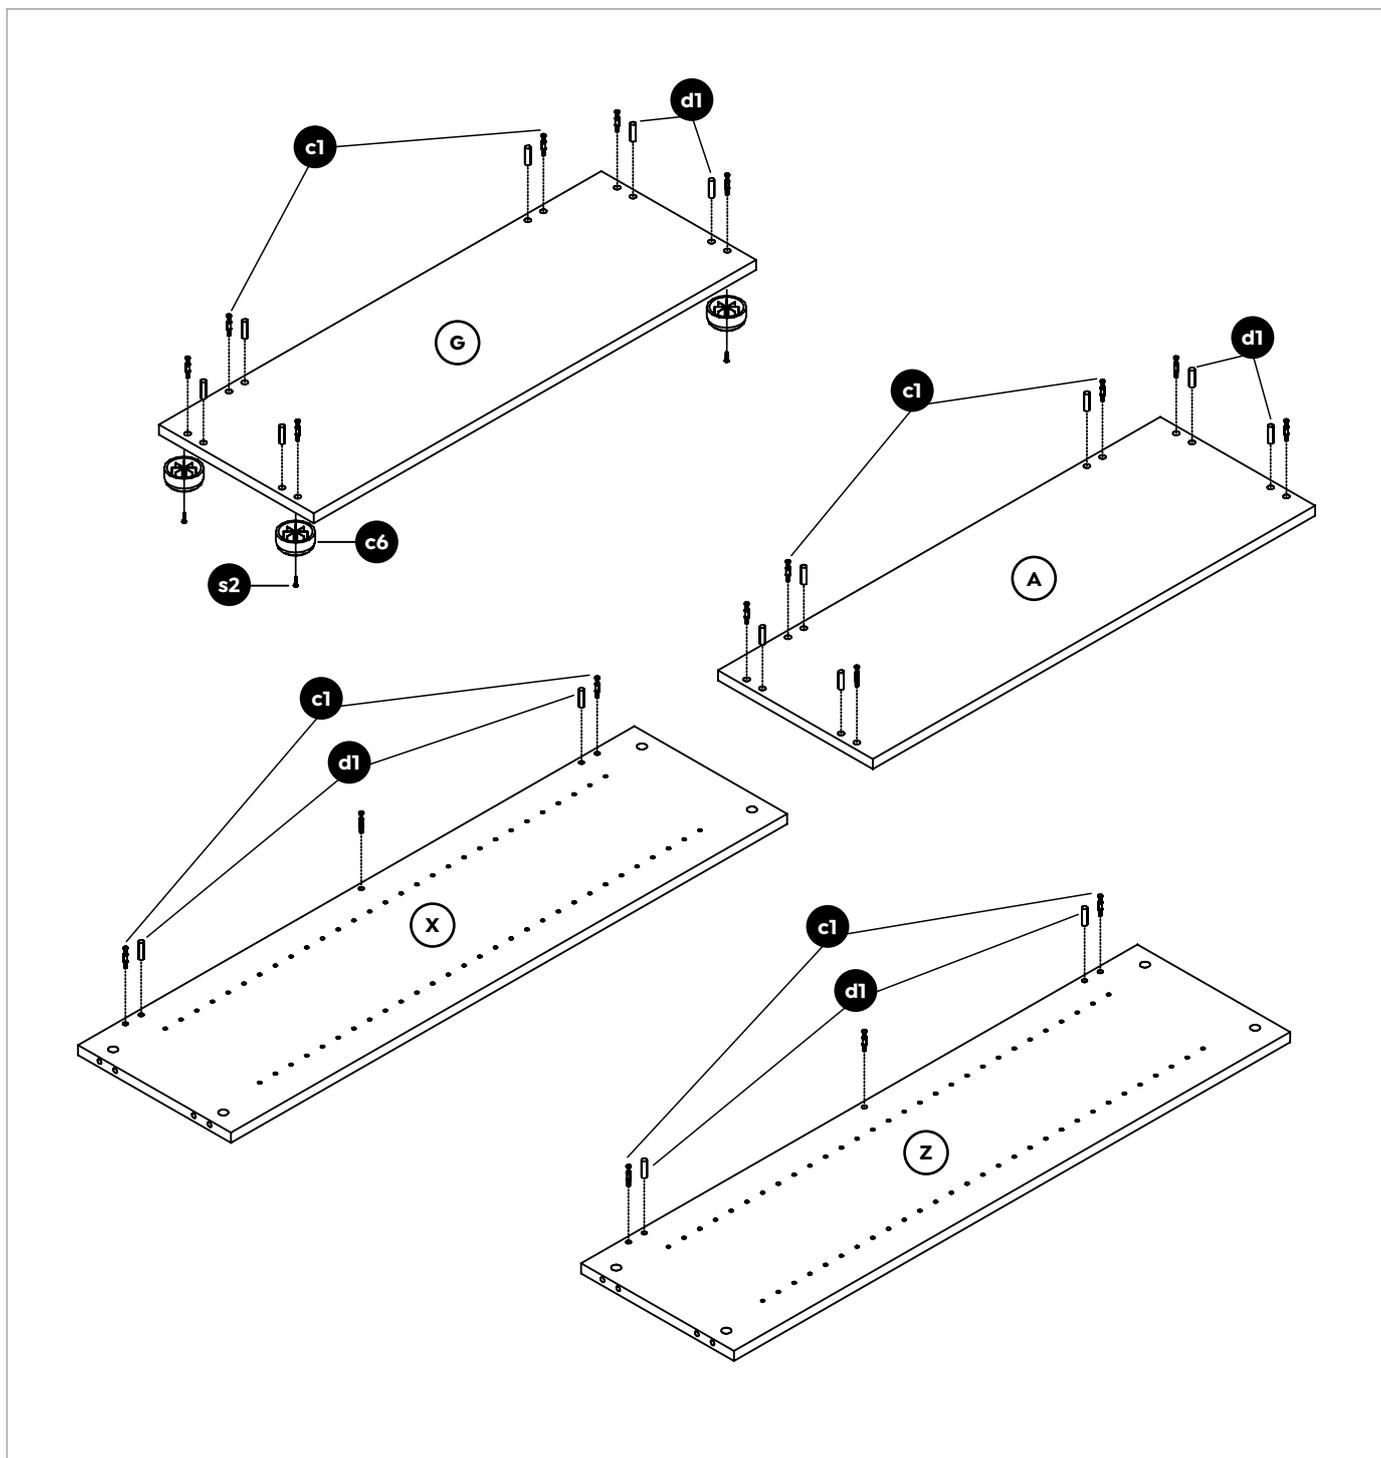

Step 2

Left side panel X, right side panel Z and back panel D assembly.


Insert cam bolts (c1) and dowel pins (d1) on panel X and Z into cams on panel D and tighten in a clockwise direction.

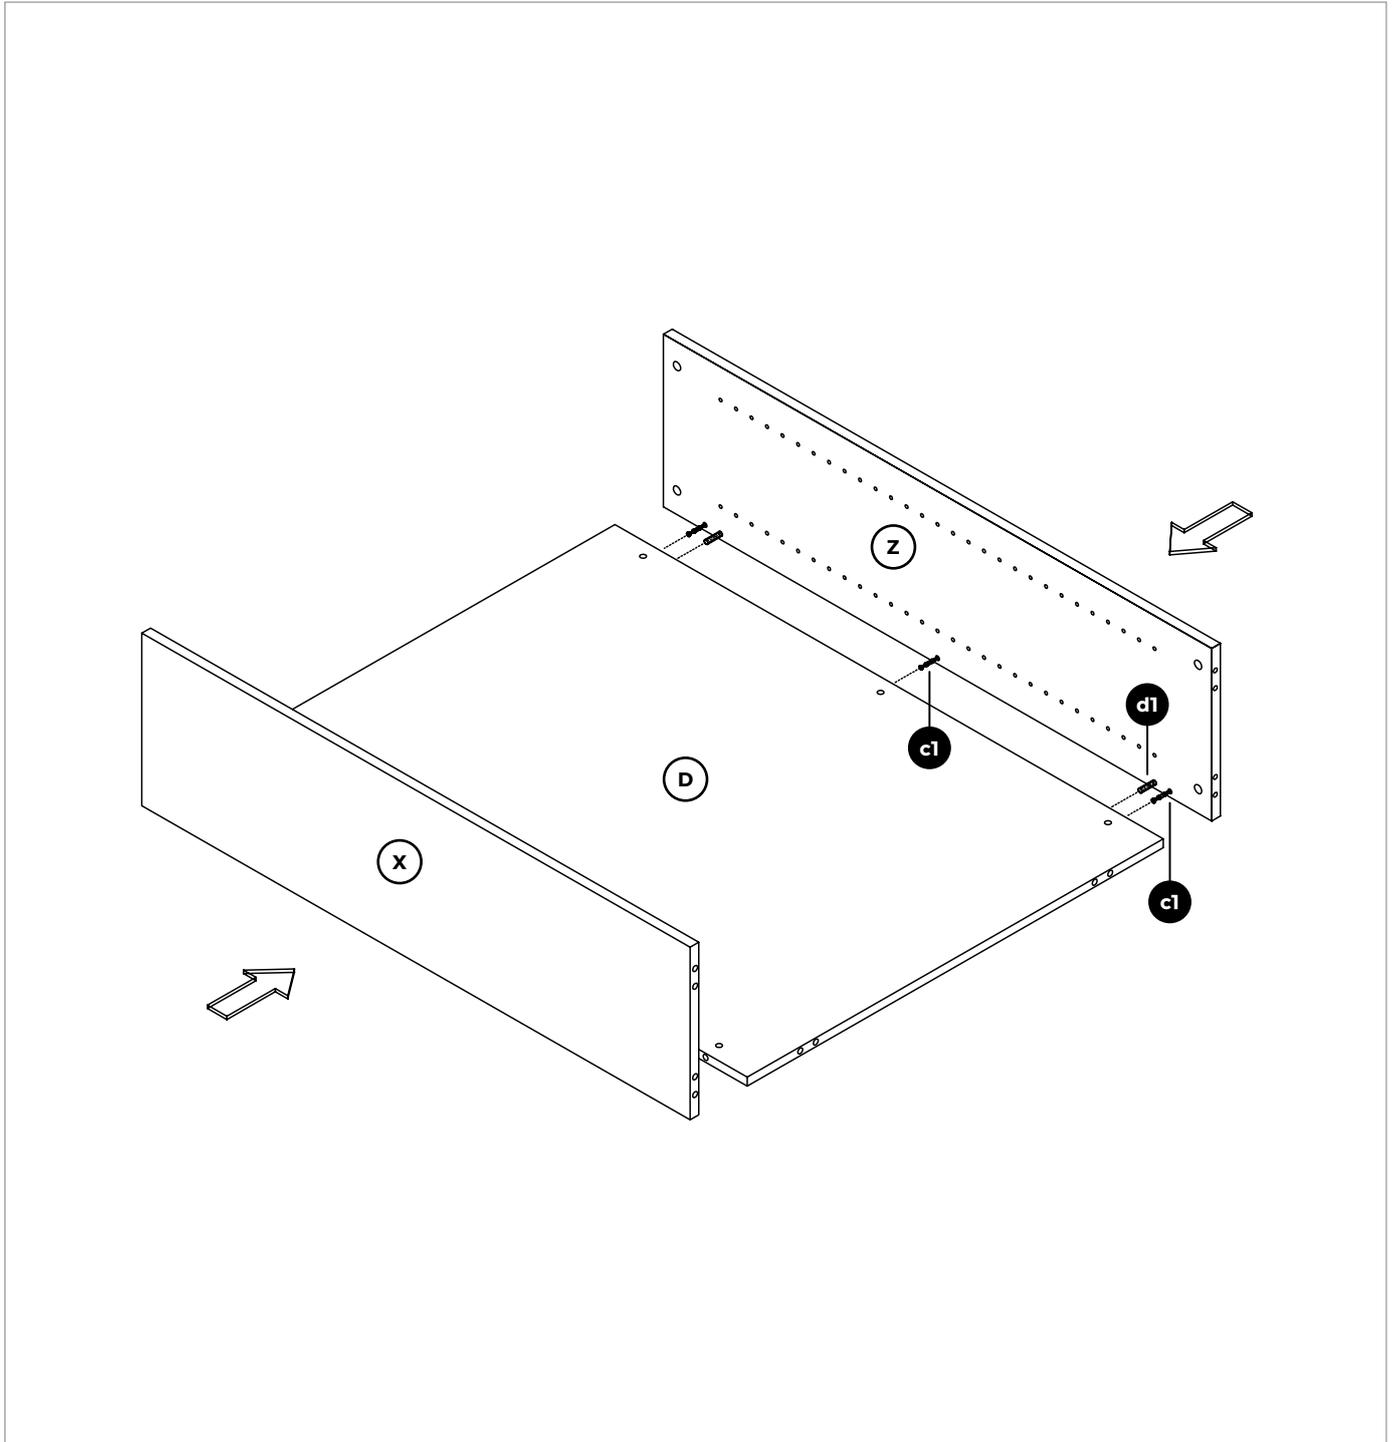

Step 3

Bottom panel G and top panel A assembly.


1. Insert cam bolts (c1) and dowel pins (d1) on panel G and A into cams on panel X, Z and D and tighten in a clockwise direction.
2. Cover top of cams with cam stickers (c2).

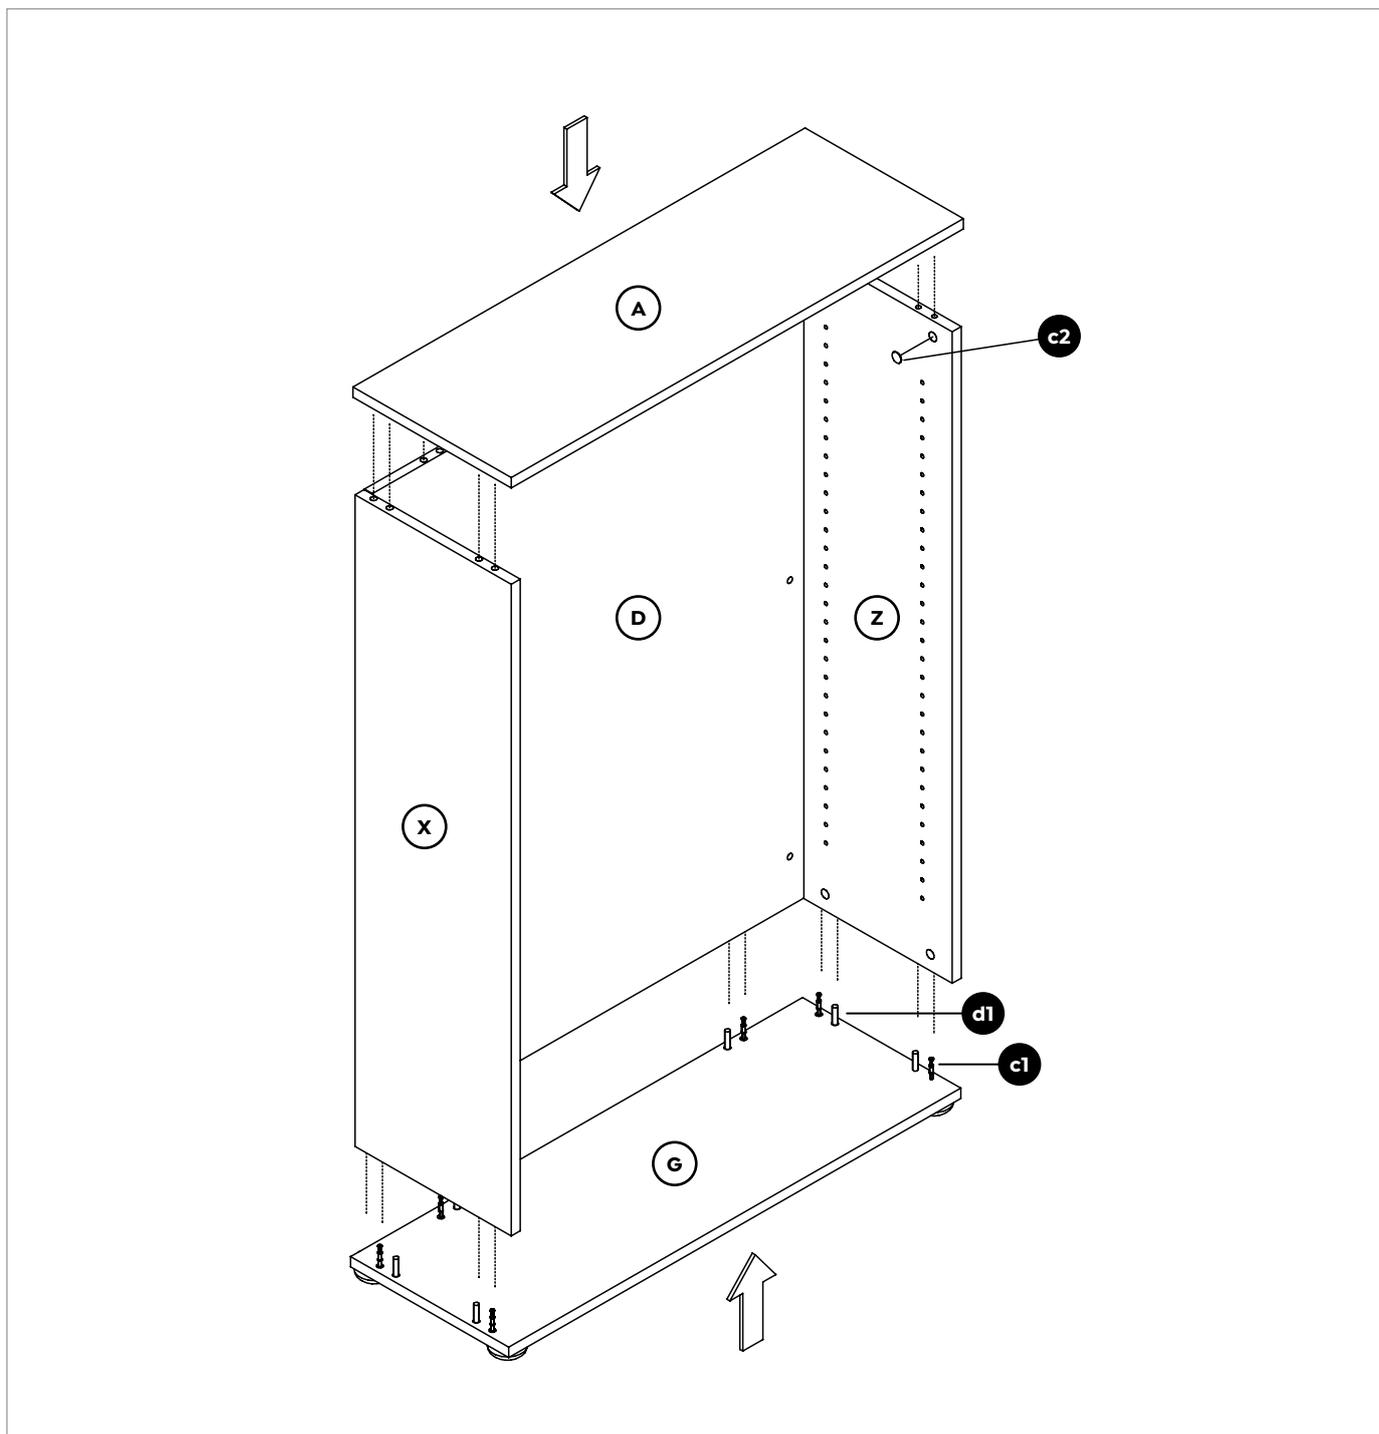

Step 4

Moveable shelf E assembly.

1. Insert shelf pins (p1) into panels X and Z at desired shelf height.
2. Place the two panels E on the top of the shelf pins (p1).

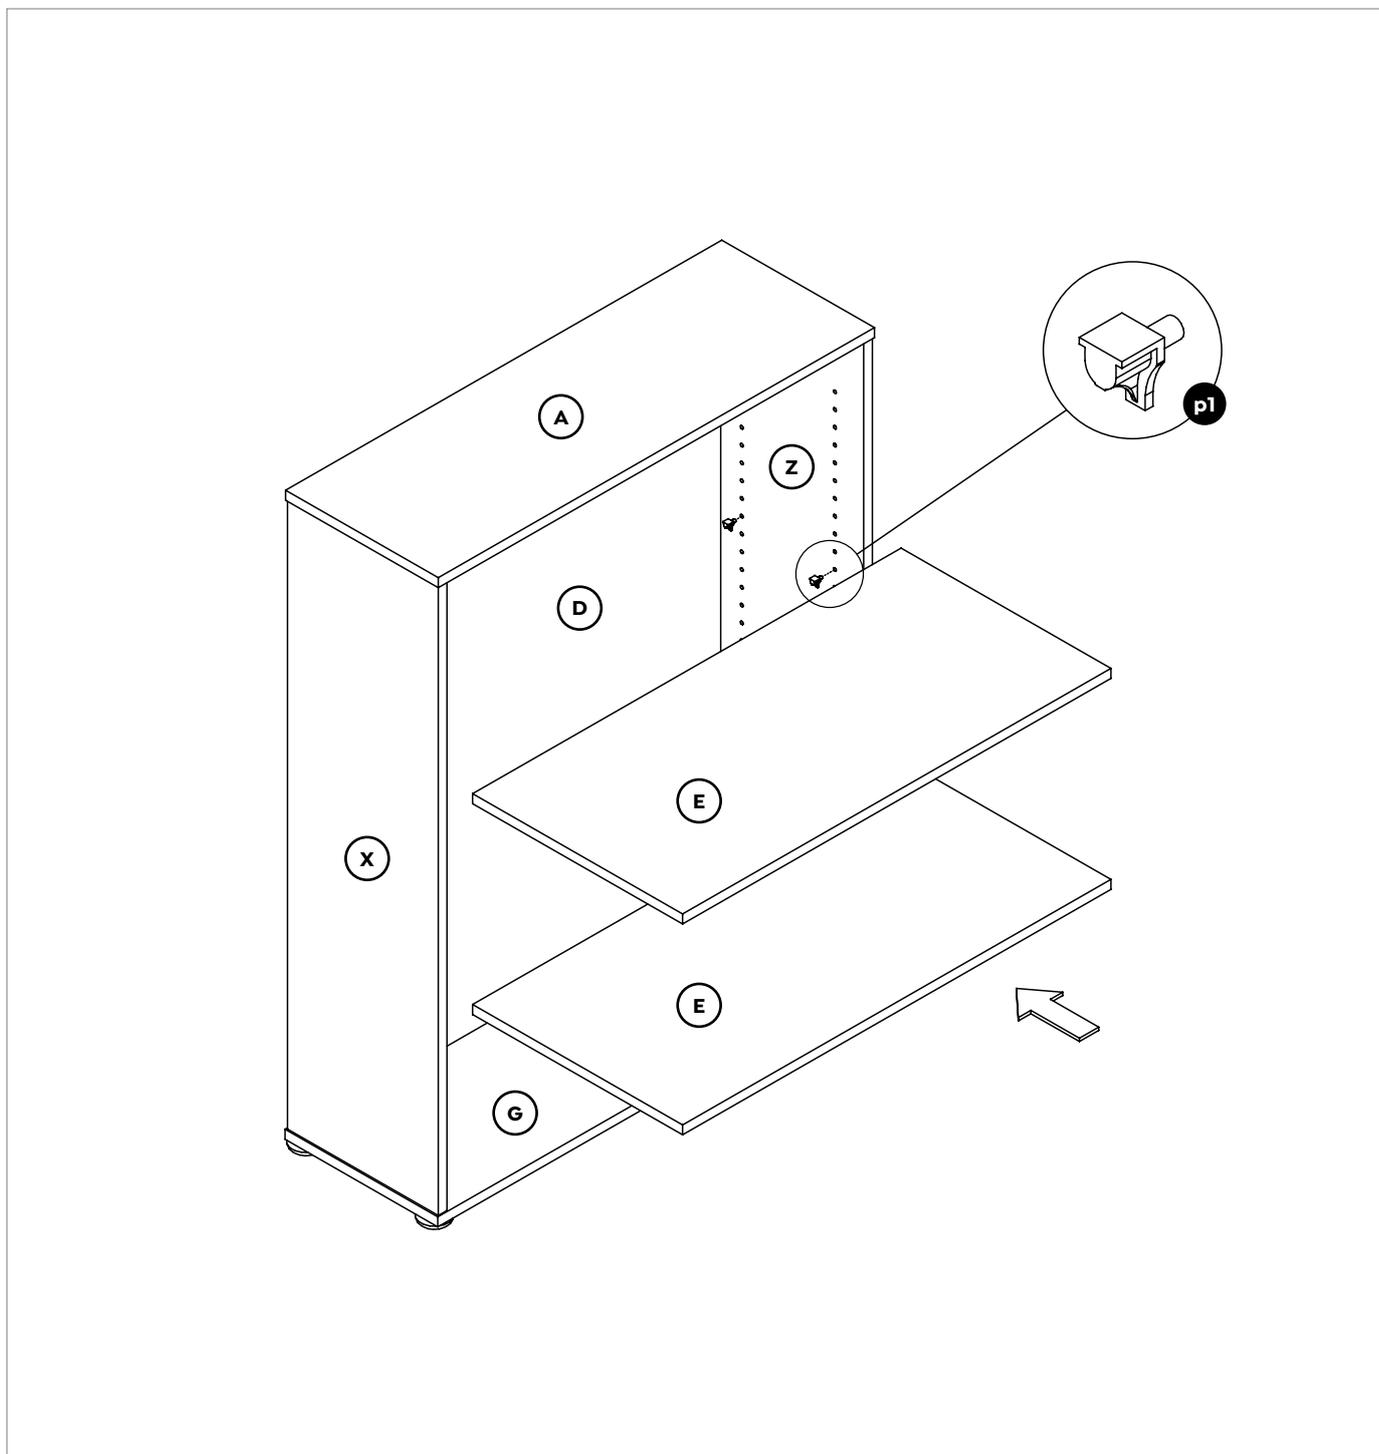

Complete

