

Velocity - Electric

Assembly Instructions - Workstation

Tools Required: Power Drill



Velocity - Electric Workstation

Assembly Instructions

Contents

Electric Workstation	Page 1
Optional Studio50 or Active25 Screen	Page 18
- Studio50	Page 18
- Active25	Page 25
Electric Digital Handset Functions	Page 31

Velocity - Electric Workstation

Assembly Instructions

IMPORTANT!

Please carefully read the assembly manual and direction for use prior to instalment, use and maintenance of the table frame to gain a complete understanding of its contents. It provides you with important information about the safety, use, installation and maintenance of the table.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The table must be used in a safe manner. Inappropriate use may cause damage to the table and/or cause bodily harm to the user or persons nearby.
- Do not tamper with electrical components as this may lead to serious bodily harm.
- Only connect the electric table frames to the prescribed mains power voltage.
- Do not use the table frame to lift people.
- Please retain this operation manual and pass it on to any future owner.

USAGE

- The height-adjustable table is designed for use in dry work environments only.
- The table height is infinitely adjustable within its height range so that it can be set to the user's most ergonomic working height. The user should seek professional help to establish their optimum working height.
- The table has been designed as a devise to elevate the users work surface and associated office peripherals. Do not use the table frame for any other purposes than that which it has been designed for. Any other use is at user's own risk!
- Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.
- CHILDREN should only use the table when supervised by adults.
- Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.

SET UP AND INSTALLATION

Assemble the table frame according to the following pages in this assembly instructions guide.

- Place the table in a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.
- Level the table with the adjustable feet ensuring that the table is stable.
- Check that no cables can get jammed.
- Connect the table to the 110 or 230 VAC power outlet.

The table is now ready for use.

MAINTENANCE

- The table does not require any maintenance by the user
- The table is only to be cleaned with a wrung cloth.
- In the event of the occurrence of jarring sounds during operation, STOP using the table and please contact the dealer.

TECHNICAL DATA

WORKSTATION

Height Range: 635-1285mm includes worktop

Speed: 30mm/s

Triple Motor


Weight Rating: 120kg

Input Voltage: 90-230V AC 50-60Hz


Output Voltage: 24V DC 2.0A

Duty Cycle: 10% 2min on 18min off


Parts

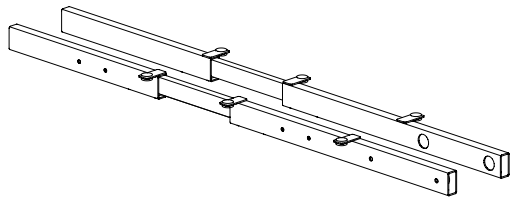


4 x Frame Rails

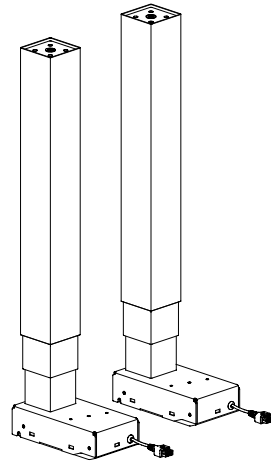


2 x Side Legs

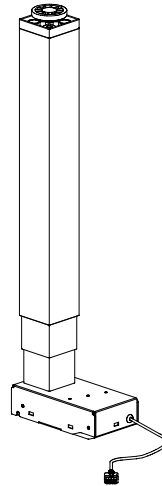


1 x Corner Leg

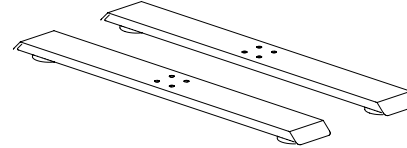


2 x Foot with Leveling Feet

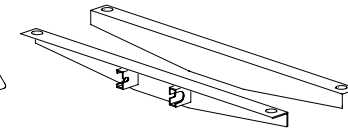


1 x L&R Support Bar (Pair)

 


1 x Corner Leg Support

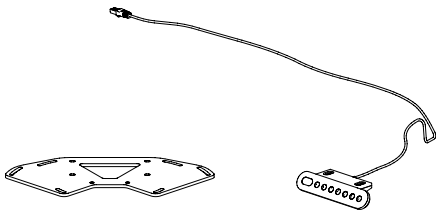


1 x Rail Plate

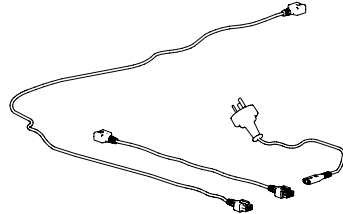

1 x Handset

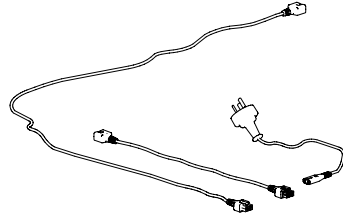

3 x Power Cord

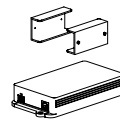


1 x Power Box with Brackets



4 x M6x12
Socket Head
Bolt



 
20 x M6x10
Socket Head
Bolt



18 x ST5.0x23



 
2 x ST4.2x16



8 x M8x20

Step 1


**Don't plug in the desk until handset, power box & controller are mounted on to the desk top.
It might cause errors.**

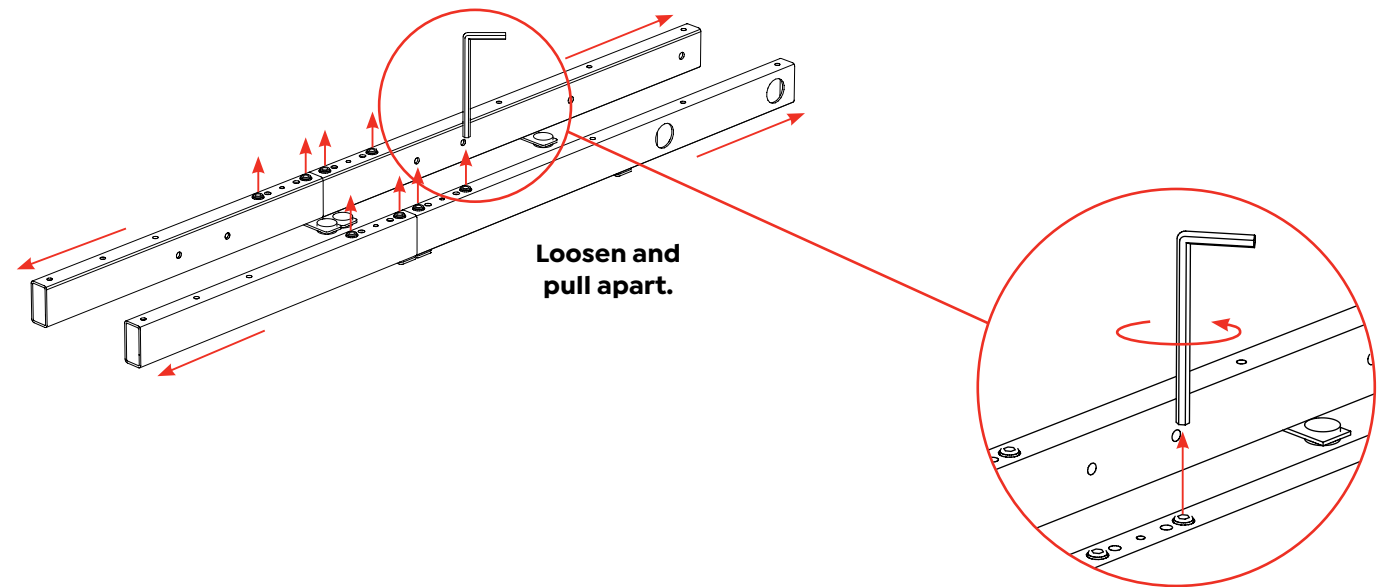


Step 2




2 x M6x10
Socket Head Bolt

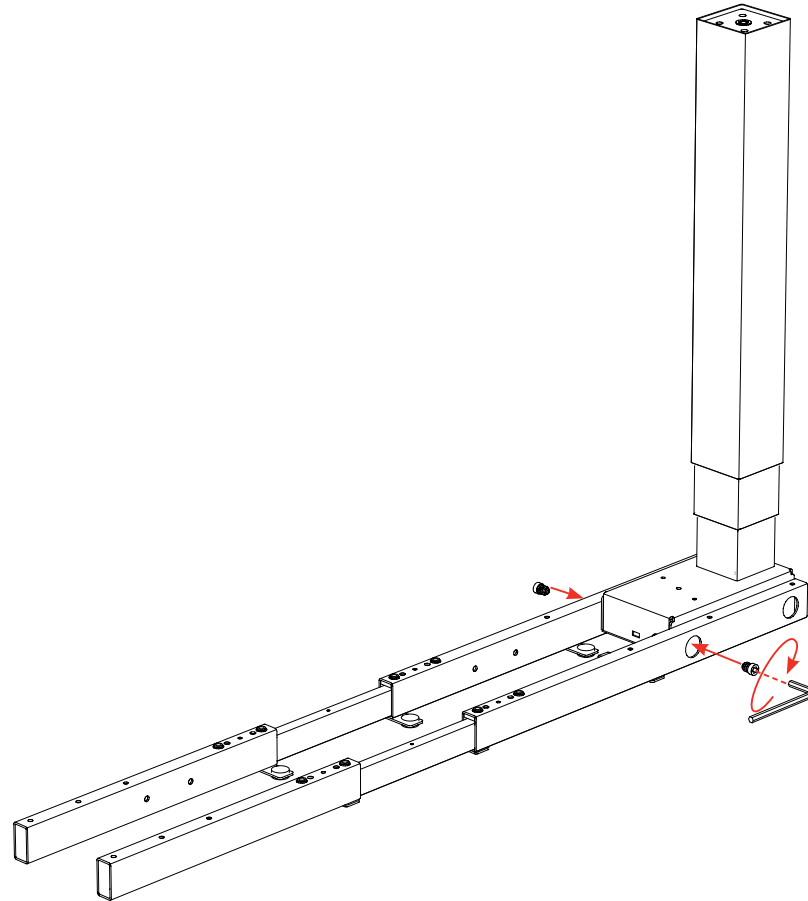

 
Step 3




4 x M6x12
Socket Head
Bolt

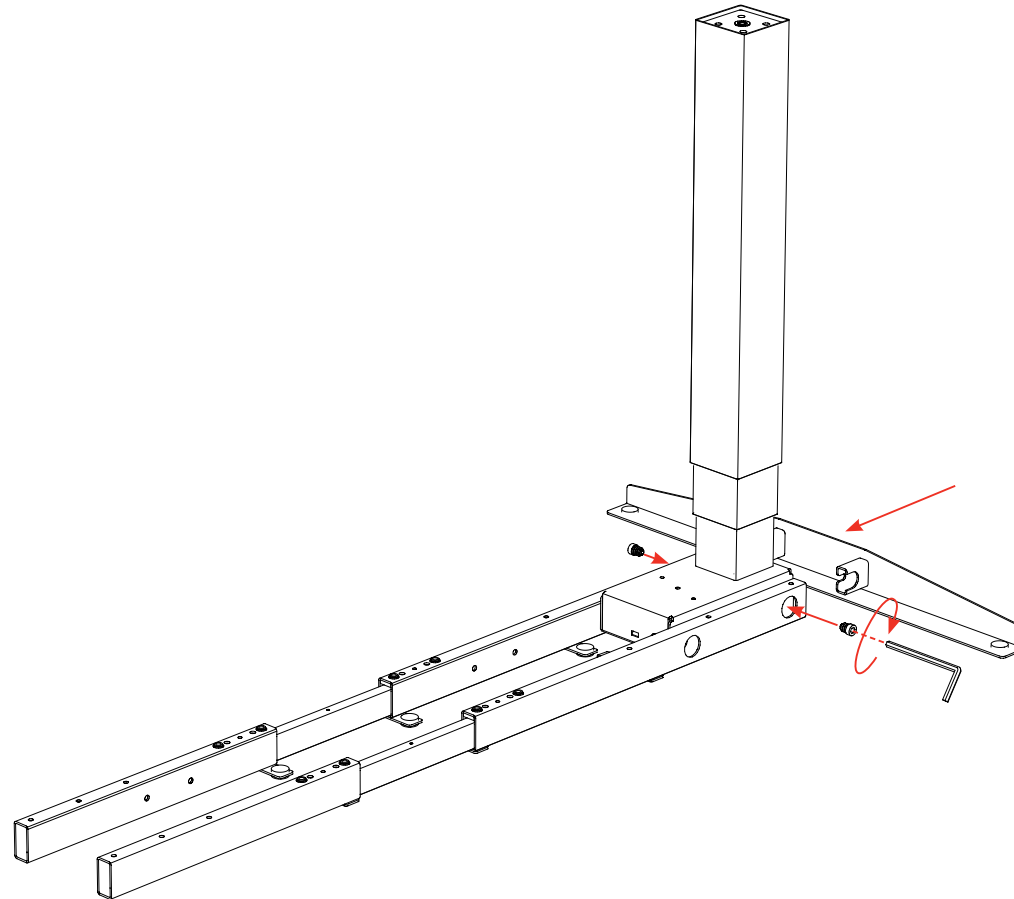

 Step 4




4 x M8x20

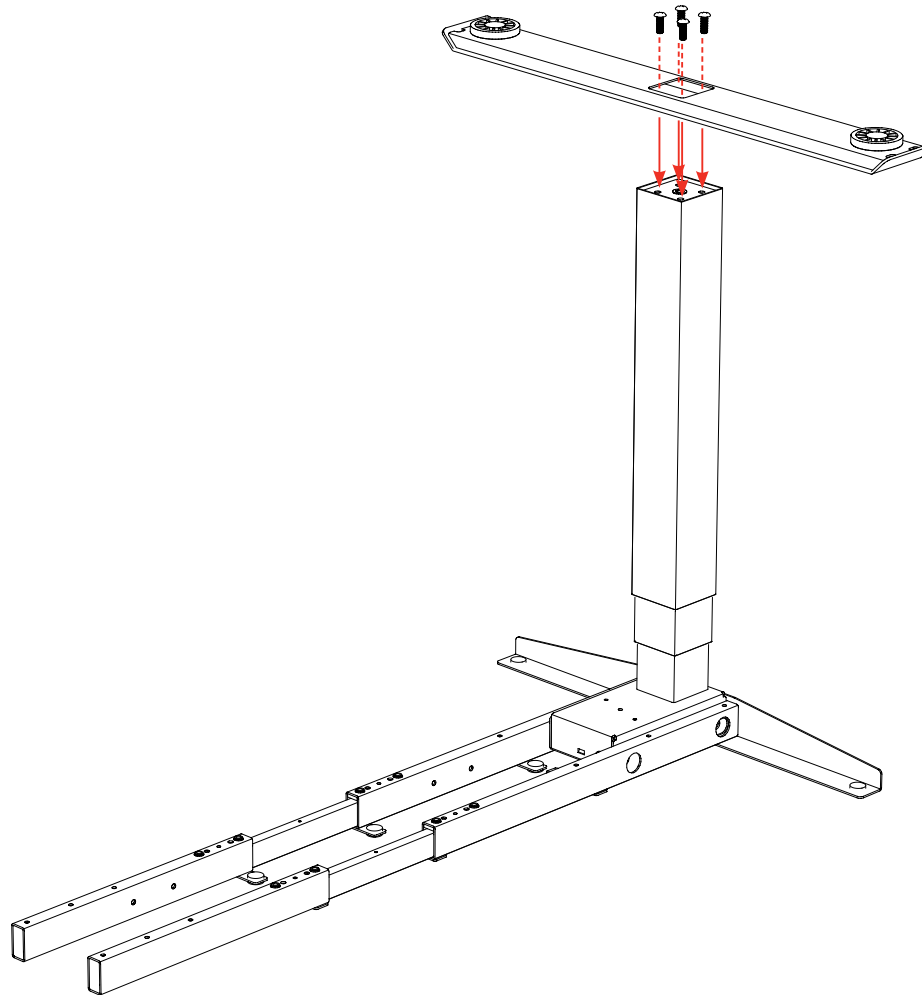

Repeat steps 1 - 4 to assemble the second frame.


Step 5

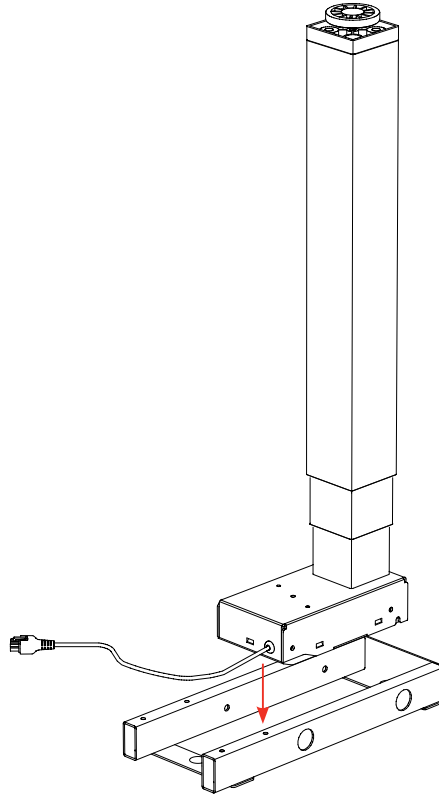


Step 6




4 x M6x10
Socket Head Bolt

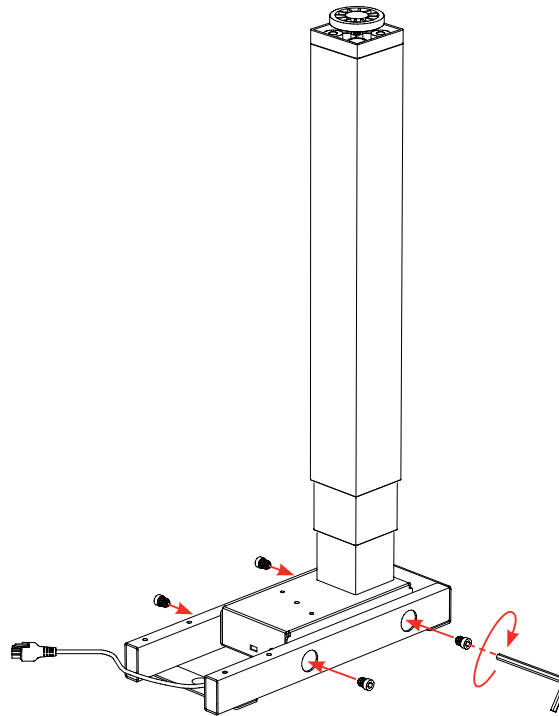

Step 7

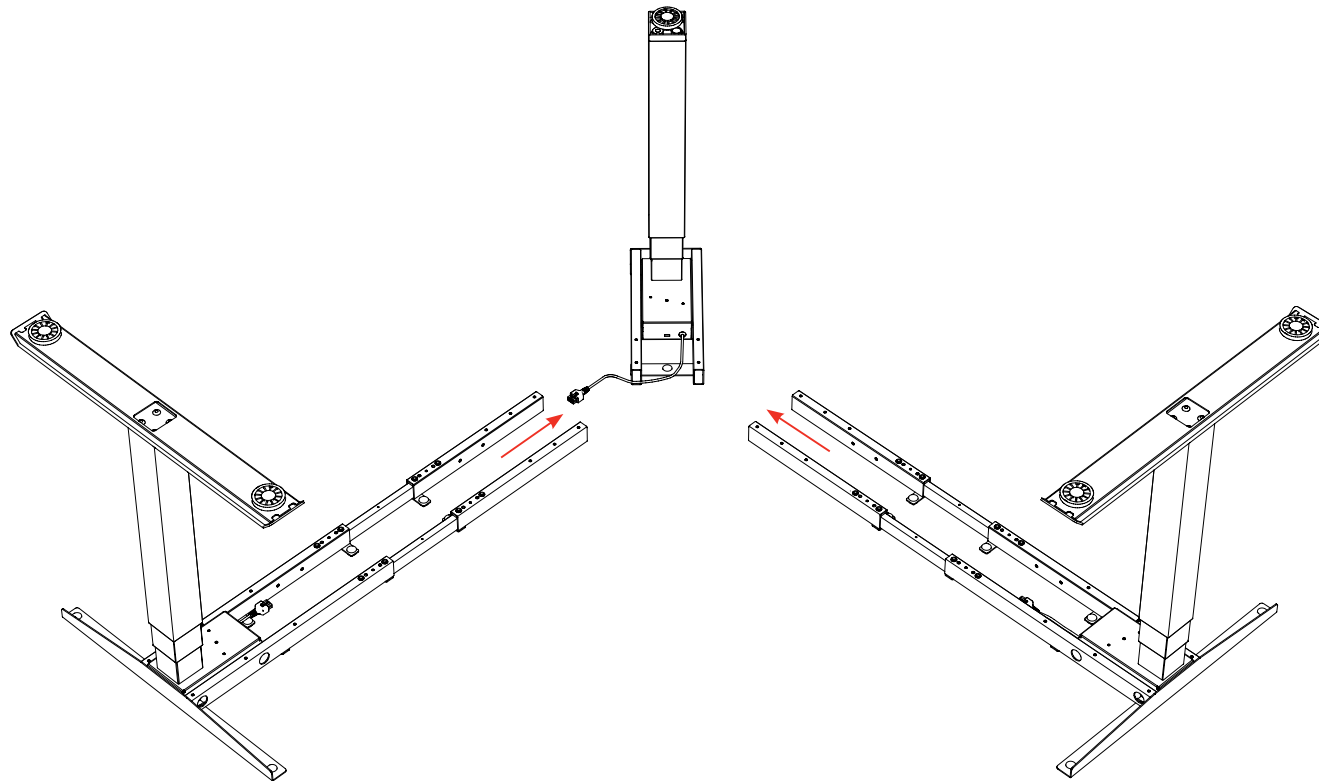


Step 8

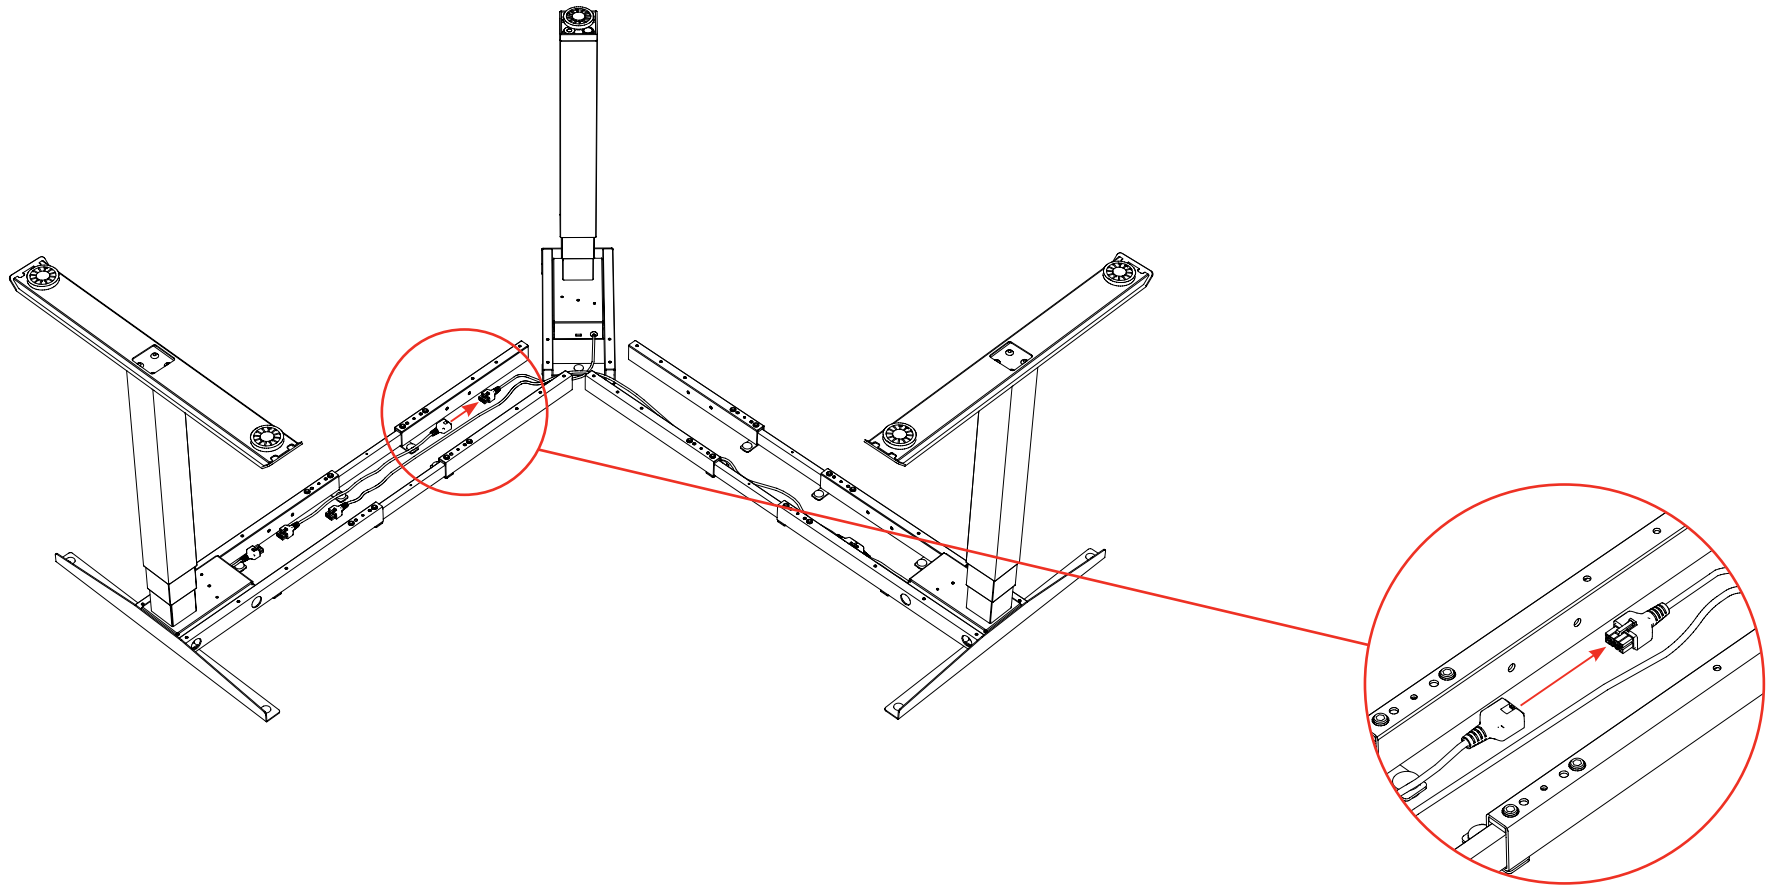


Step 9



12 x M6x10
Socket Head Bolt

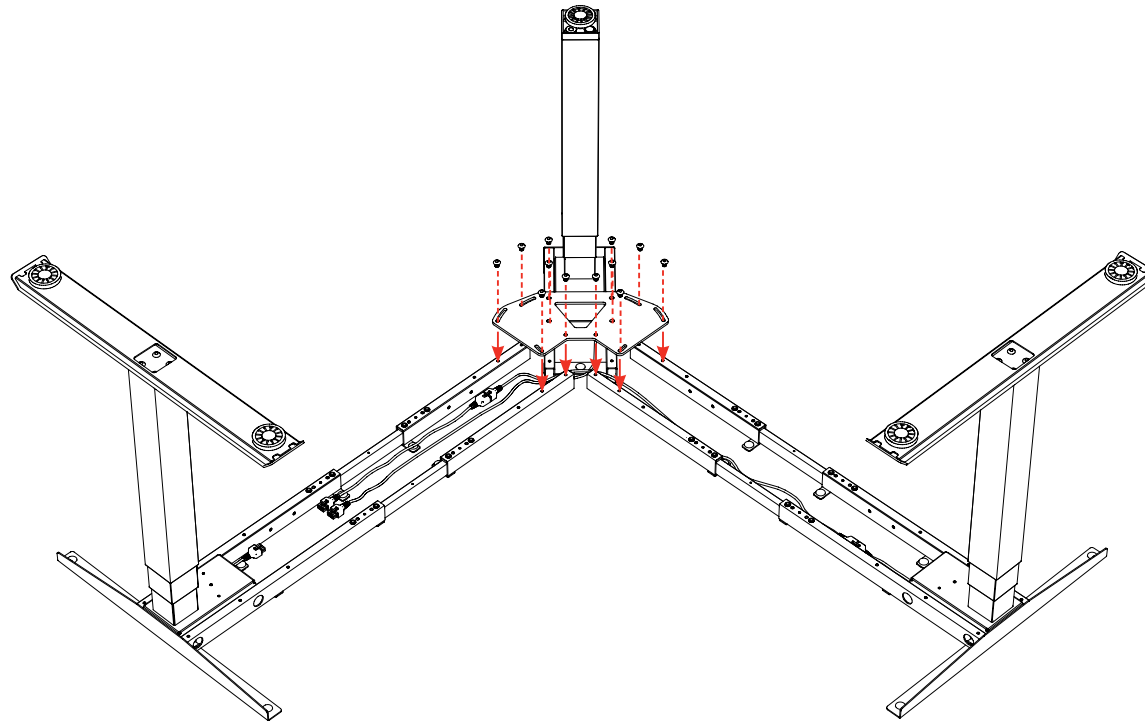

Step 10

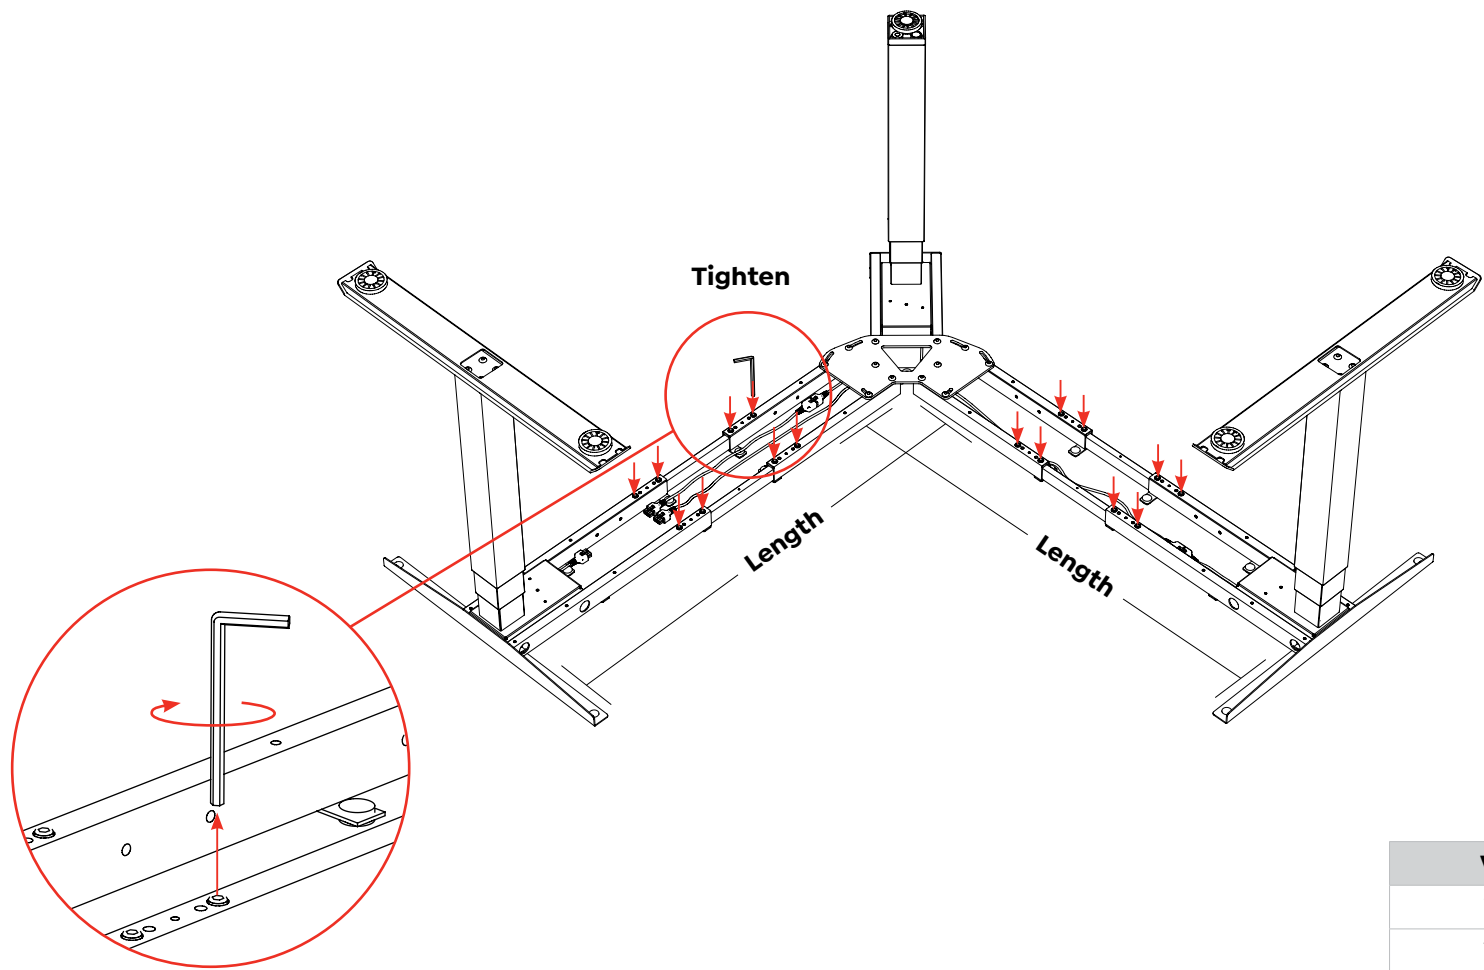


Worktop	Length
1500mm	1425mm
1800mm	1725mm


Step 11




18 x ST5.0x23

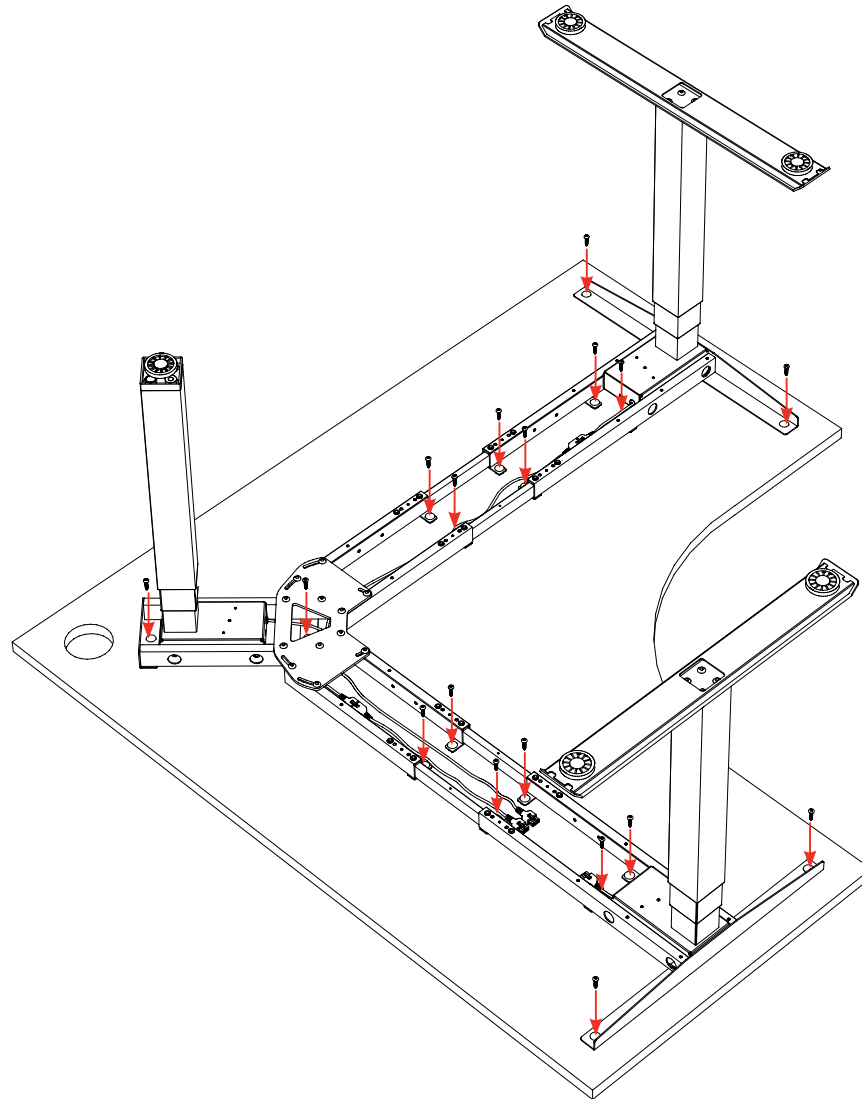

 
Step 12




2 x Power Box Brackets

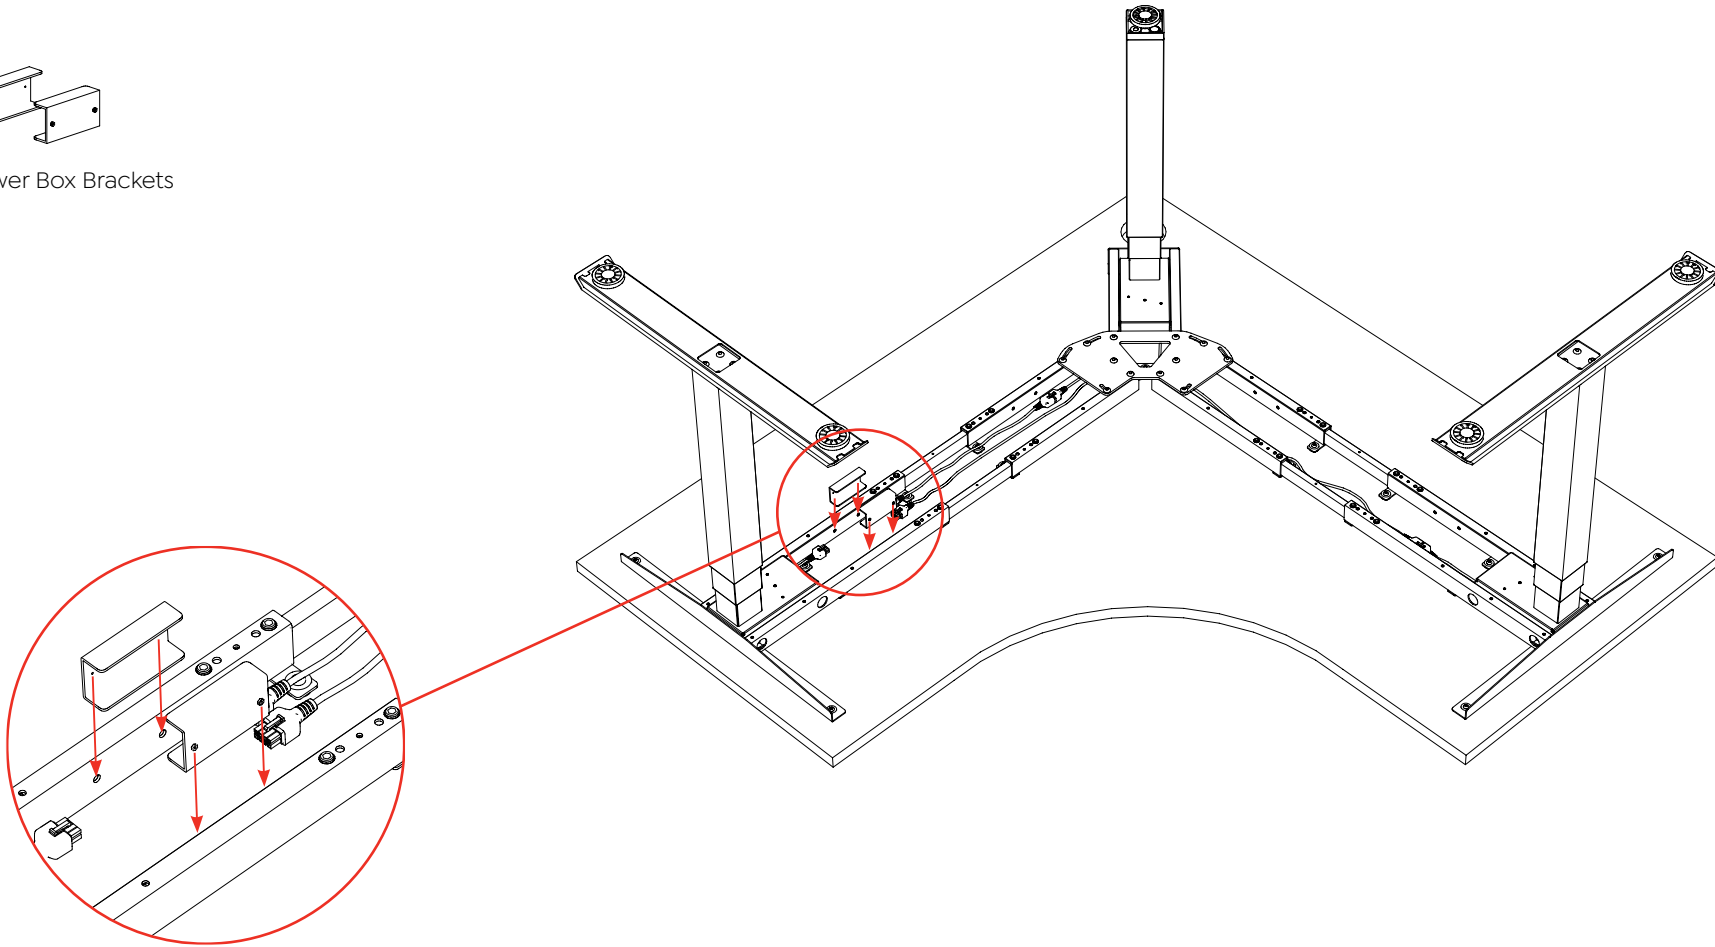

 
Step 13



1 x Power Box

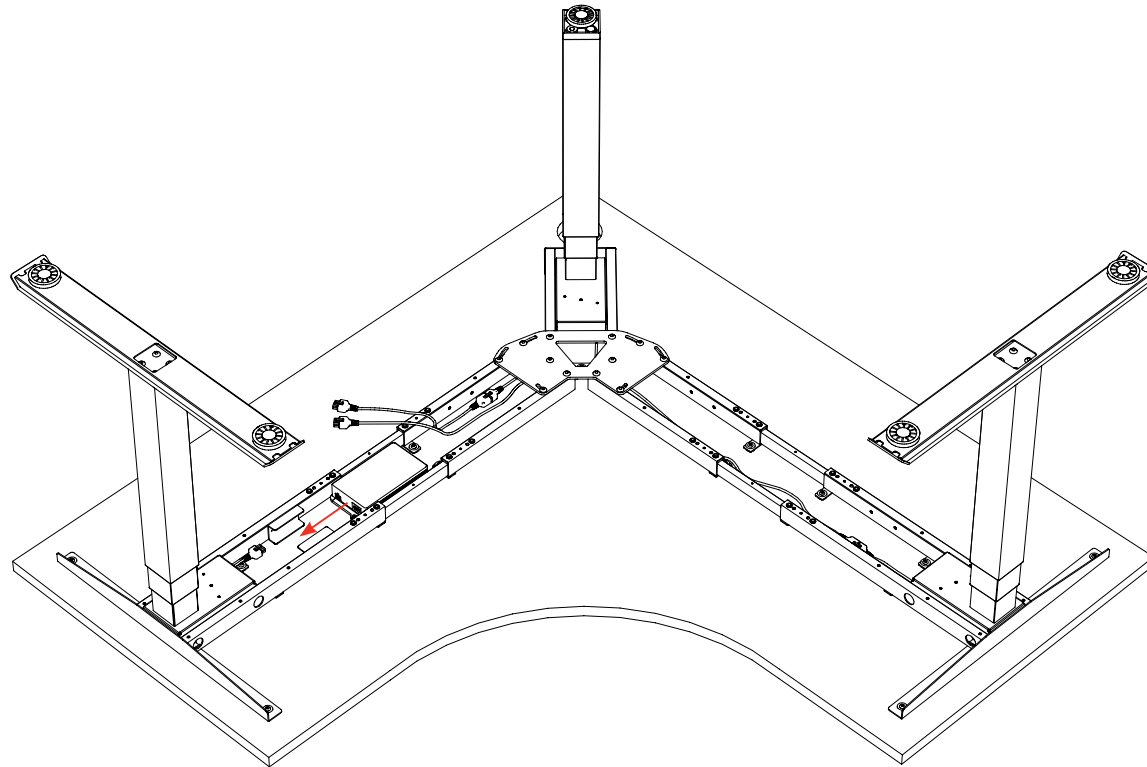


Step 14

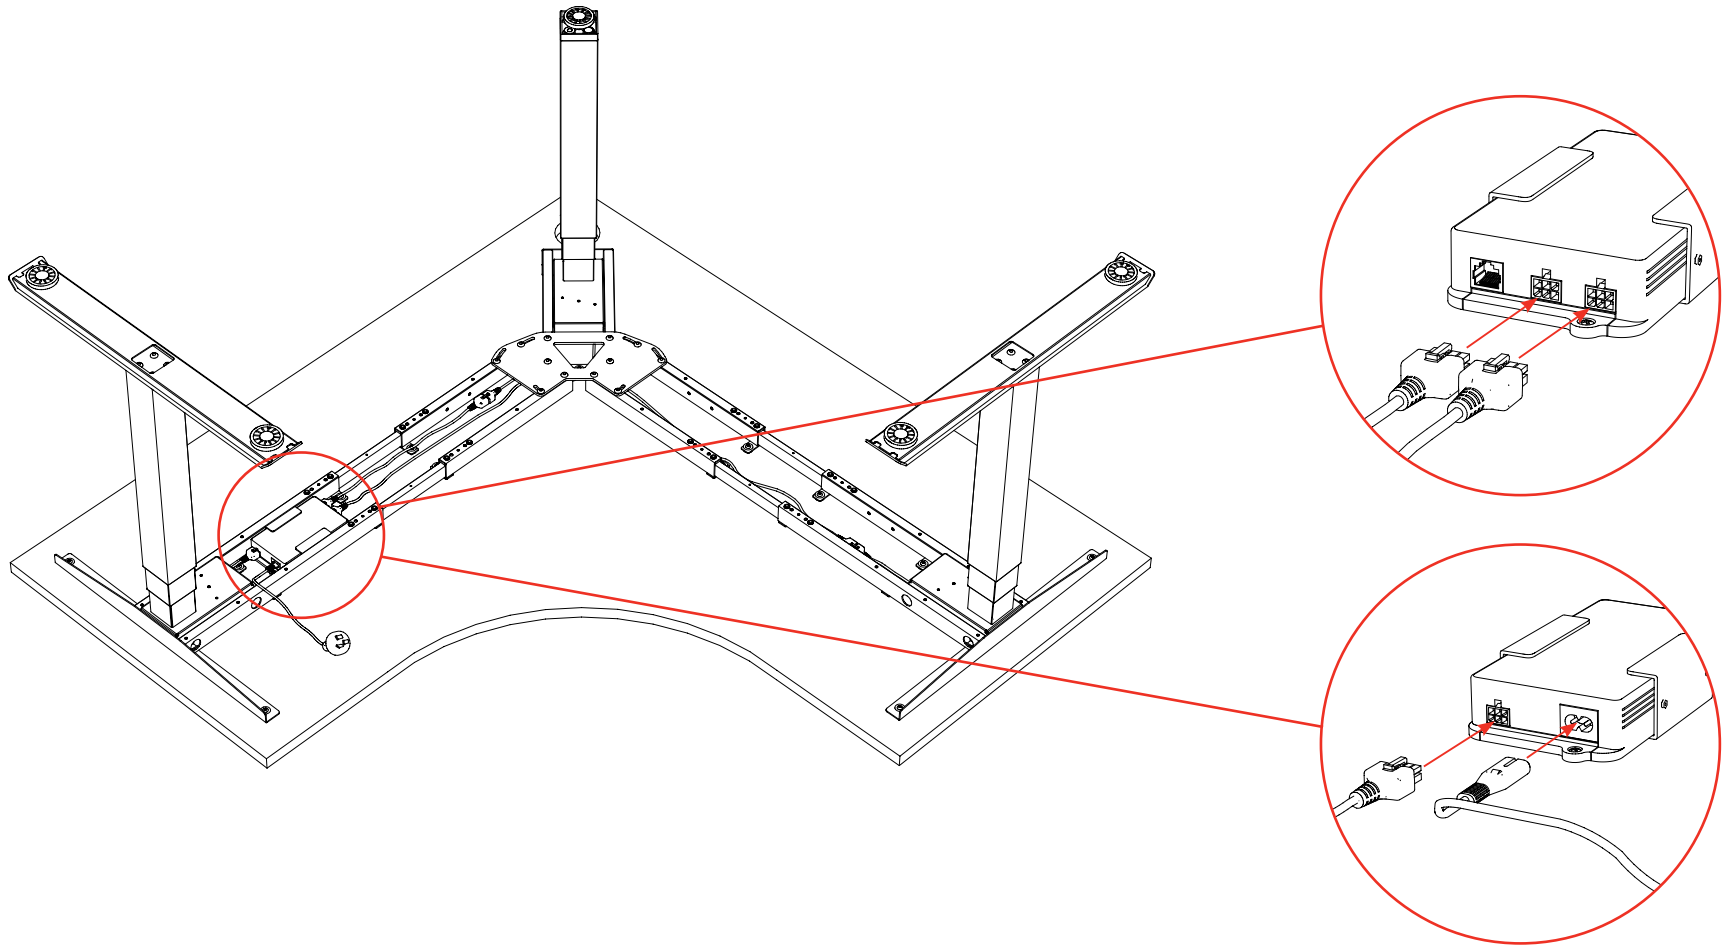

Step 15



2 x ST4.2x16

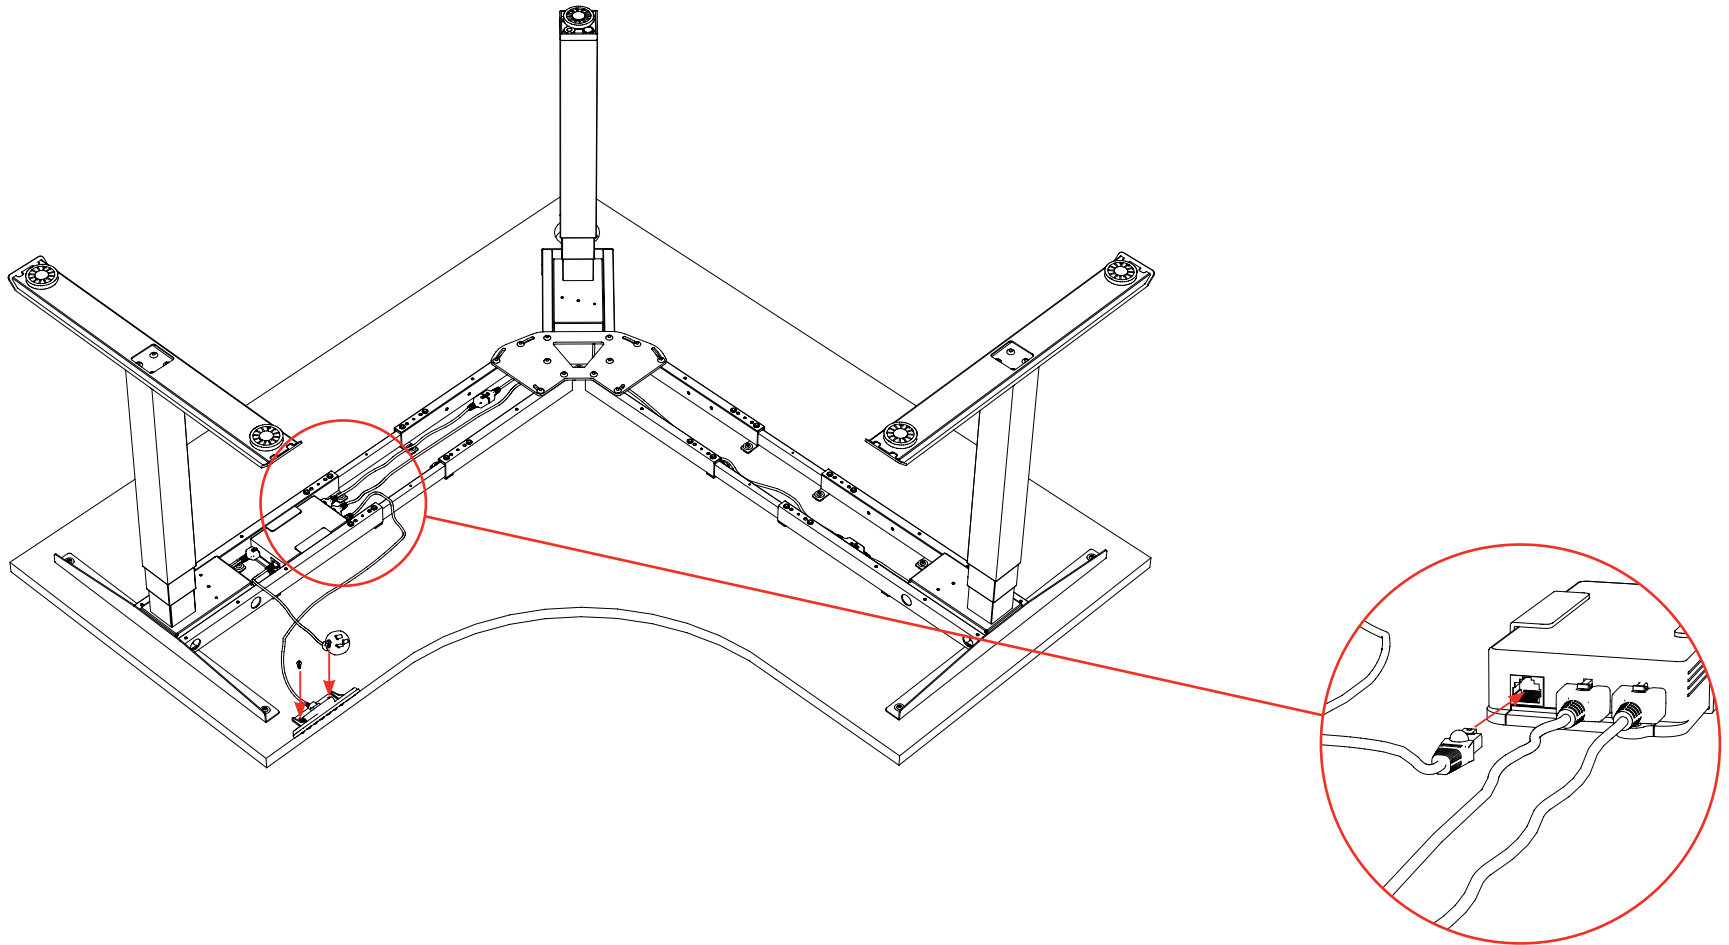


Velocity - Electric Workstation

Assembly Instructions

Page 17

Complete

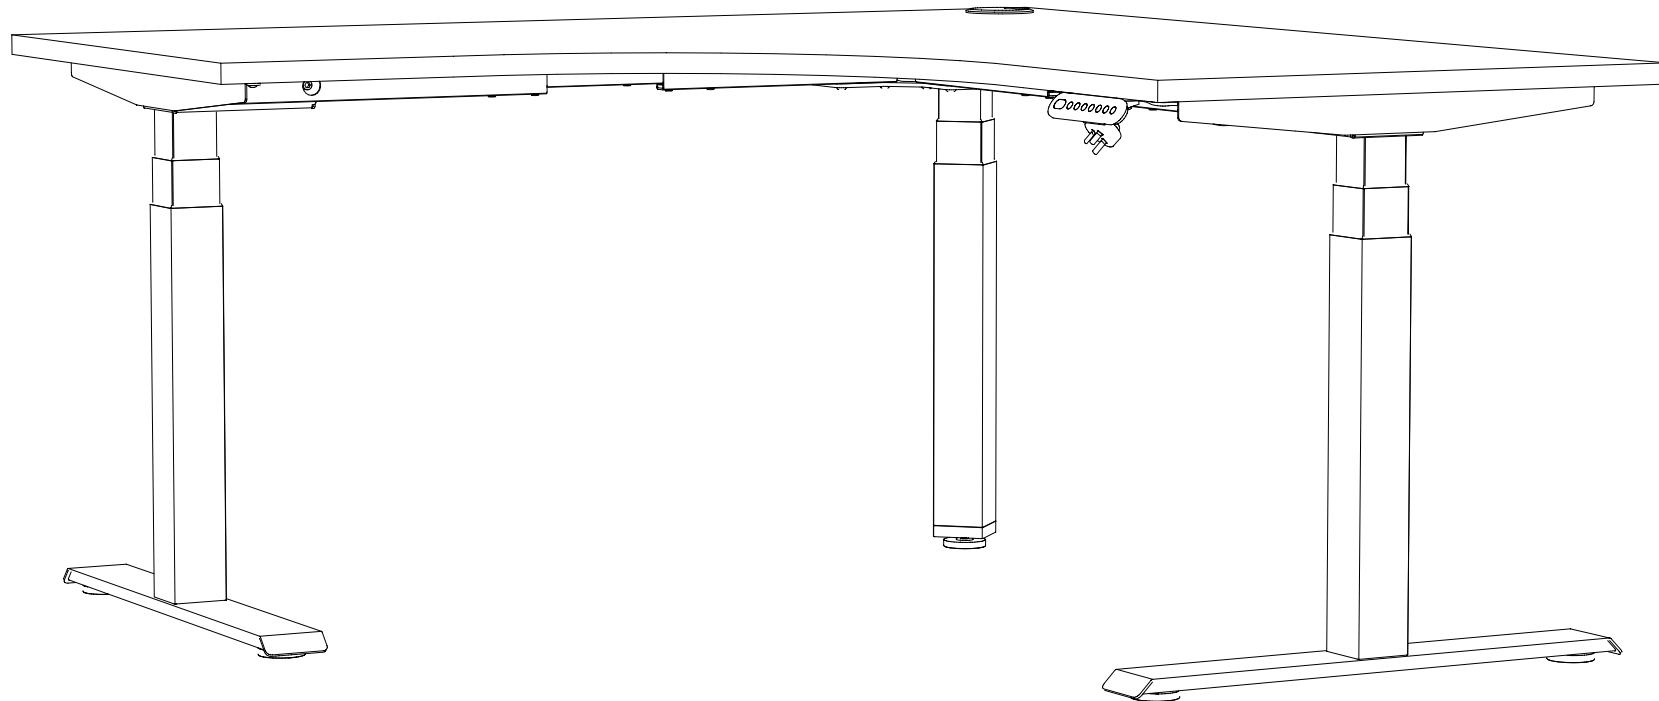


Optional Studio50 or Active25 Screen


Assembly Instructions

Page 18


Parts - Studio50

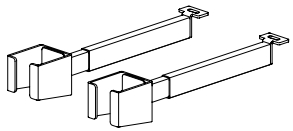


Workstation Side
Brackets L/R Pair

 


Workstation Corner
Bracket

 

4 x M8x25

 

6 x ST5.0x23

 


3 x Stabilizing Bracket

Optional Studio50 or Active25 Screen

Assembly Instructions



Step 1 - Studio50

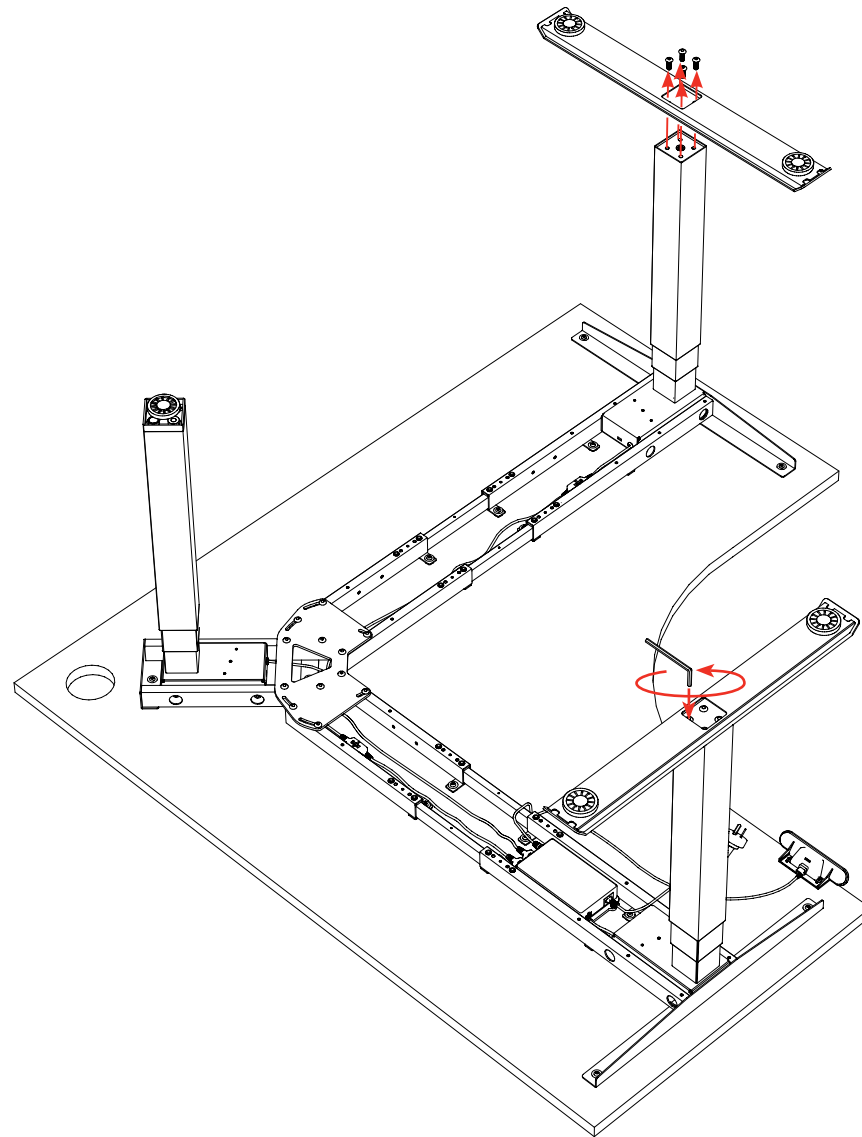

Optional Studio50 or Active25 Screen

Assembly Instructions

Step 2 - Studio50

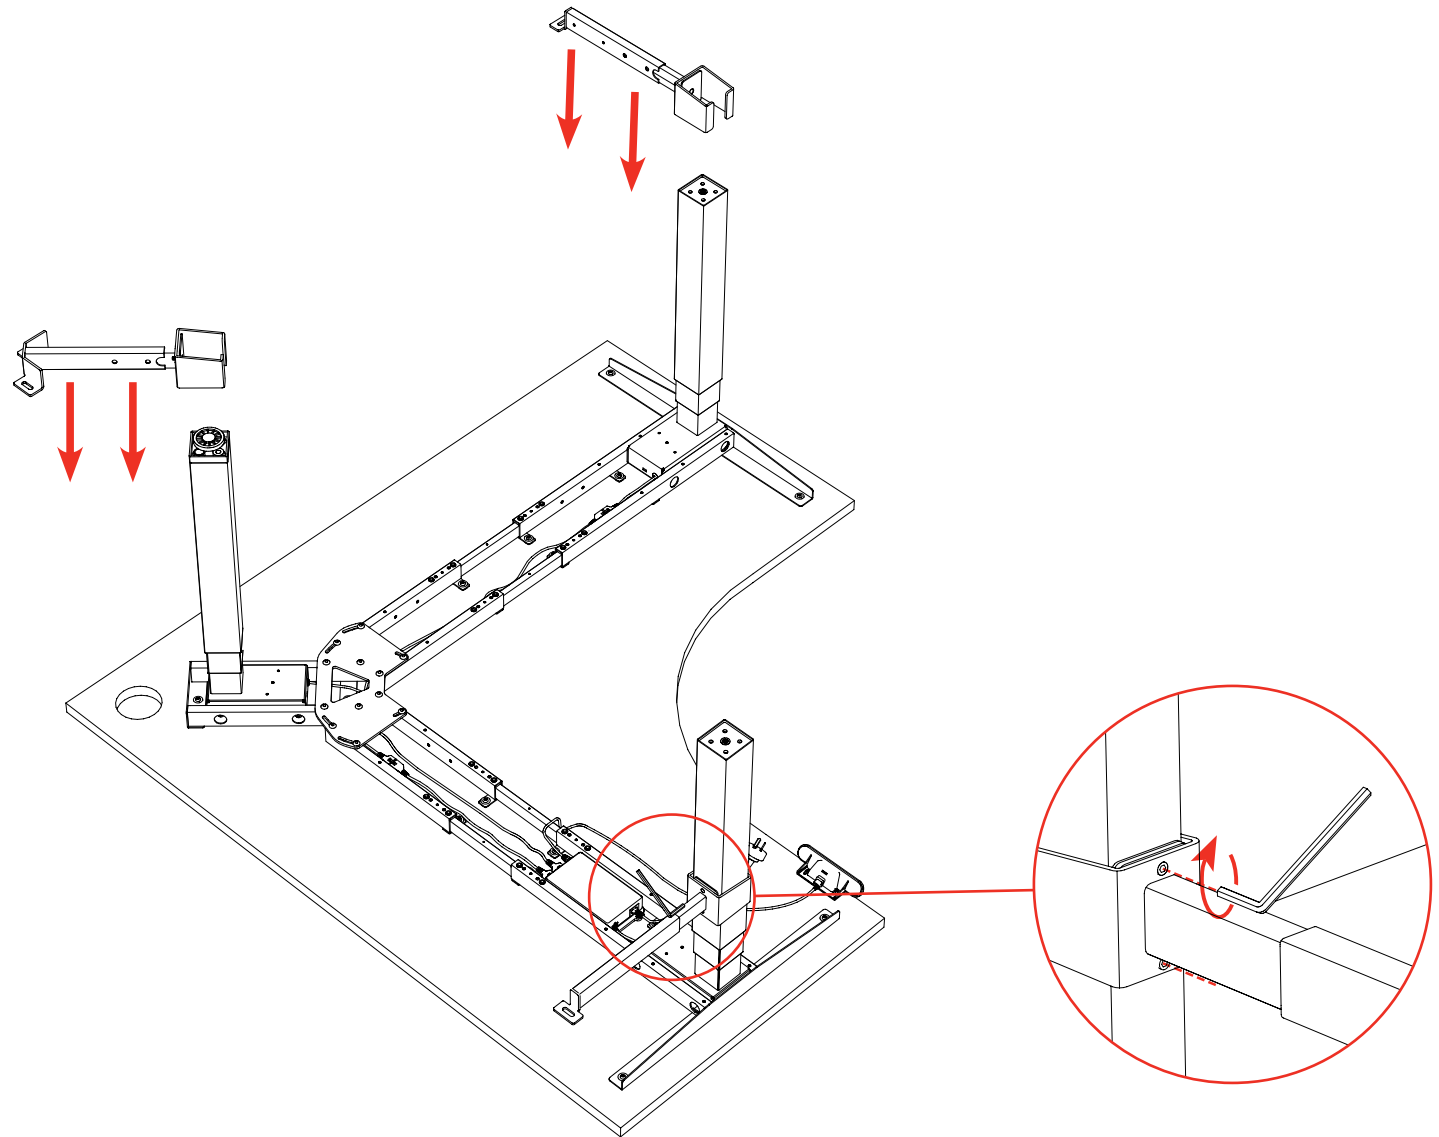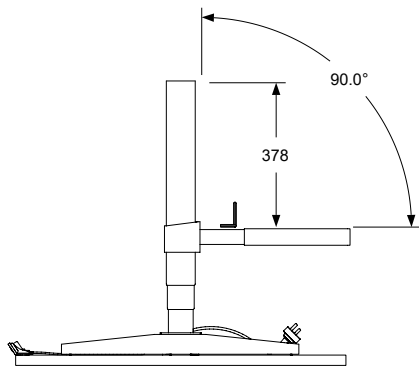


Optional Studio50 or Active25 Screen

Assembly Instructions

Page 21


Step 3 - Studio50

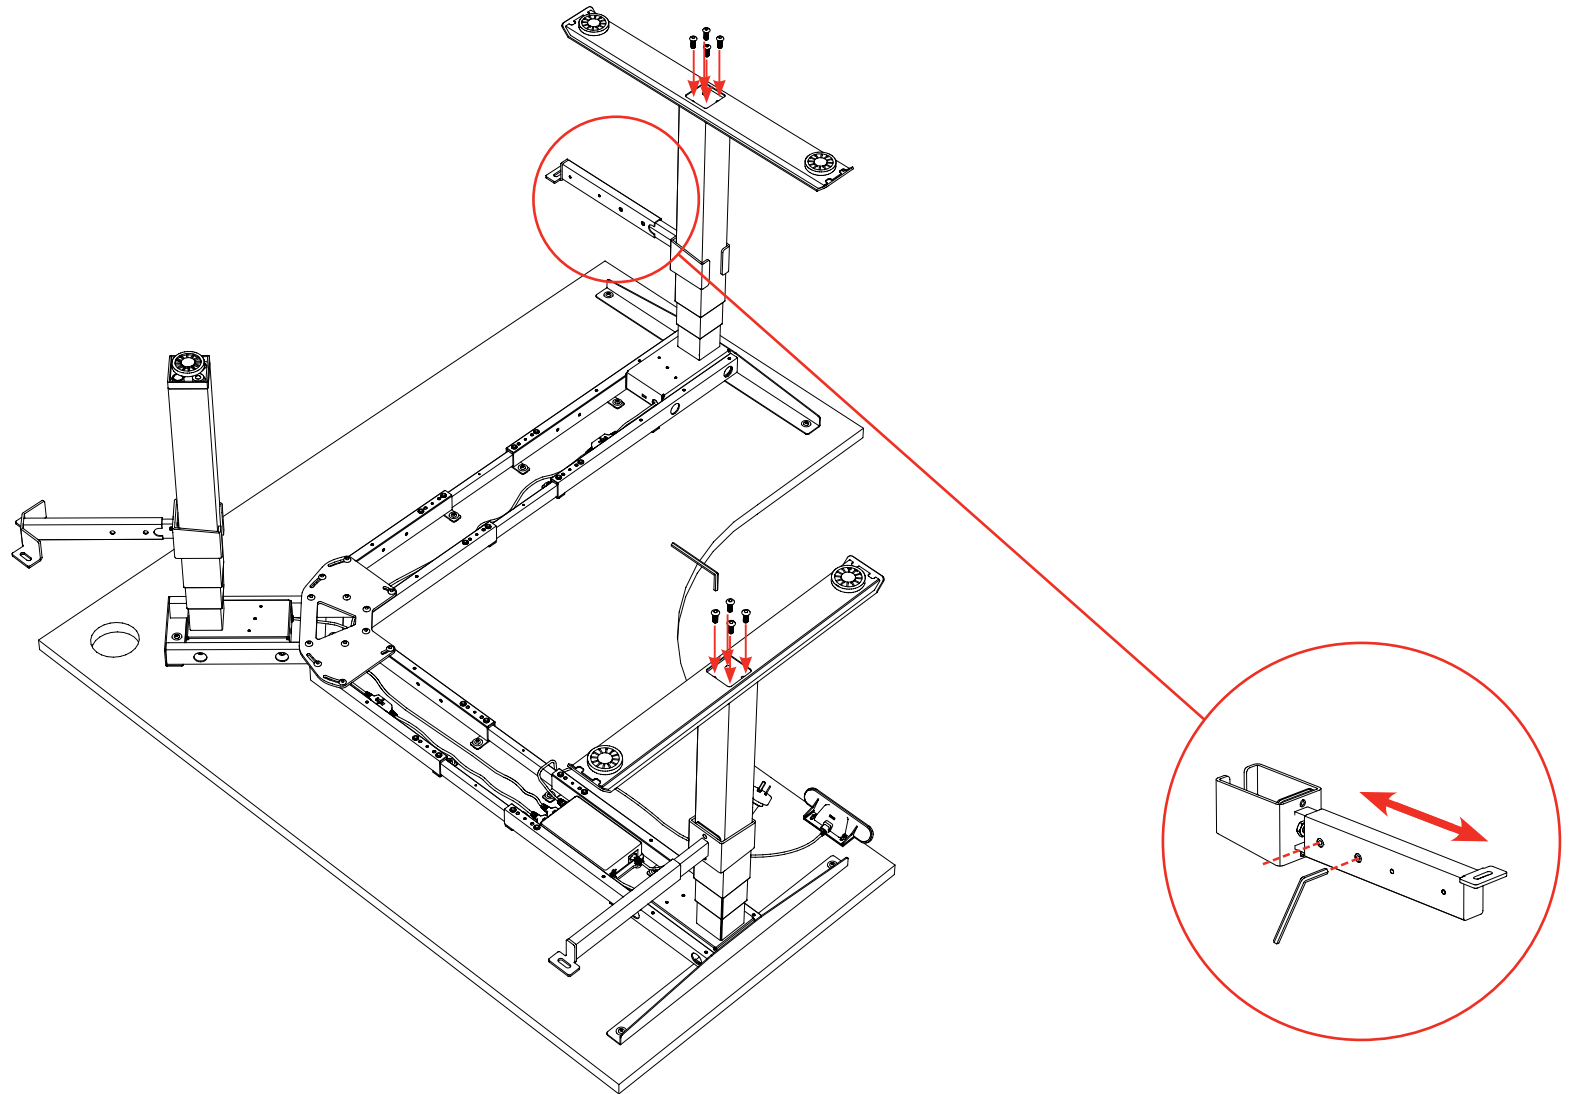


Optional Studio50 or Active25 Screen

Assembly Instructions

 Step 4 - Studio50




4 x M8x25

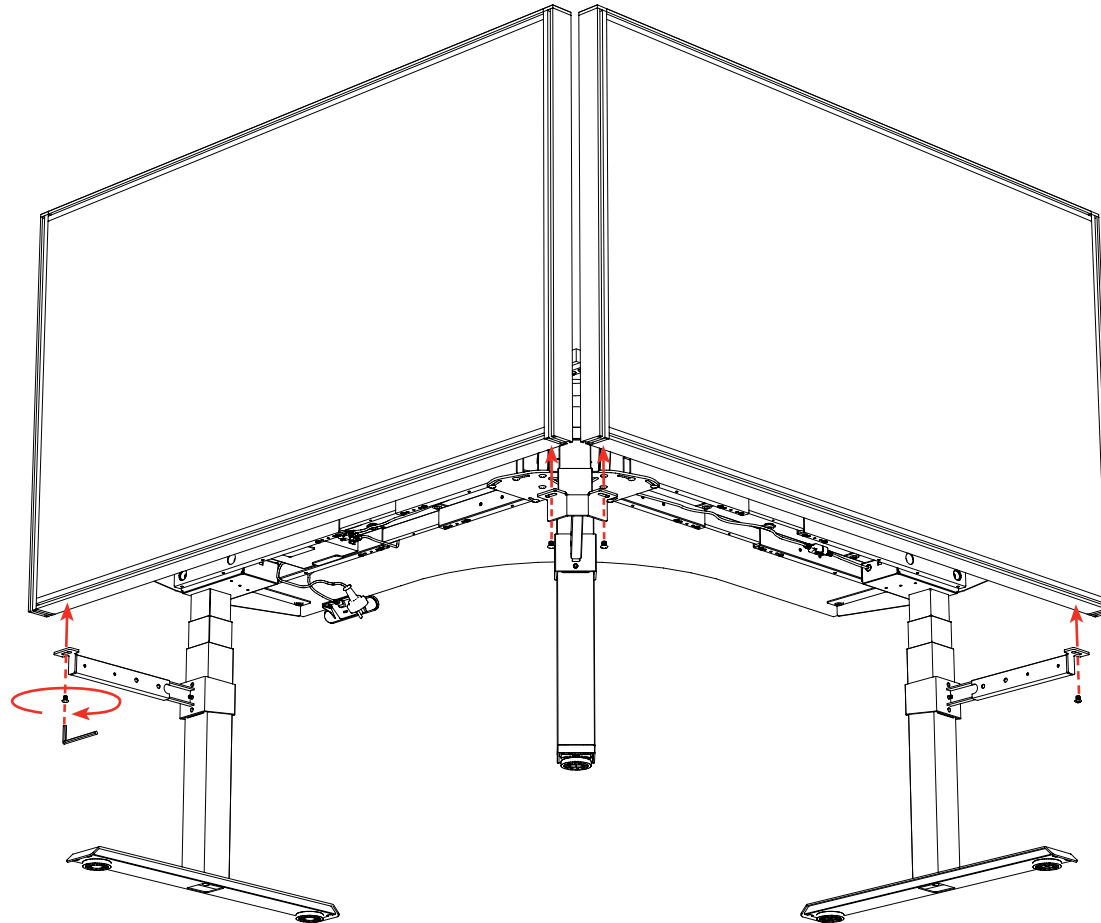

Optional Studio50 or Active25 Screen

Assembly Instructions


Step 5 - Studio50

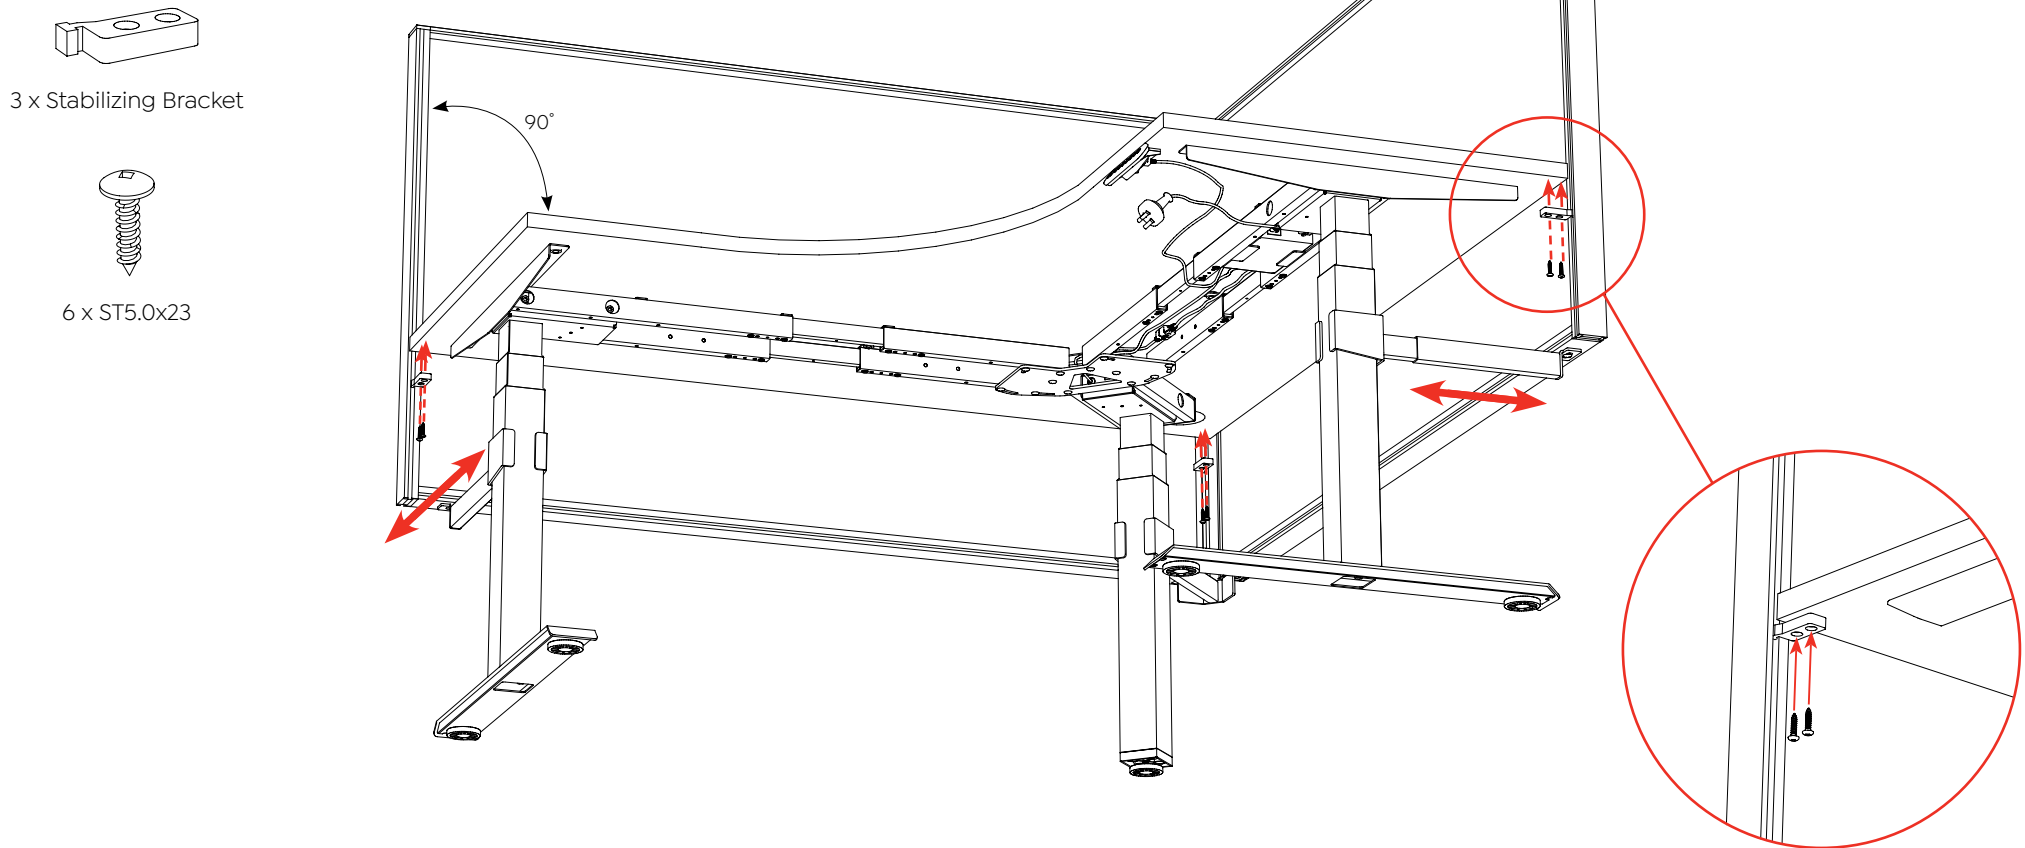

Optional Studio50 or Active25 Screen

Assembly Instructions


Complete - Studio50

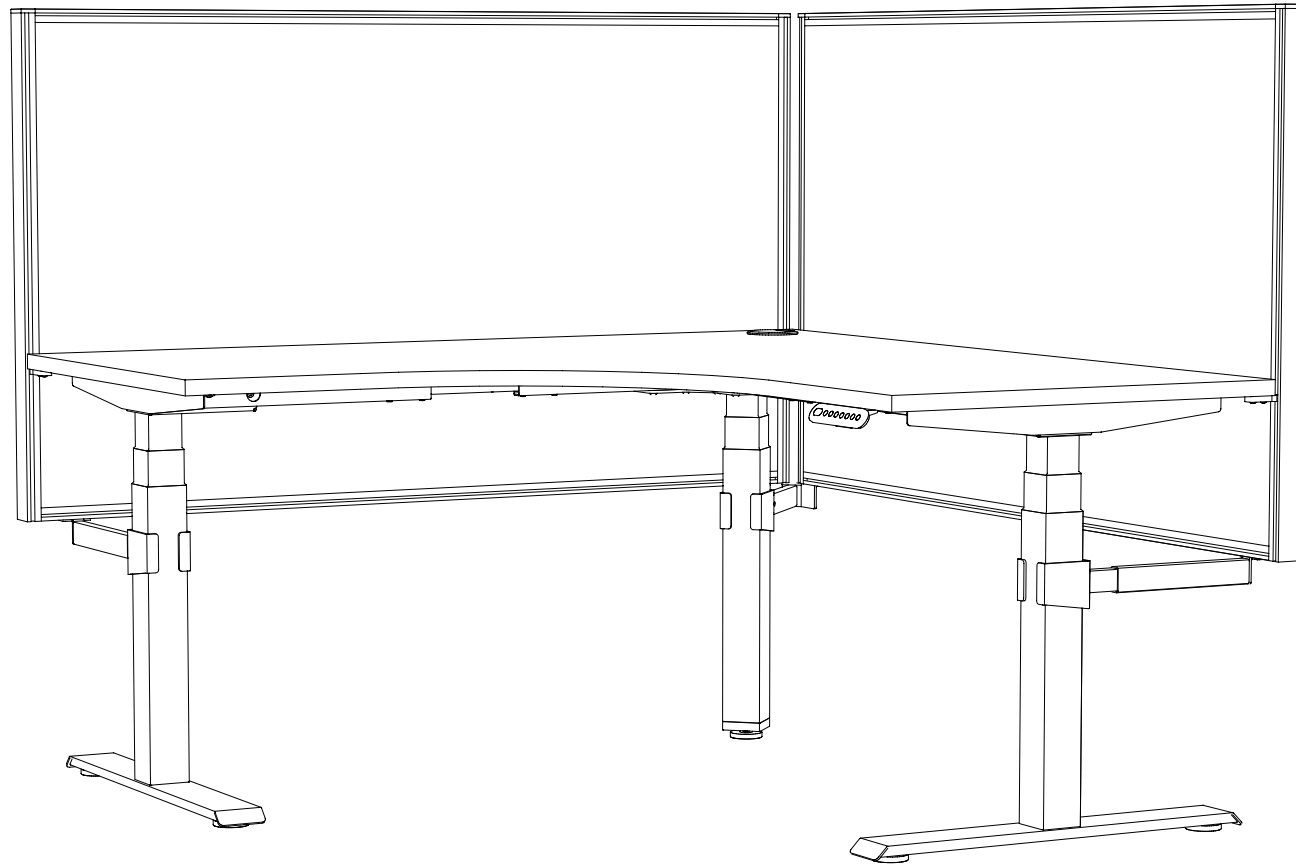


Optional Studio50 or Active25 Screen

Assembly Instructions


Parts - Active25

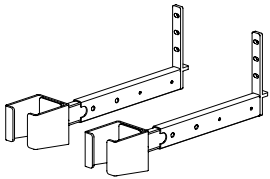

Workstation Side
Brackets L/R Pair

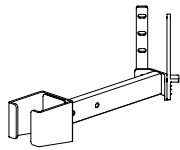

Workstation Corner
Bracket

 


Tapping Screw
12 x 6.3x25

Optional Studio50 or Active25 Screen

Assembly Instructions

Page 26



Step 1 - Active25

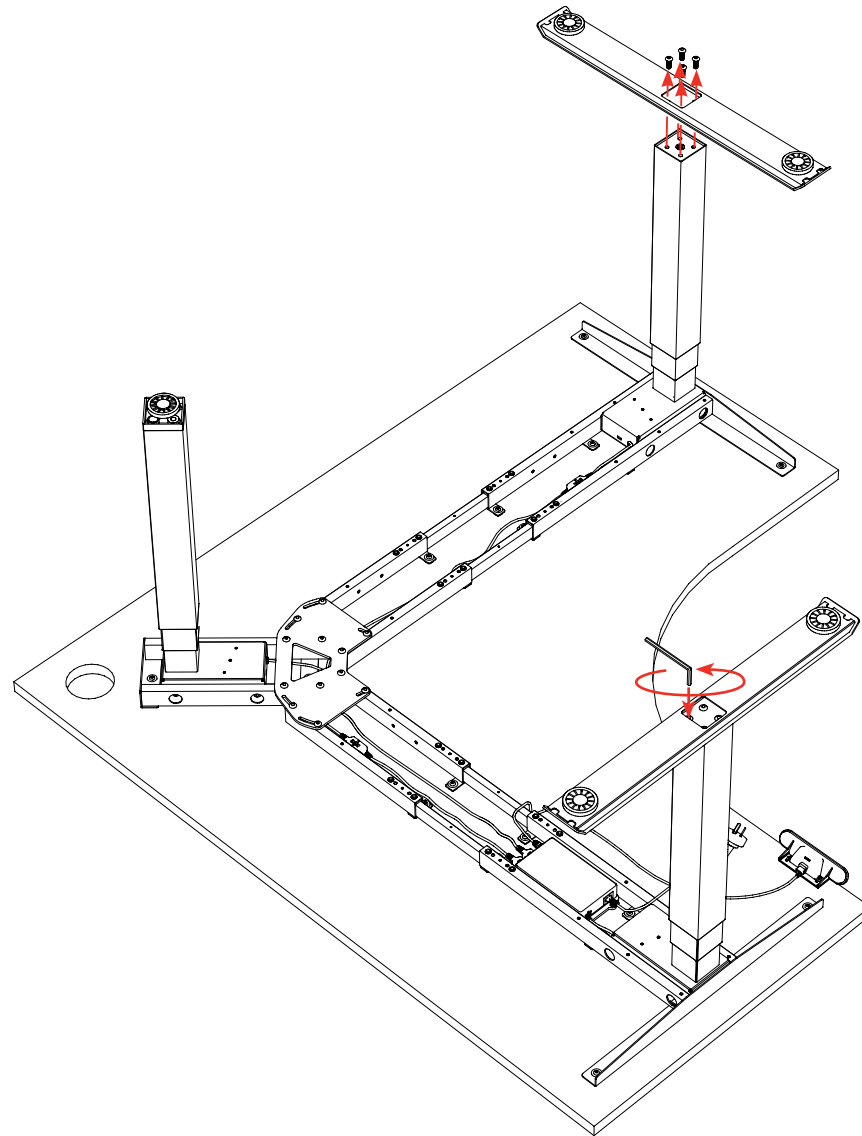

Optional Studio50 or Active25 Screen

Assembly Instructions

Step 2 - Active25

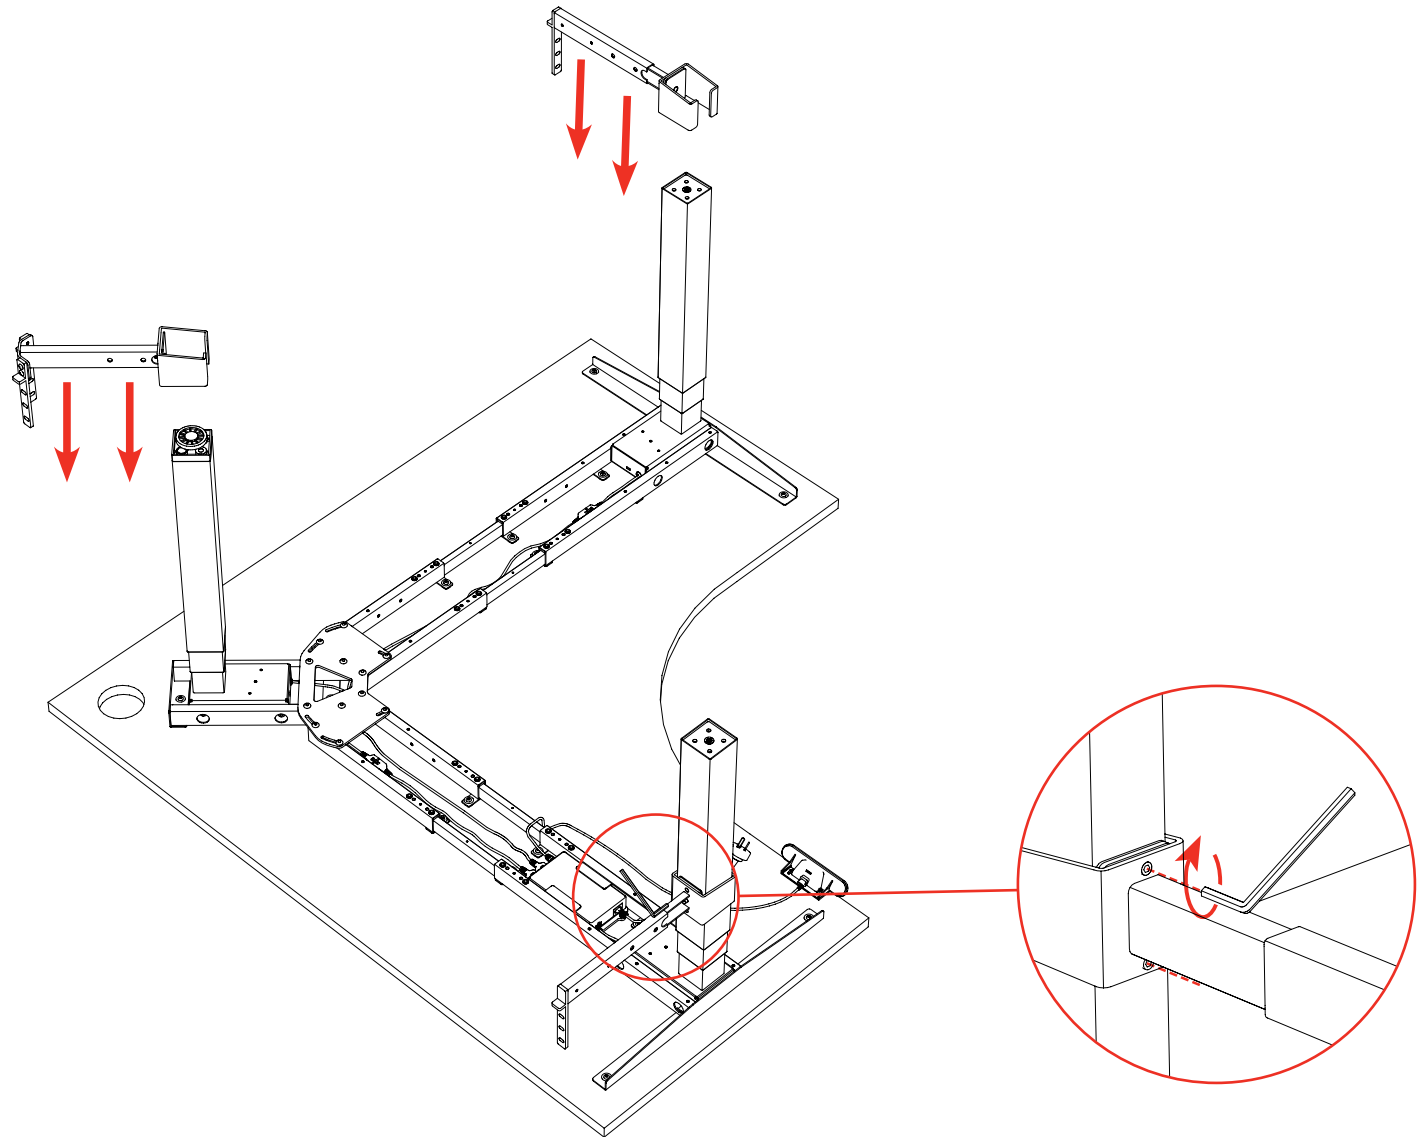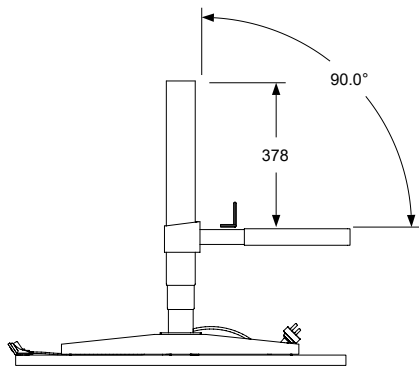


Optional Studio50 or Active25 Screen

Assembly Instructions

Page 28


Step 3 - Active25

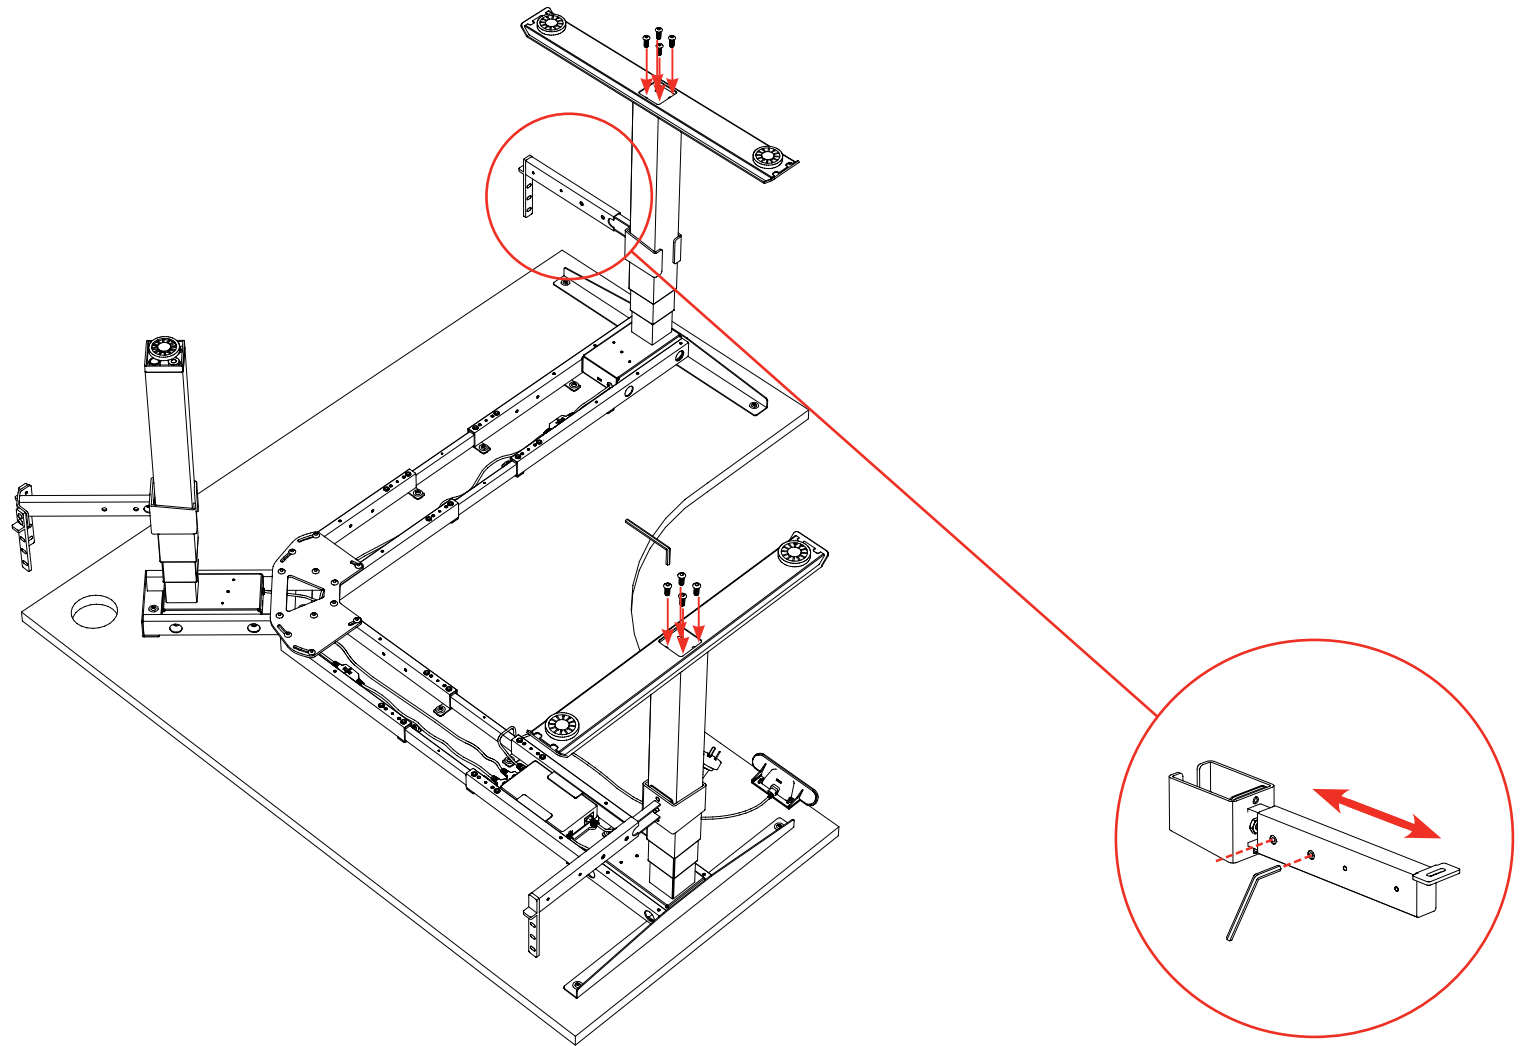


Optional Studio50 or Active25 Screen

Assembly Instructions

 Step 4 - Active25



Tapping Screw
12 x 6.3x25

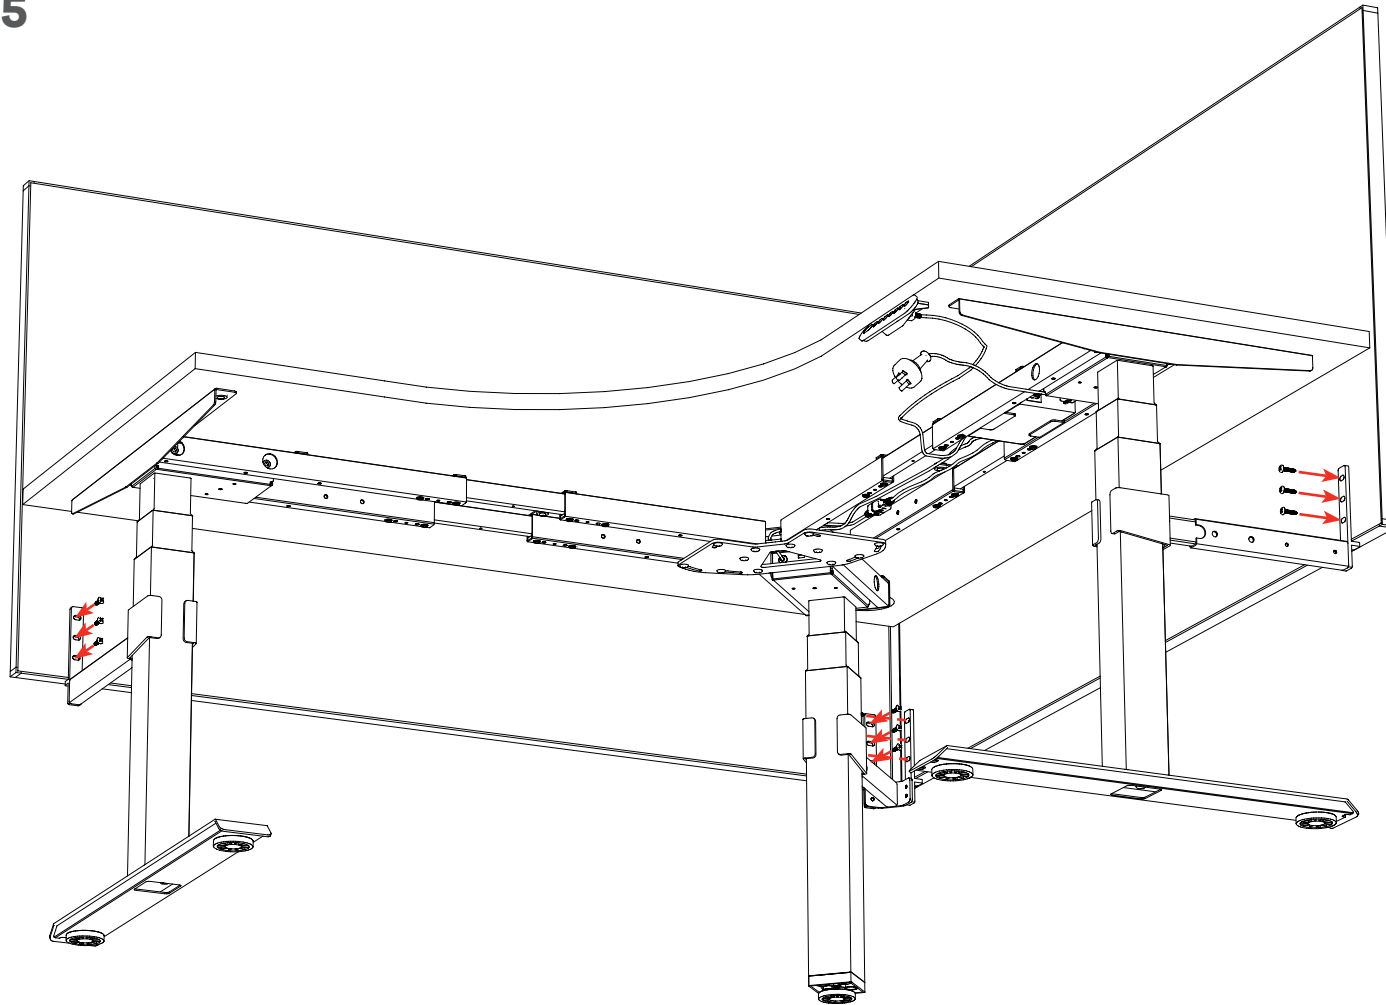


Optional Studio50 or Active25 Screen

Assembly Instructions


Page 30

Complete - Active25

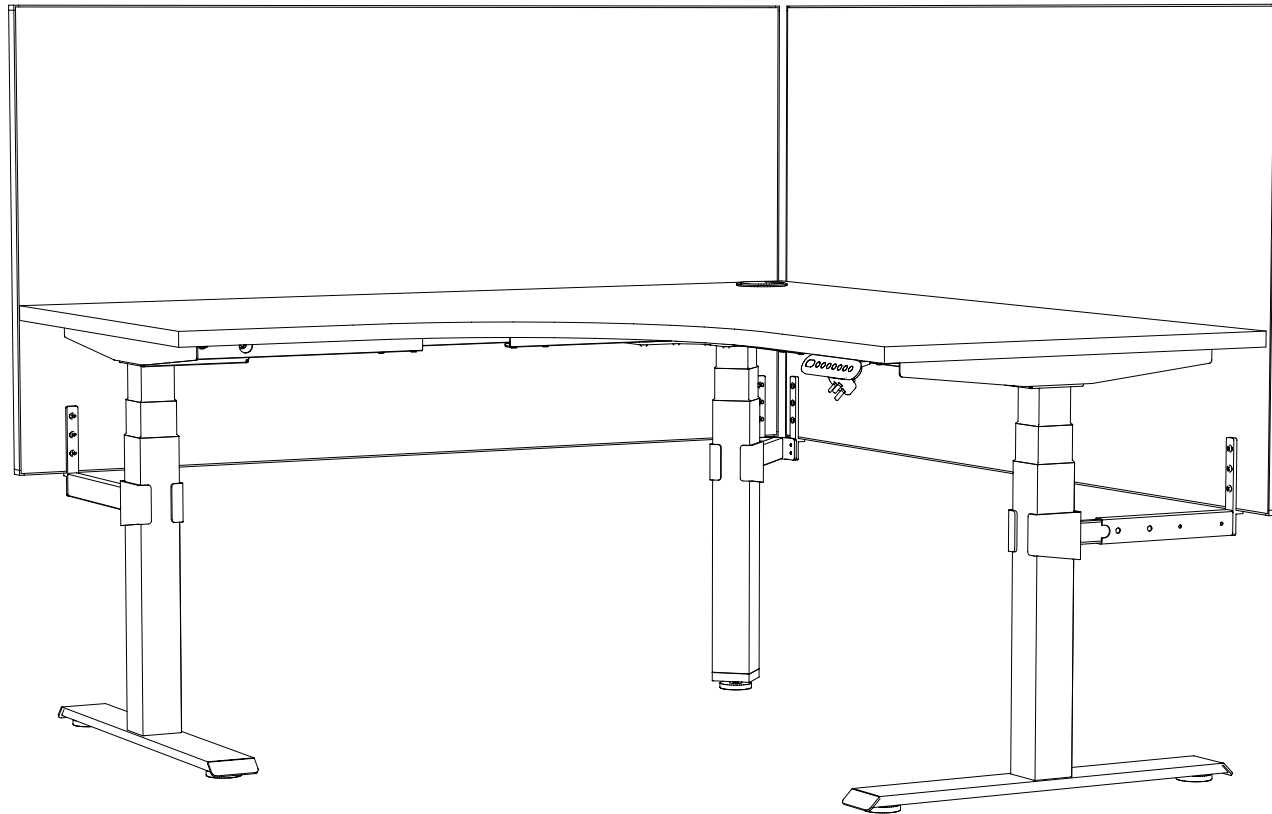

Velocity - Electric Digital Handset Functions

Assembly Instructions

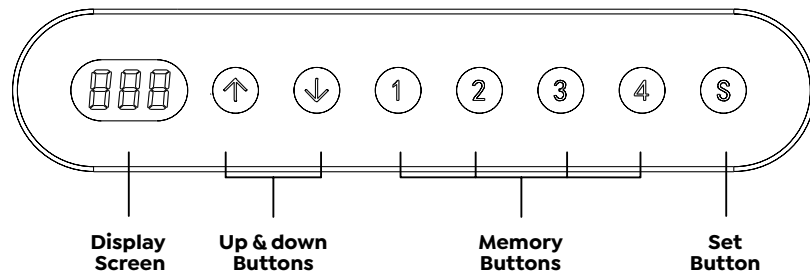

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and 1/2/3/4/S buttons are locked correspondingly, you should press Up or Down key first, it can be used when the display screen light up.

OPERATION

- **Display Screen** - Shows current height of desk.
- **Up and Down Button** - Press and hold the “UP” or “DOWN” button to adjust desk height until you reach an optimum height.
- **How to Set Memory Buttons** - Adjust desk to preferred height using “UP” & “DOWN” buttons. Press and hold a memory button for 5 seconds until you hear a beep, the memory height is now saved.
- **Memory Buttons** - After setting memory buttons, the desk will auto adjust to the saved height.
- **Set Button** - Auto adjusts desk height to 72cm. This height is the standard optimum height when sitting.

FACTORY RESET

Restore the Factory Settings: When the desk is assembled for the first time, a new controller is installed or the parameters need to be restored to the factory settings, press the “DOWN” and “UP” buttons simultaneously, you will hear the first “beep” after about 5 seconds and a second “beep” after 10 seconds. When the display screen shows “RST”, please refer to “Calibration Step 1” below.

CALIBRATION

1. When “RST” is on the display screen, press the “DOWN” button until the desk frame reaches its lowest point. After hearing a “beep” and desk frame rebounds, calibration is completed (Note: The button cannot be released during this operation, otherwise the calibration will fail).
2. Forced Calibration: Press the “DOWN” button until the desk frame reaches its lowest point, then release the button and press it again for about 5 seconds until hear a “beep” and desk frame rebounds, and the calibration is completed.

SAFETY FUNCTION

When the desktop is moving up or down and encounters reverse resistance, the desk will rebound.

ERROR CODES

Error and Fault	Solution
E01, E06, E07 = Power Fault	Power off and restart. If fault still exists there is a motor problem.
E02 = Synchro Height Over 10mm	Implement the calibration step 1.
E04 = Handset Fault	Unplug and replug the cable of hand set. Power off and restart.
E05 = Anti-collision Alert	Rebound reminder, normal condition.
E08 = Desktop Sloping	Check the desktop.
E11, E21, E40, E41 = Connection Cable Failure	Check the connecting cable.
E12, E22, E42, E43 = Controller Fault	Exchange the controller.
E14~E17, E24~E27 = Motor Fault	Change motor.
E18, E28 = Overloading	Reduce the loading.
Hot = Overload Power Protection	Automatic recovery after stop using for 20 minutes.

ADVANCED FUNCTION SETTINGS

Limited Height Setting: Press “UP” and “DOWN” buttons for 5 seconds until you hear a ‘beep’, limited height setting success.

(minimum limited height < 96, maximum limited height > 97).

Cancel the Function: Run to the limit height and press “UP” and “DOWN” buttons again for 5 seconds until you hear a beep sound, limited height cancel.

Lock and Unlock: Press “UP” and “S” buttons, screen display “LOC”, system locked. Press “DOWN” and “S” buttons, screen display “LOC”, system unlocked.

Press “SET” button for approx 10 seconds until digital screen displays S-1.

Press the “UP” or “DOWN” buttons to choose from the following.

S-1 = Metric and Inch Exchange

Select “up” & “down” buttons to navigate to selection

0 - Metric

1 - Inch

Press “SET” button to make selection and save.

S-2 = Anti Collision Sensitivity

Select "up" & "down" buttons to navigate to selection

0 - Shut down

1 - The most insensitive

8 - The most sensitive

Press "SET" button to make selection and save.

S-3 = Sensitivity of Upwards Anti Collision

Select "up" & "down" buttons to navigate to selection

0 - Shut down

1 - The most insensitive

8 - The most sensitive

Press "SET" button to make selection and save.

S-4 = Sensitivity of Downwards Anti Collision

Select "up" & "down" buttons to navigate to selection

0 - Shut down

1 - The most insensitive

8 - The most sensitive

Press "SET" button to make selection and save.

S-5 = Basement Height Setting

Use "up" & "down" buttons to adjust the basement height.

Press "SET" button to make selection and save.

S-6 = Memory Key Operation

Select "up" & "down" buttons to navigate to selection

0 - Long pressing desk running, hands off desk stop running

1 - Click desk running, second click to stop running

Press "SET" button to make selection and save.

S-7 = Overheat Protection

Select "up" & "down" buttons to navigate to selection

0 - Shut down

1 - Turn on (Continuous operation for two minutes, error HOT)

Press "SET" button to make selection and save.

S-8 = Desktop Tilt Angle Setting

Select "up" & "down" buttons to navigate to selection

0 - Shut down

1 - 0.5°

2 - 1.0°

3 - 1.5°

4 - 2.0°

5 - 2.5°

6 - 3.0°

7 - 3.5°

8 - 4.0°

Press "SET" button to make selection and save.



0800 143 143
info@knightgroup.co.nz
knightgroup.co.nz