

Cubit Tambour


Assembly Instructions

Tools Required: Powered Screwdriver



Assembly Instructions

- To prevent possible scratches or damage, assemble the credenza on a soft surface such as a blanket, carpet or packaging.



**Recommended
2-person Step**

PARTS LIST

Item	Decription	Quantity	Item	Decription	Quantity
A	Top panel	1	c1	6x35 Cam Bolt	44
X	Left side panel	1	d1	8x30 Dowel Pin	56
X1	Left side panel	1	c2	5/8" Cam Cover	44
Z	Right side panel	1	s1	4x25 Screw	12
Z1	Right side panel	1	m2	Metal Leg	4
D	Back panel	1	p1	Threaded Dowel Pin	10
D1	Back panel	1	s20	6x60 Fix Bolt	4
G	Bottom panel	1			
O	Batten	2			
E	Moveable shelf	2			



(c1) 6x35 Cam Bolt-44



(d1) 8x30 Dowel Pin-52




(c2) (5/8") Cam Cover-44



(s1) 4x25 Screw-12



(p1) Threaded Dowel Pin-10

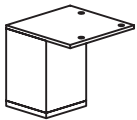

(m2) Metal Leg-4




(s20) 6x60 Fix Bolt-4

Pre-installed parts




(c5) Cam

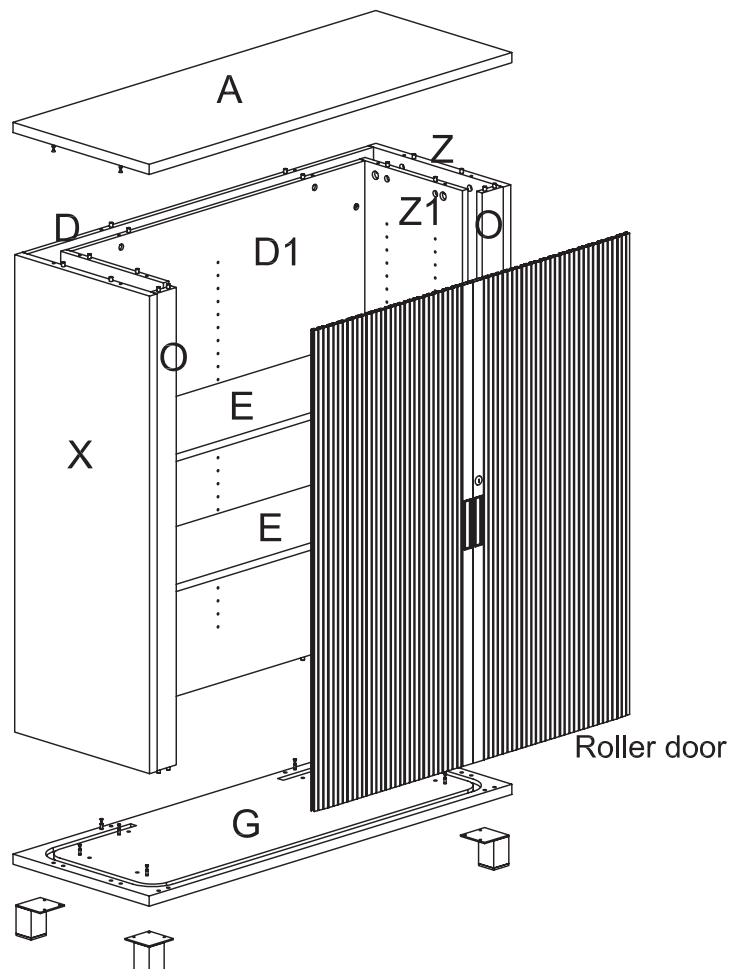

Step 1


Preparation for Top panel A, immovable panel G, Vertical O, Left side panel X, X1, Right side panel Z, Z1, back panels D, D1.

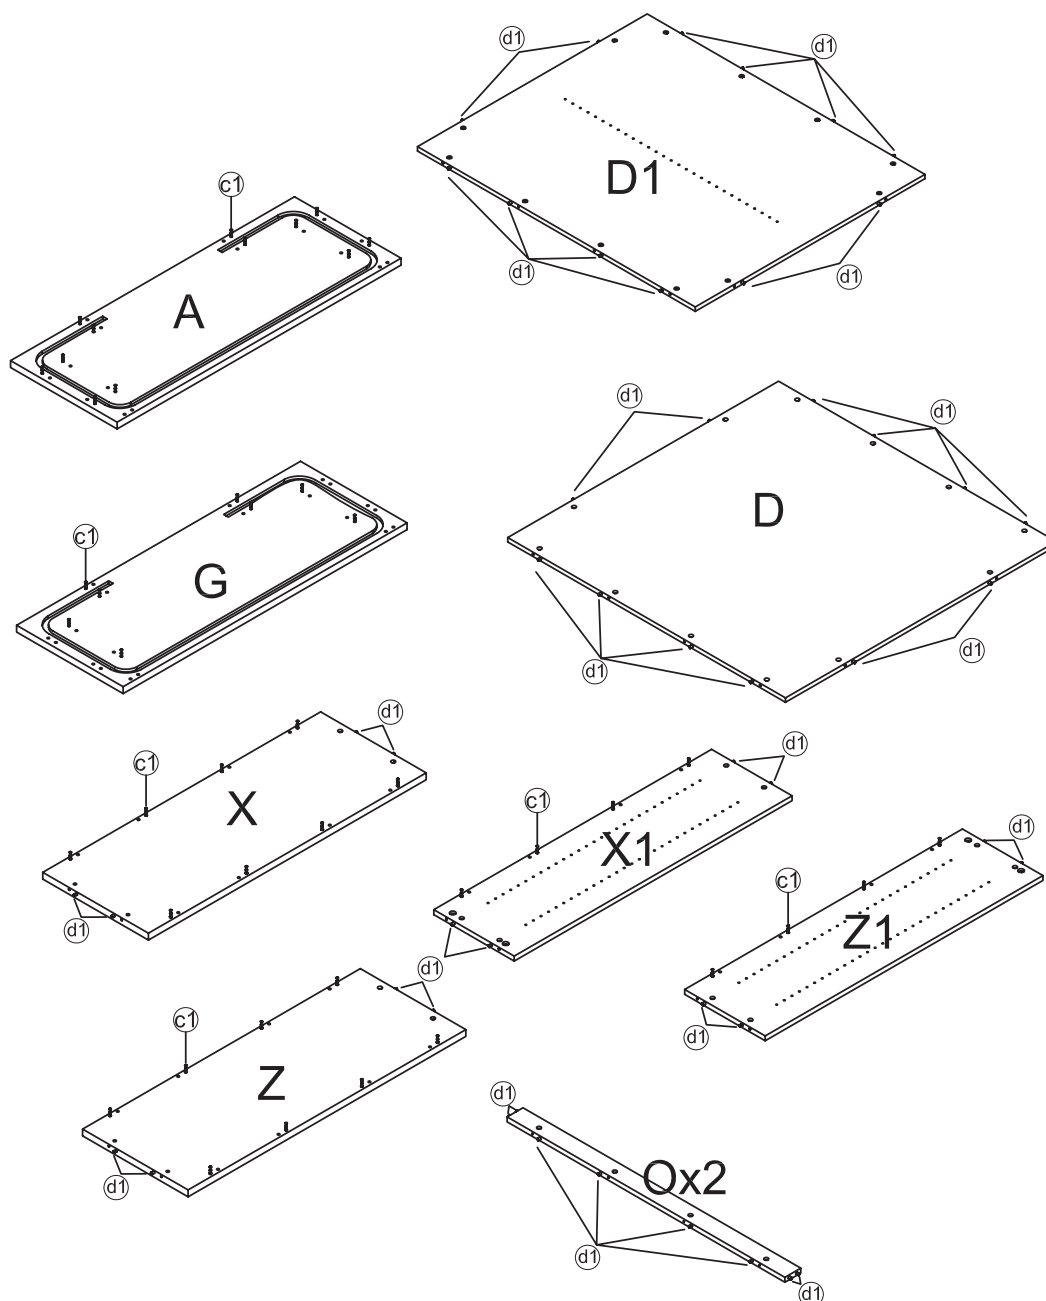

1. Insert cams bolts (c1) and dowel pins (d1) into panels A, G, X, X1, Z and Z1 as illustrated above.
2. Insert dowel pins (d1) into panel D, D1, O as illustrated above.


Step 2

Insert cam bolts (c1) on panel X and Z into cams on panels D, O and tighten in a clockwise direction.

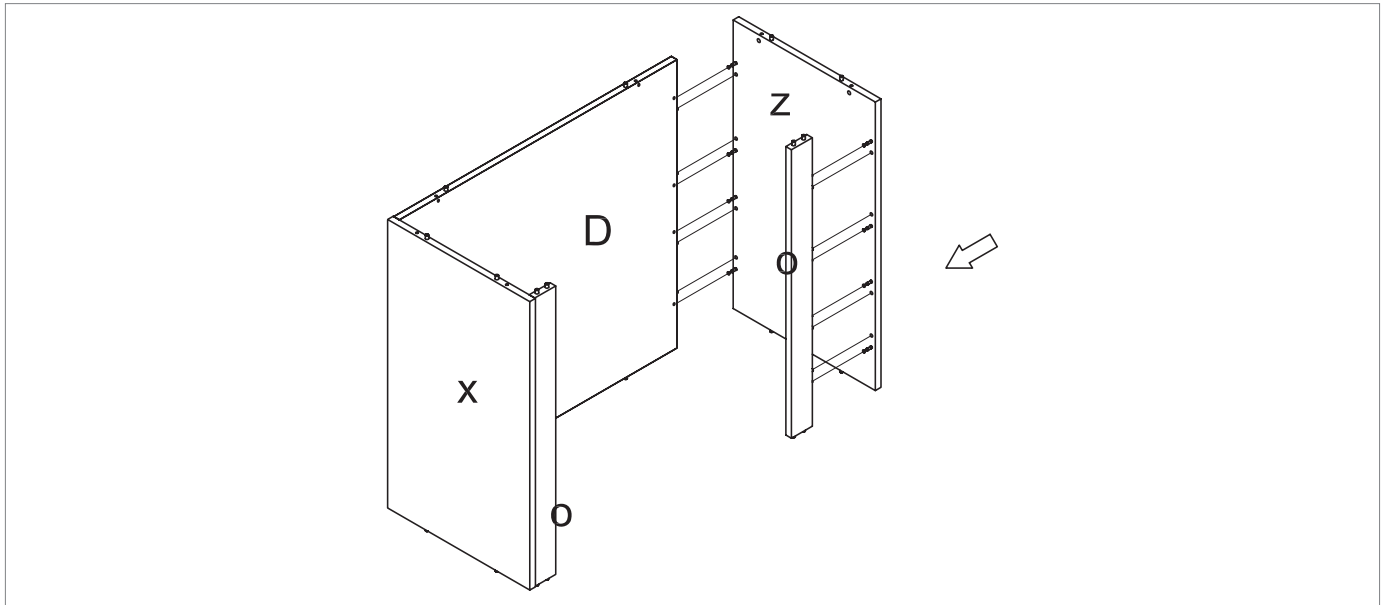


Step 3

Insert cam bolts (c1) on panel X1 and Z1 into cams on panels D1, O and tighten in a clockwise direction.

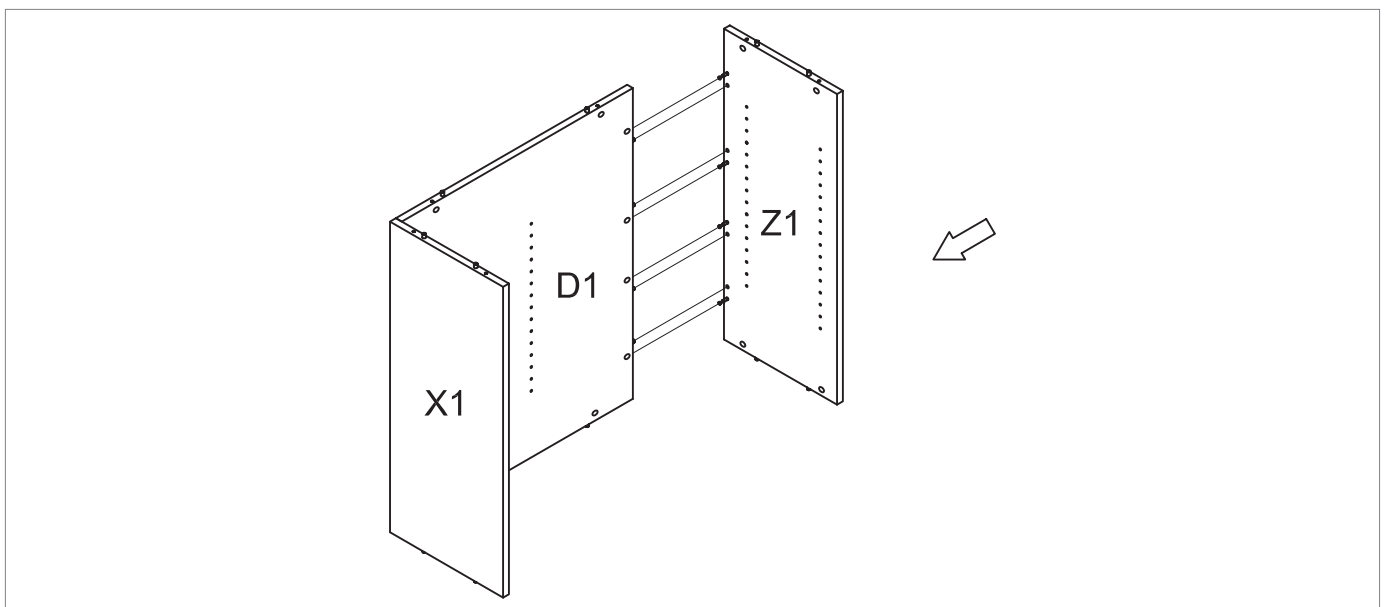


Step 4

Insert cam bolts (c1) on panel X, Z, D, O, D1, X1, Z1 and tighten in a clockwise direction, then tighten the two cams of the panel X depend on the through hole in the panel Y.

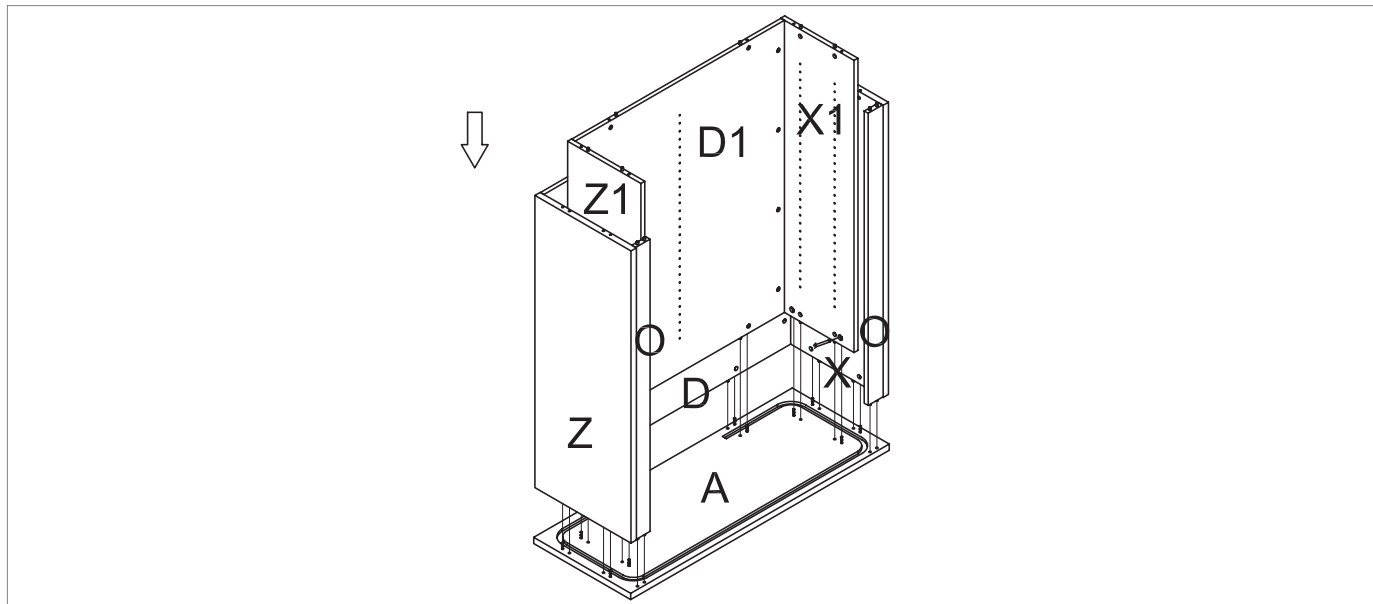


Step 5

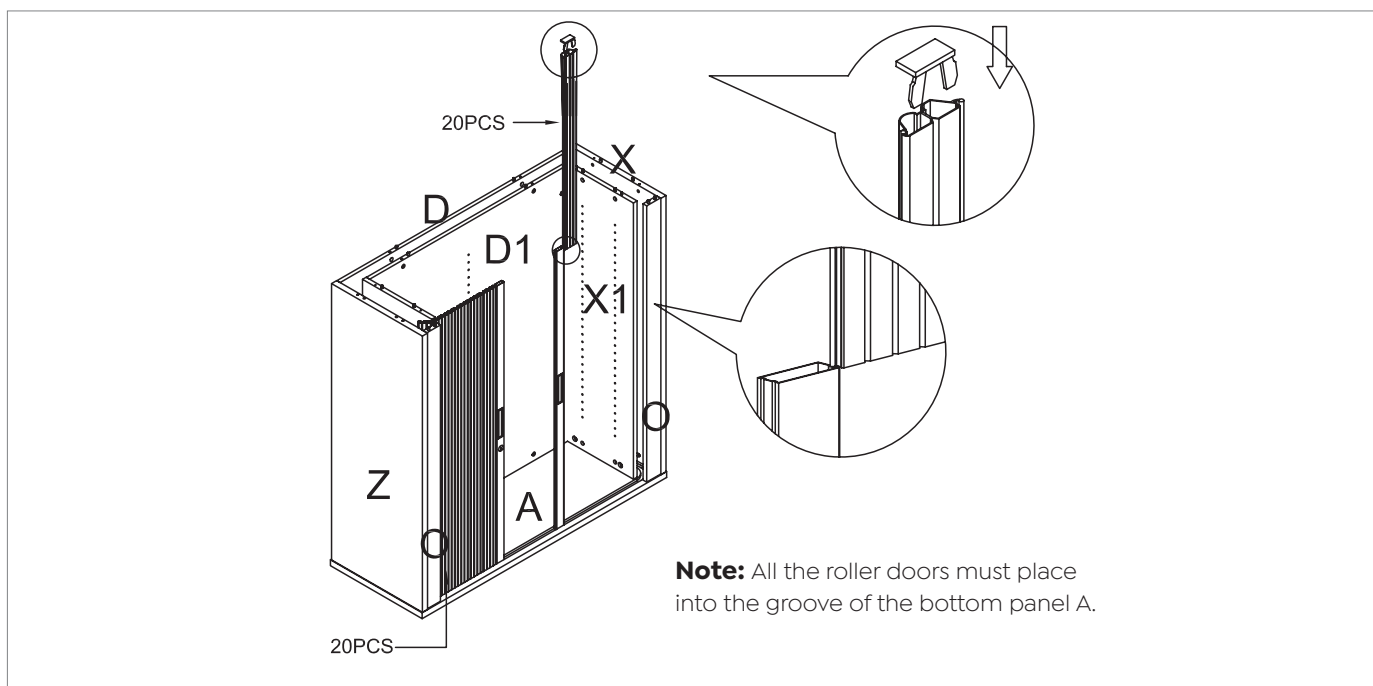


Step 6

Insert cam bolts (c1) on panel G into cams on panels X, X1, D, D1, Z, Z1 & O, and tighten in a clockwise direction. Then tighten the panel bottom G on the panel X with fix bolt (s20). Attached legs to panel G with provided screws.

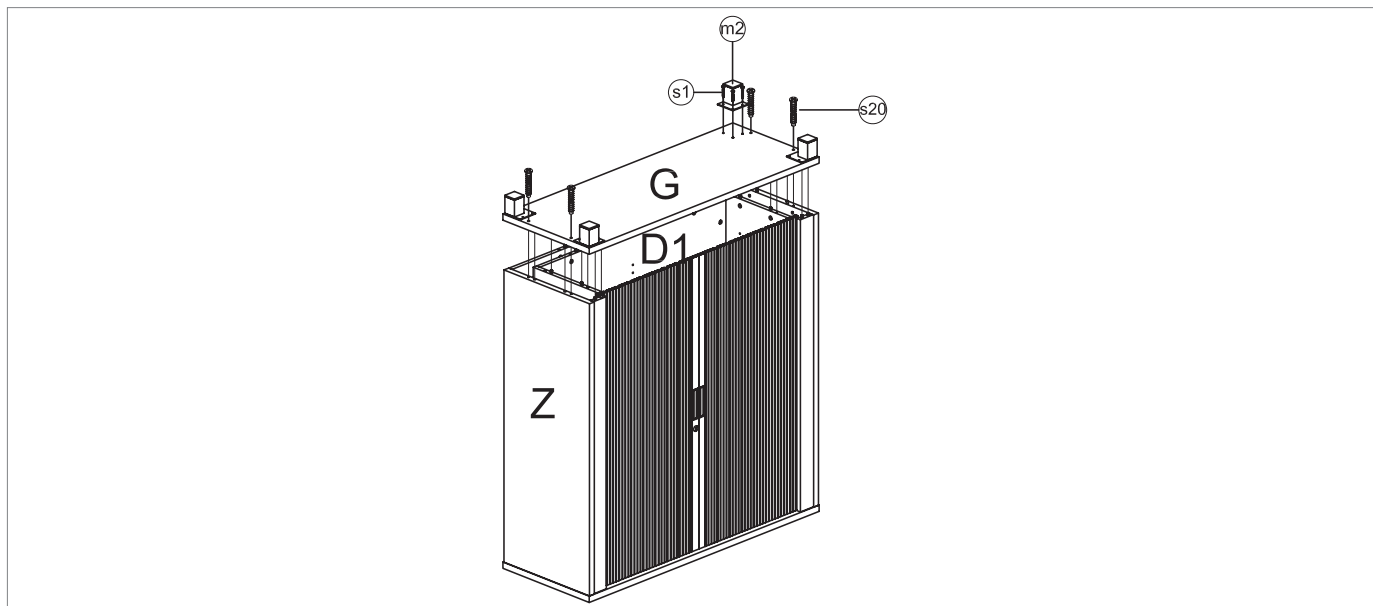

Step 7

Insert threaded dowel pins (p1) into panels D1, X1, and Z1, put the panel E on the top of threaded dowel pins (p1), place the cam covers (c2) on the top of cams.

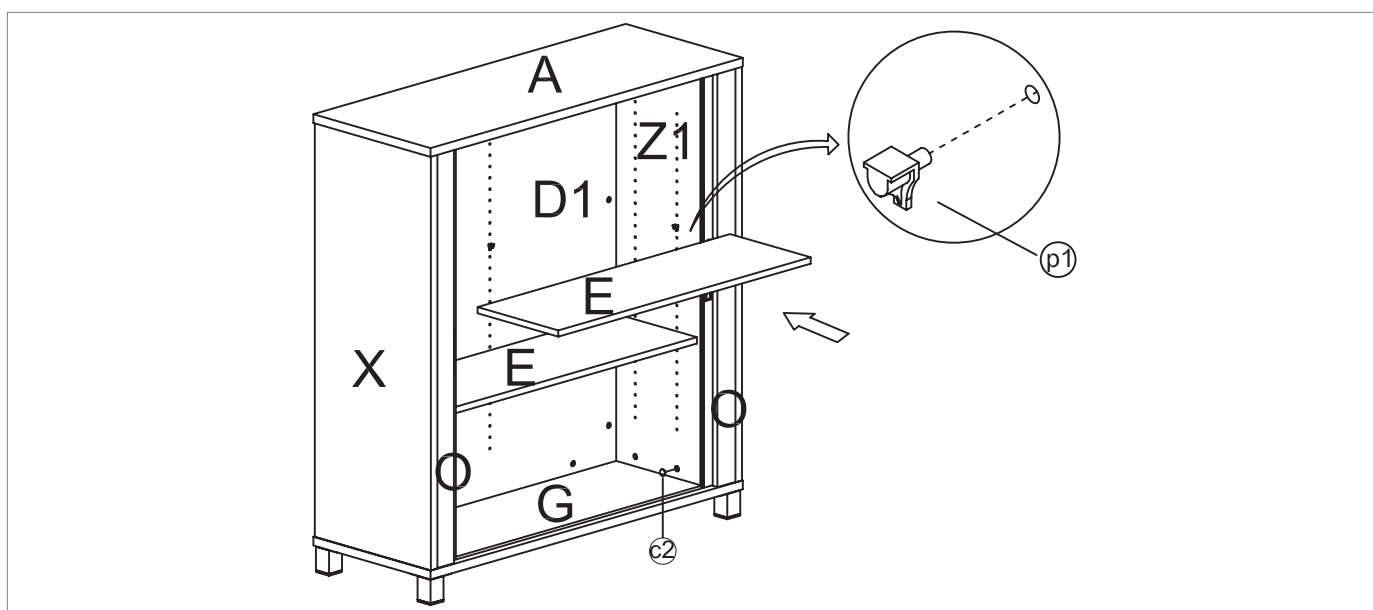

Complete

