

Cubit Planter Box

Assembly Instructions


Tools Required: N/A




Cubit Planter Box

Assembly Instructions

- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.



**Recommended
2-person Step**

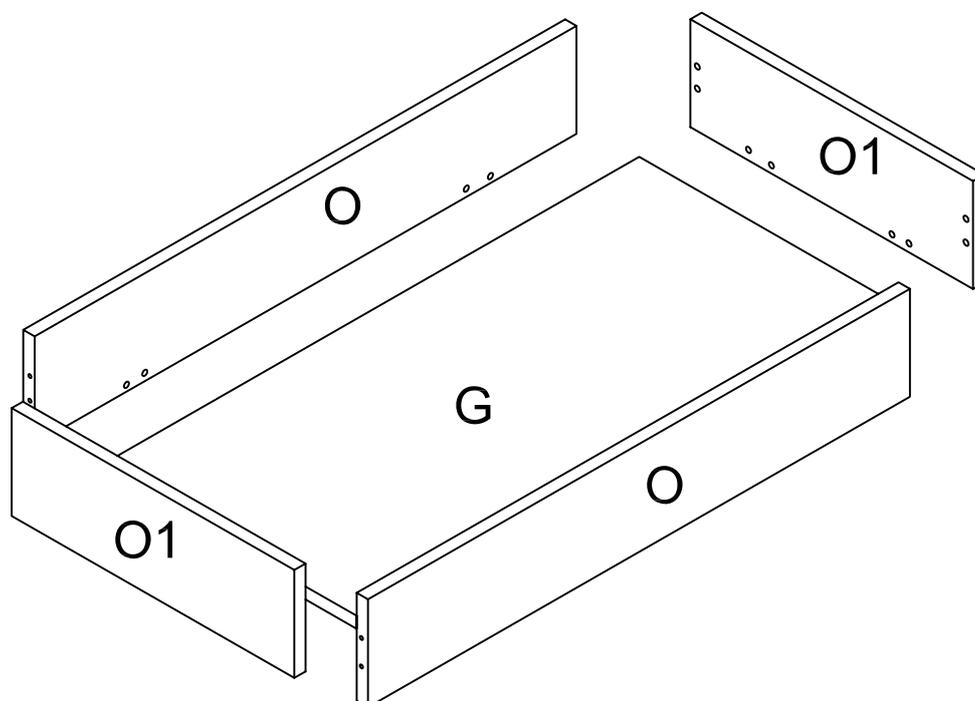

PLEASE NOTE: Plants are not included. Living plants are NOT to be planted directly into the Cubit Planter Box, they will require a pot and base to catch any water when plants are watered.

Parts

Item	Description	Qty	Item	Description	Qty
O	Side Panel	2	c2	5/8" Cam Cover	14
O1	Side Panel	2			
G	Bottom Panel	1			



c2 14 x 5/8" Cam Cover


Pre-installed Parts



c5 Cam


Step 1

Connect cam bolts and dowels on panel G to the holes on panel O and tighten in a clockwise direction.

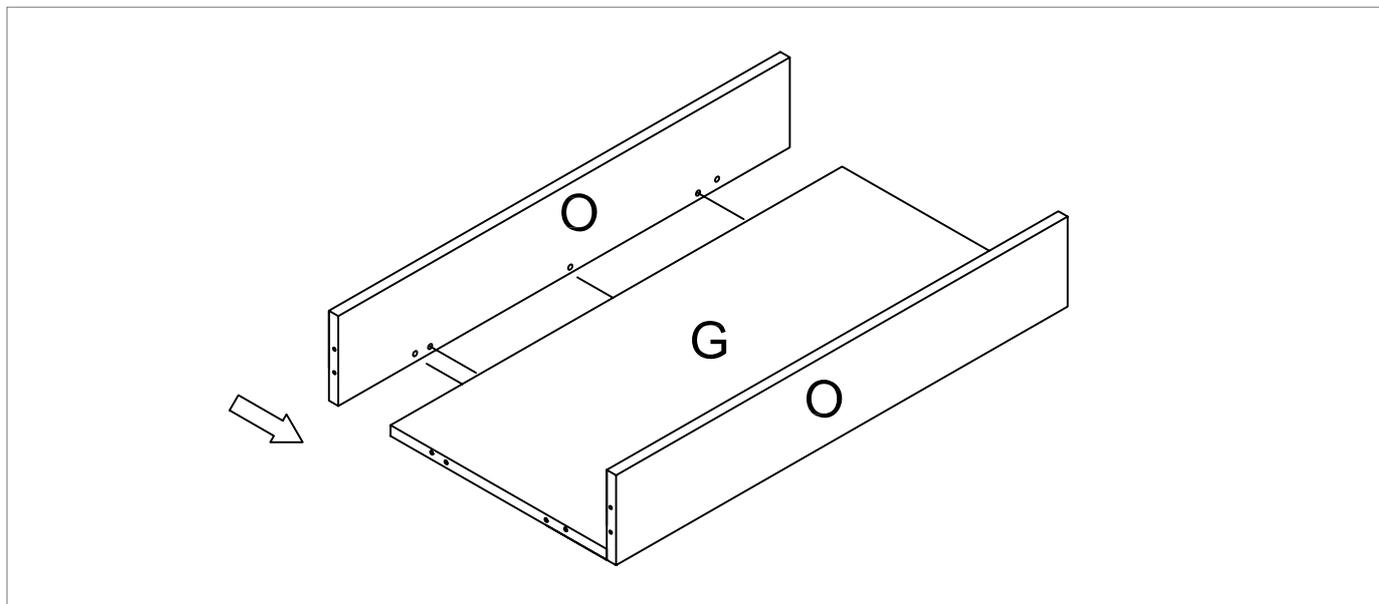


Step 2

Connect cam bolts and dowels on panel G and O to the holes on panel O1 and tighten in a clockwise direction 2. Cover the tops of the cams with cam covers (c2).

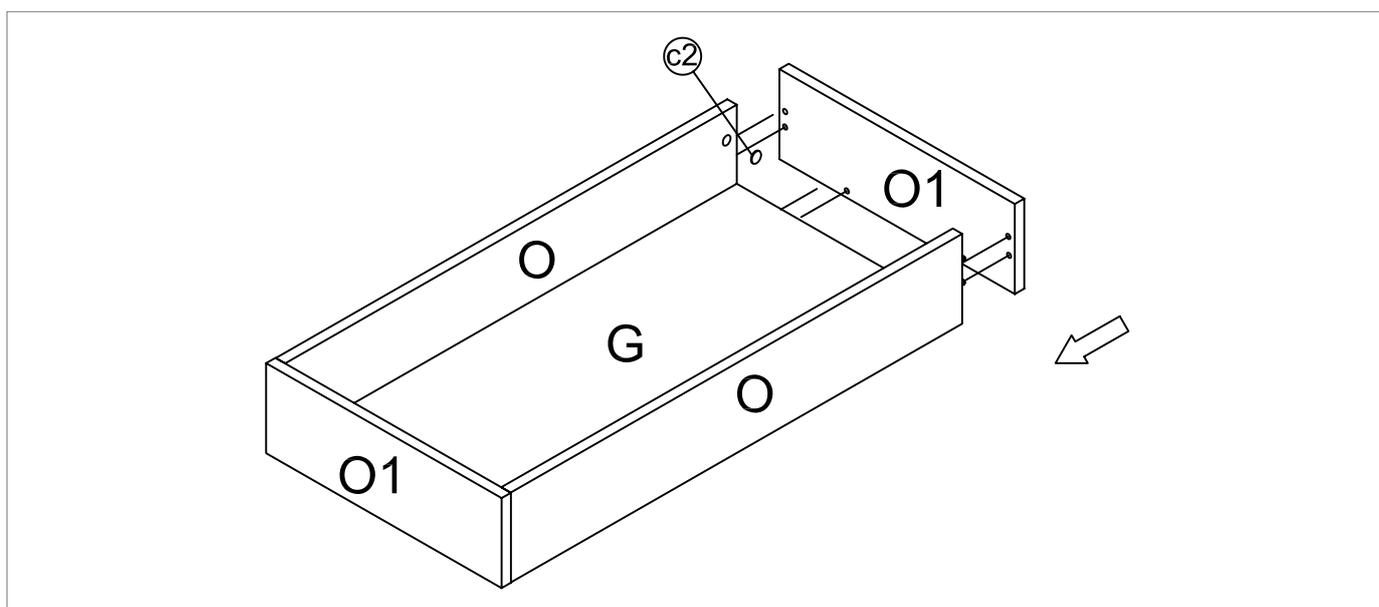

Step 3

Remove the double sided tape and stick the tackboard on the top of the Cubit Tambour.

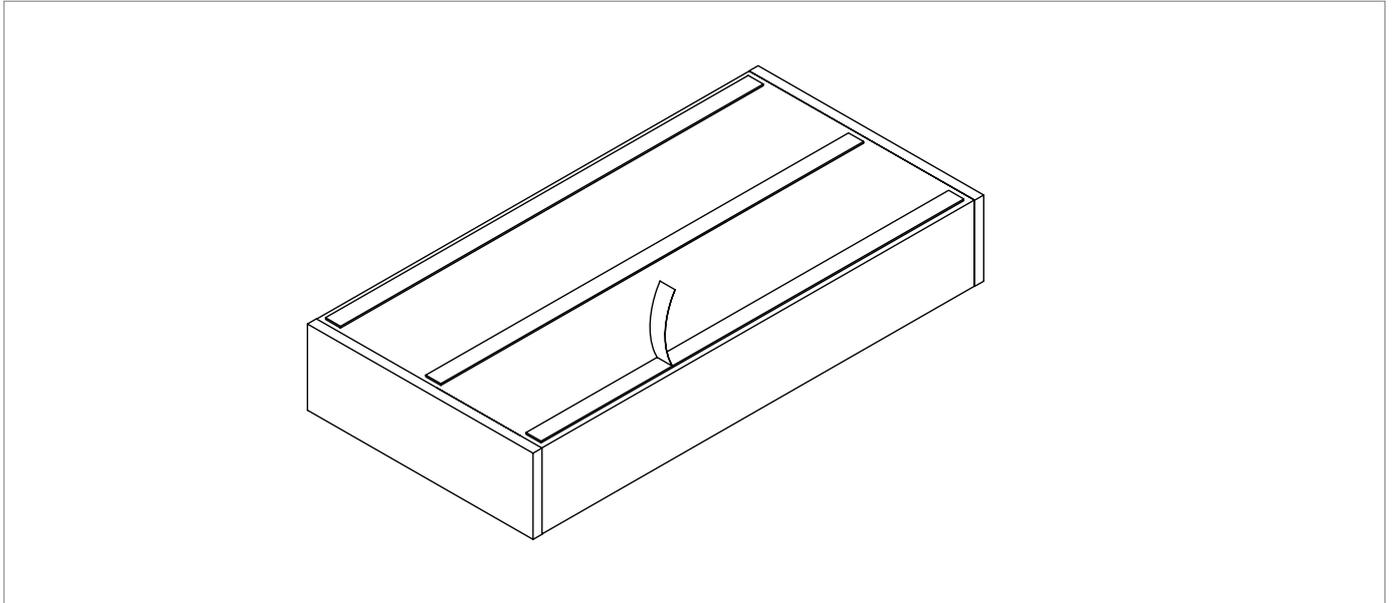

Complete

