


# Cubit Caddy

## Assembly Instructions

**Tools Required:** Powered Screwdriver



- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

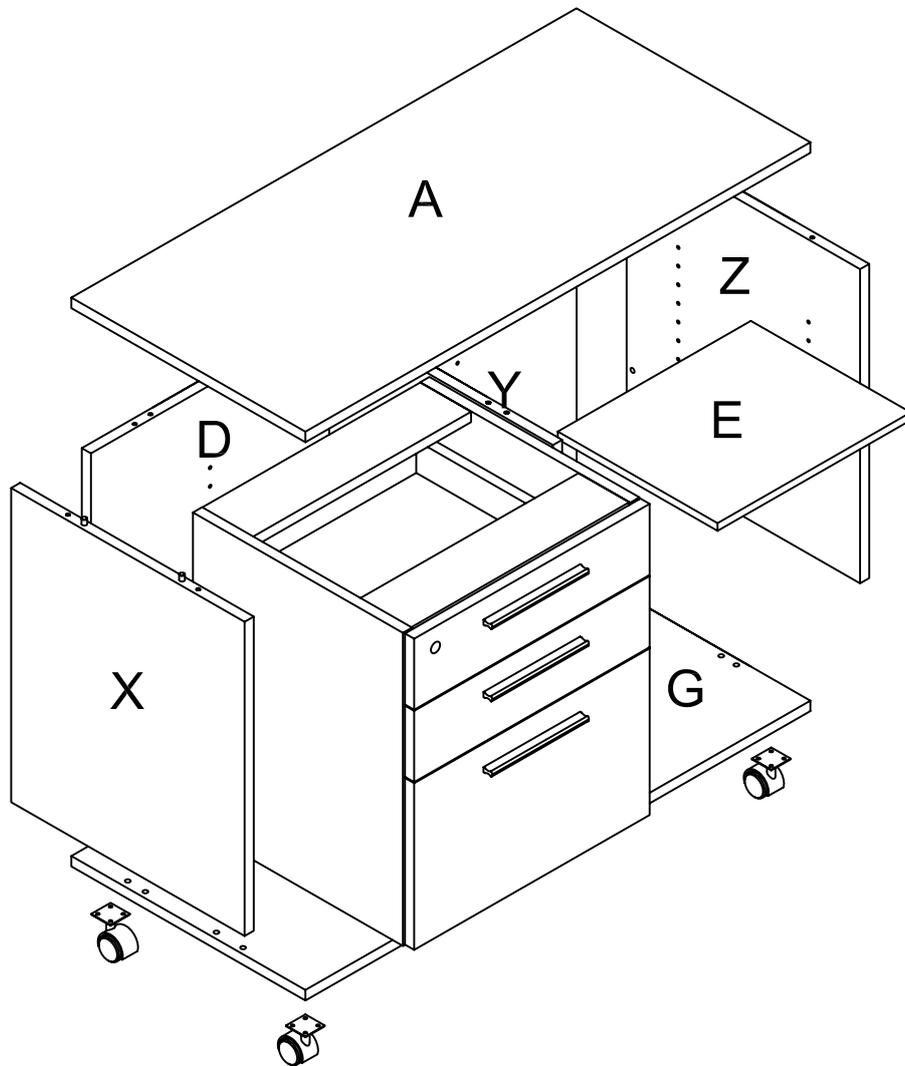

## Parts

Item	Description	Qty	Item	Description	Qty
A	Top Panel	1	<b>c2</b>	5/8" Cam Cover	18
X	Left Side Panel	1	<b>p1</b>	Threaded Dowel Pin	16
Z	Right Side Panel	1	<b>s1</b>	ST5*16 Screw	18
D	Back Panel	1	<b>s2</b>	4*25 Screw	8
G	Bottom Panel	1	<b>t3</b>	Castor	4
E	Moveable Shelf	1			
Y	Vertical Panel	1			



**p1** 5 x Threaded Dowel Pin



**c2** 24 x 5/8" Cam Cover



**s1** 20 x ST5\*16 Screw



**t3** 5 x Castor



**s2** 4 x 4\*25 Screw


### Pre-installed Parts



**c5** Cam


## Step 1

Connect Cam bolts and dowels on panel D to the holes on panel X and Z and tighten in a clockwise direction.

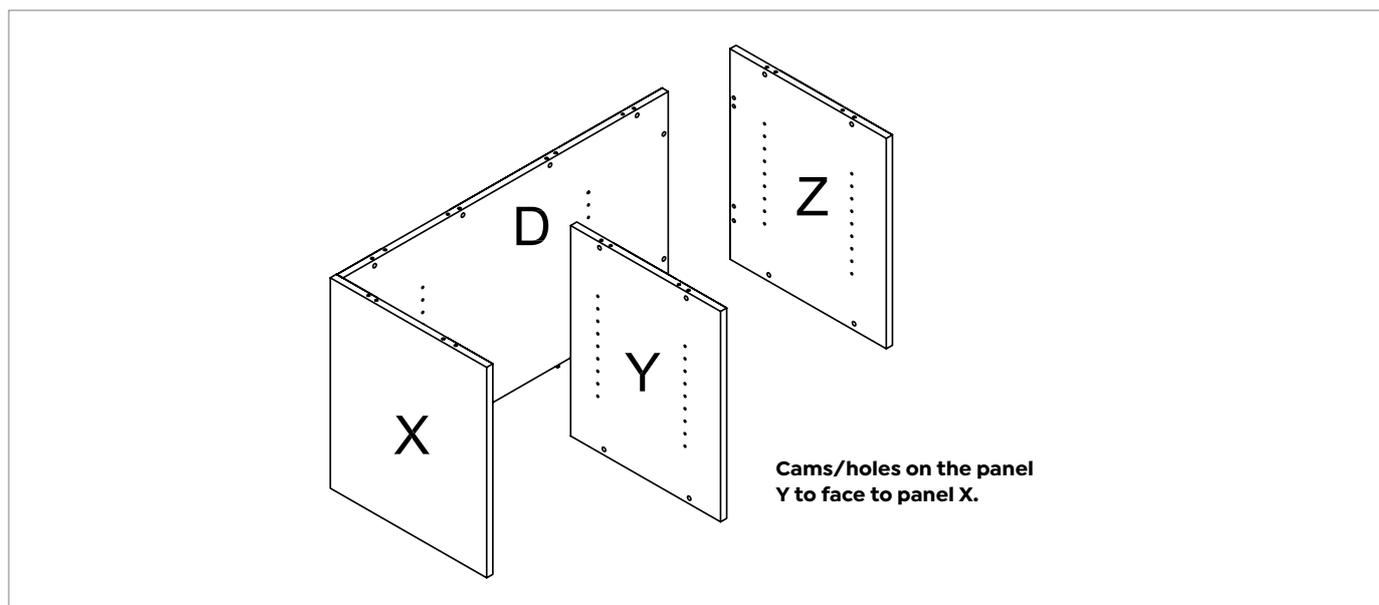


## Step 2

Assemble castor (t3) with screws (s1) on bottom of panel G.

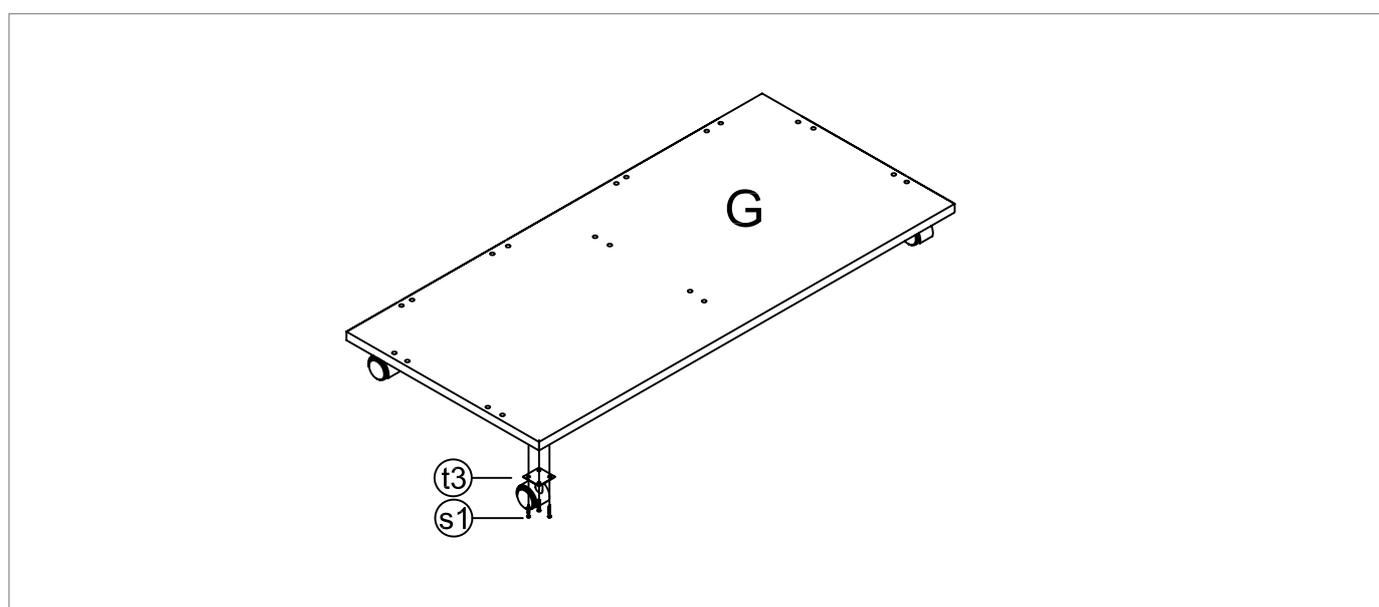


## Step 3

Connect cam bolts and dowels on panel X, Z, Y and D to the holes on panel A and G and tighten in a clockwise direction.

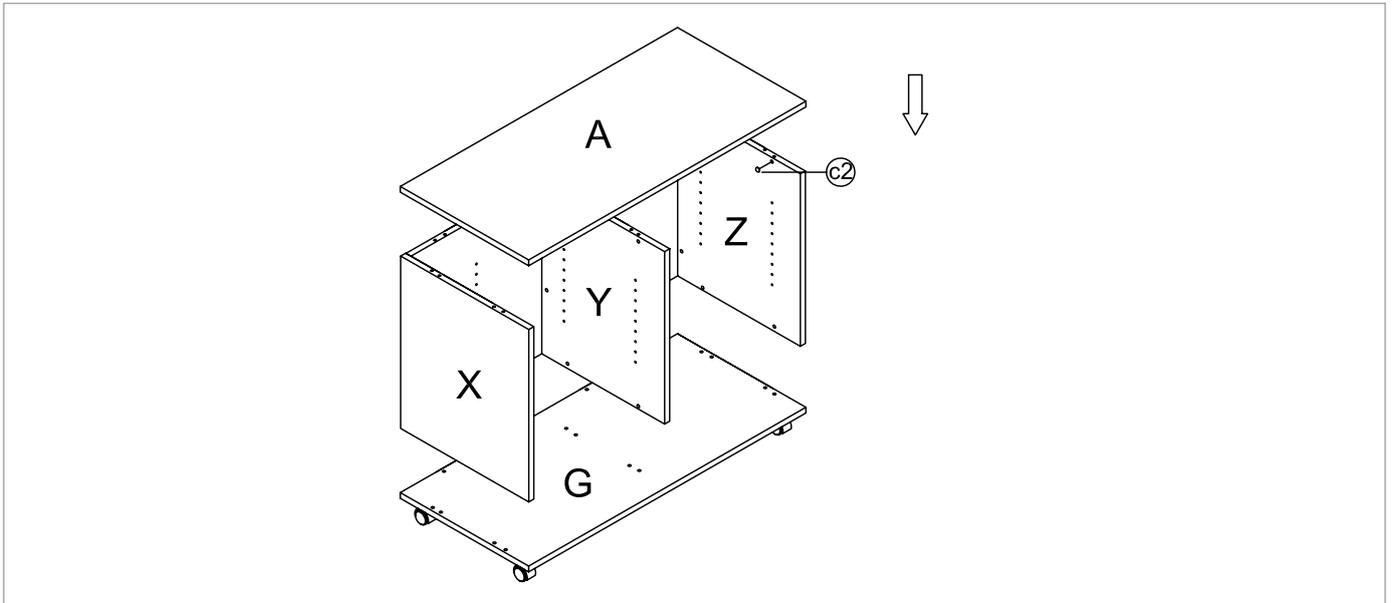

## Step 4

Insert threaded dowel pins (p1) into panels X, D, Y and Z. Put the TWO panels E on the top of threaded dowel pins (p1). Insert the pedestal into the caddy.

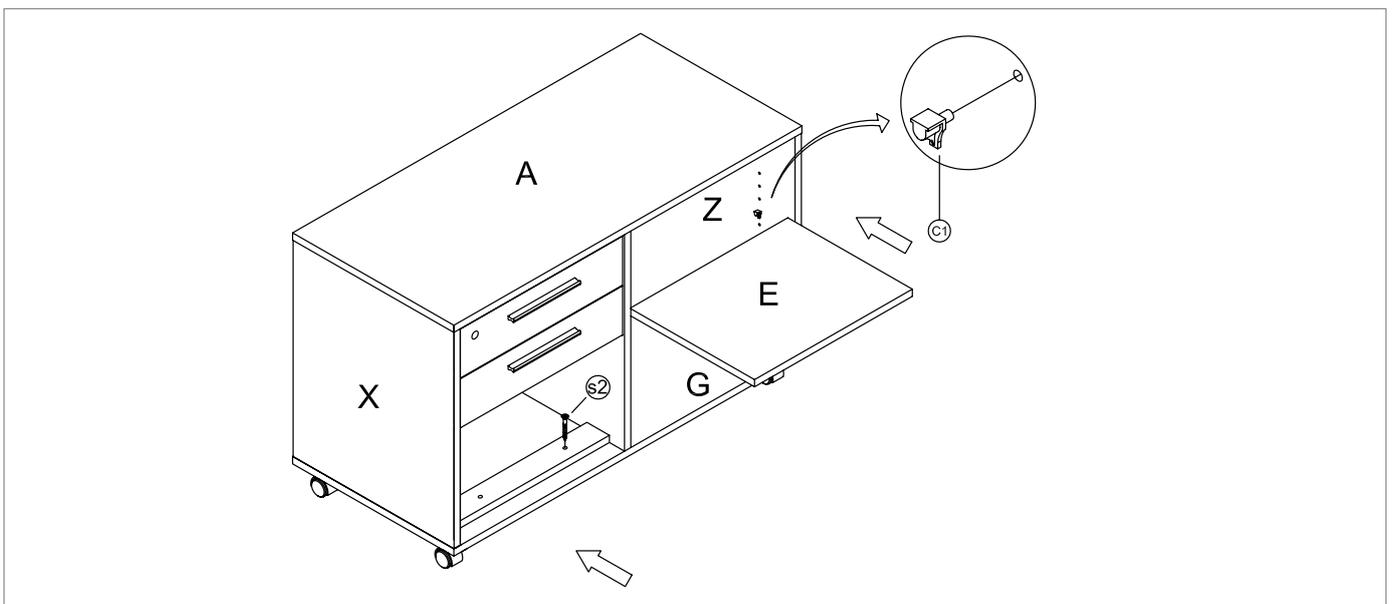

## Complete

---

