




Sanitiser Stand

Assembly Instructions

Tools Required: Screwdriver (Pozidrive)




Parts:

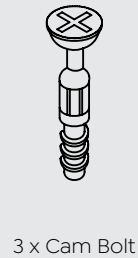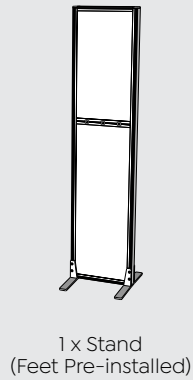


Step 1

Insert cam bolts x3.

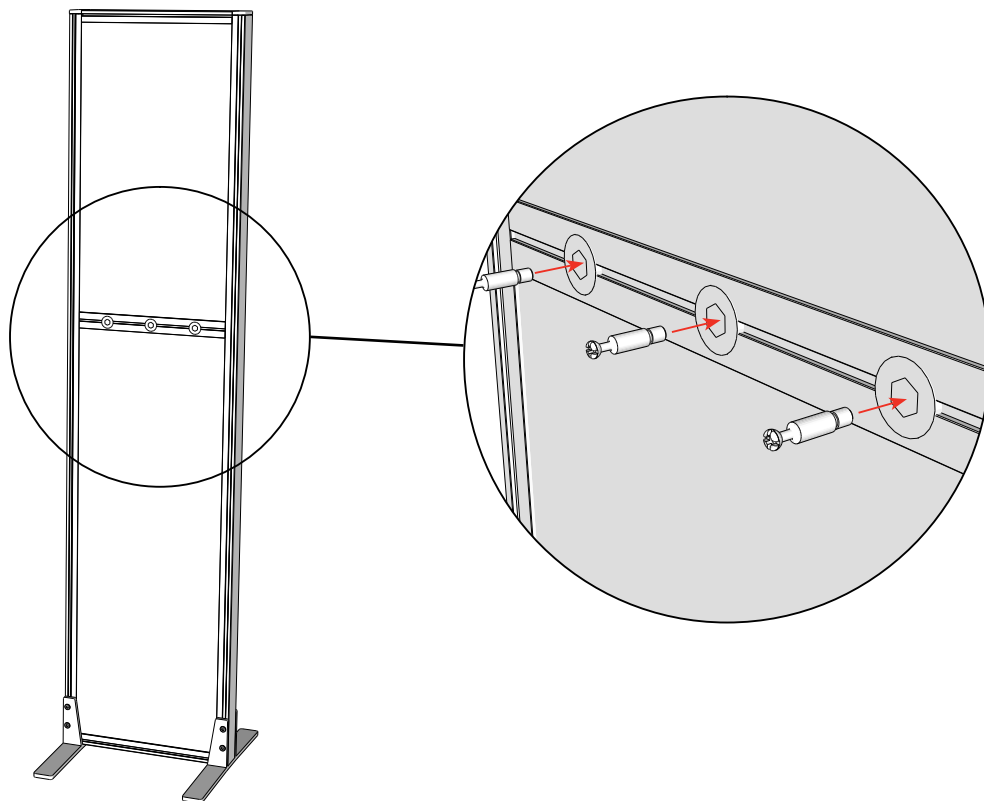

Step 2

Align holes on back of shelf with cam bolts.

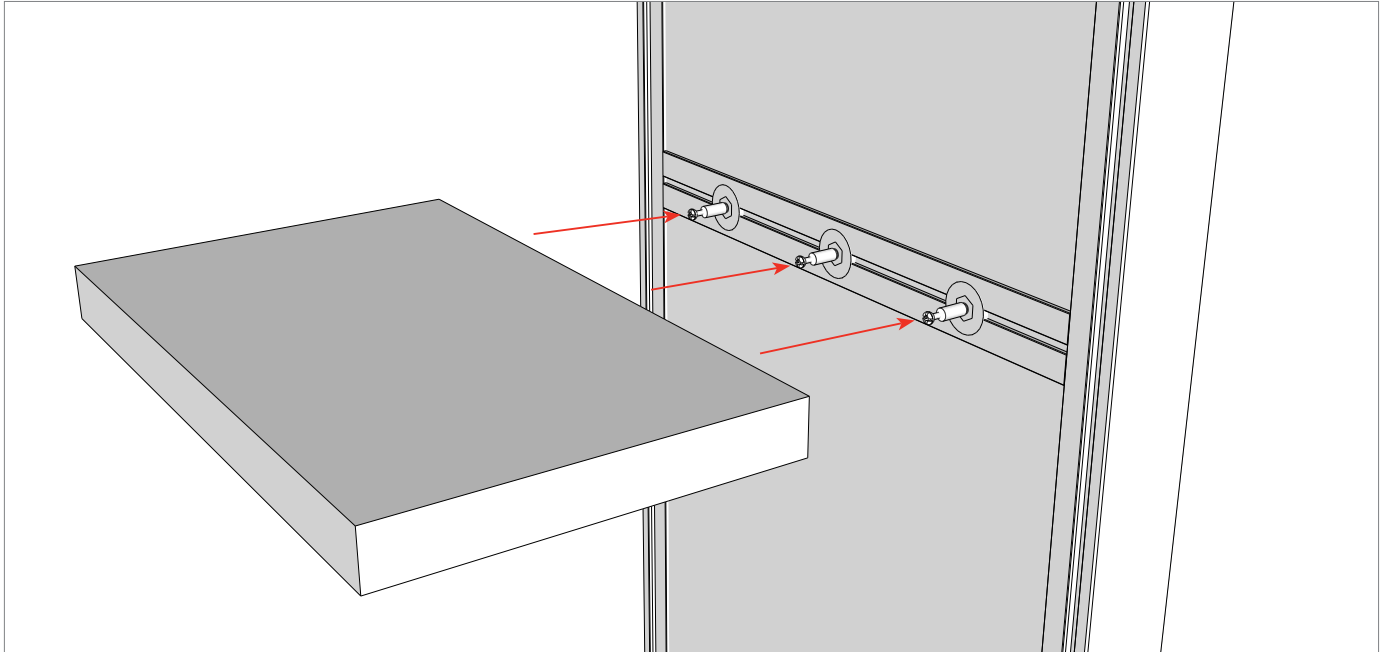

Step 3

Tighten pre-installed cams.

