


Active25


Desk Hung - Assembly Instructions

Tools Required:

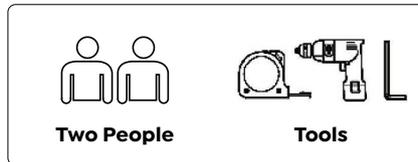


Step 1

Assemble clamp brackets (ACT25CLAMP) based on the thickness of the worktop. To suit a 25mm worktop align **A** on the centre holes of **B** with the lip of **A** closest to the lip of **B**. Insert grub screws from underneath of lip **A**. Keep clamp plate **C** aside ready for install on worktop.

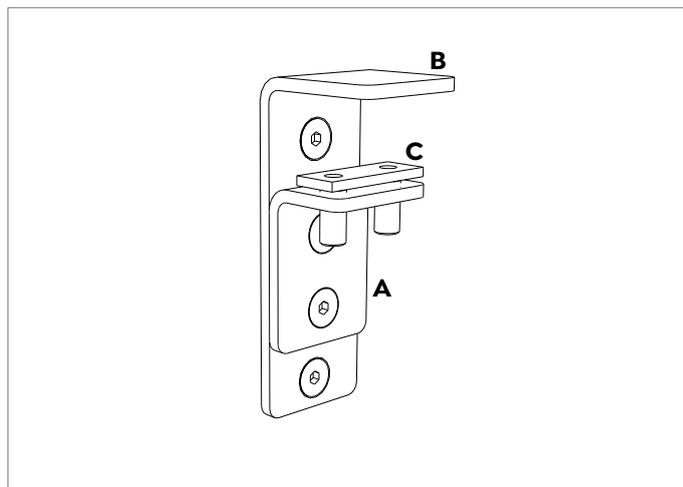


Step 1a

To clamp over a 75mm metal frame and worktop align **A** on the centre holes of **B** with the lip of **A** furthest away from the lip of **B**. Insert grub screws from underneath of lip **A**. Keep clamp plate **C** aside ready for install on worktop.

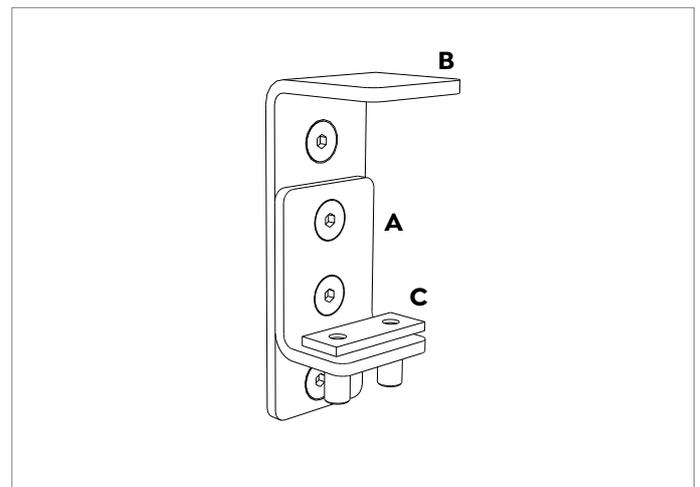

Step 2

Locate the guide holes in lower section of the Active25 screen face. Lay the screen down on a flat surface with guide holes facing upwards. Fix clamp brackets to the screen with supplied wood screws - do not over tighten (use a low torque setting - less than 10).

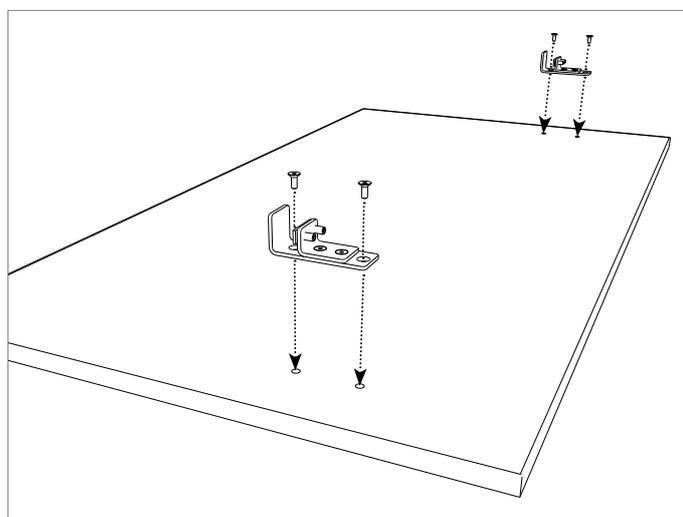

Step 3

Allow for 1-2 people to support the screen while you attach it to the worktop. Guide the clamp brackets onto worktop so worktop sits between the top of the clamp bracket and the clamp plate. Tighten grub screws to secure the brackets to the worktop.

