


Cubit System DSD

Assembly Instructions

Tools Required: Powered Screwdriver

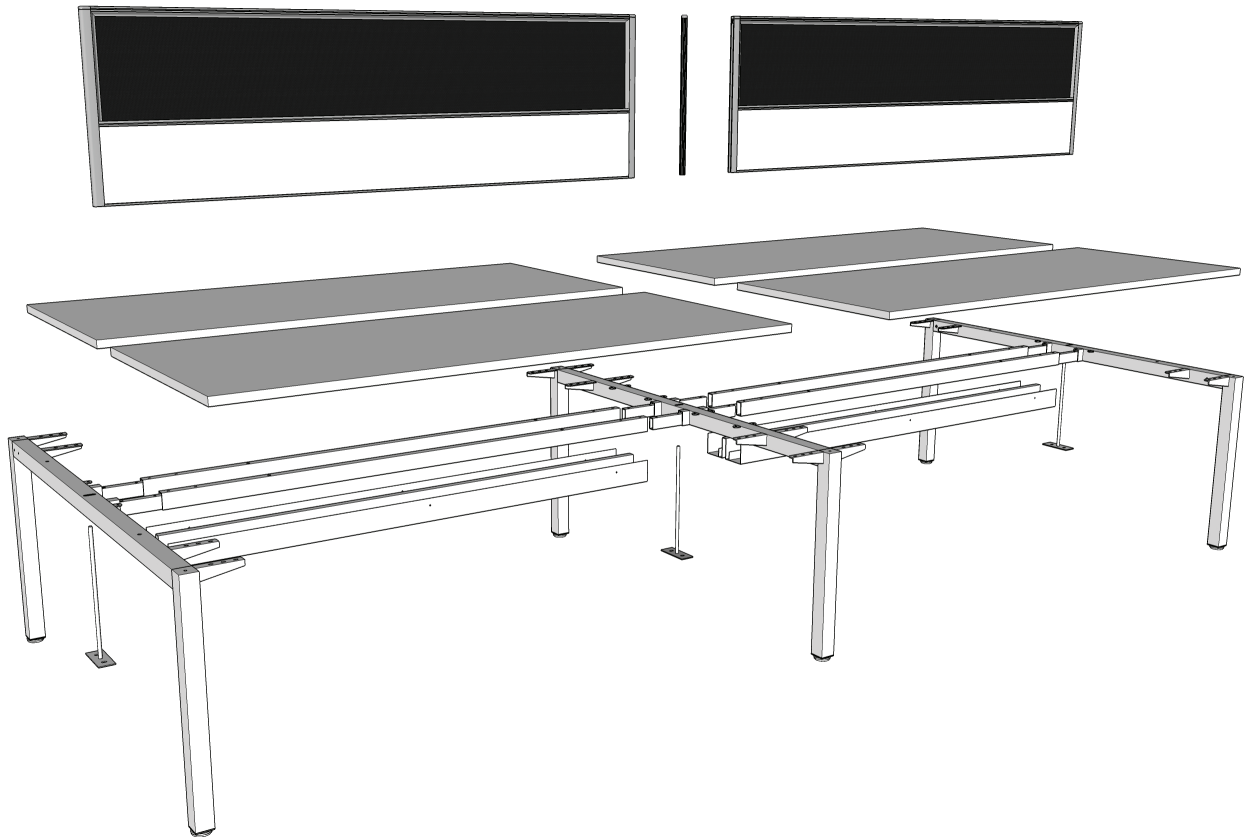



IMPORTANT NOTES!


Prior to installment, use or maintenance of the desk frame, any installer and any user of the desk must study this assembly and operation manual carefully, so as to gain a complete understanding of its content.



WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.


Step 1

Assemble frames & rails together, loosely (1 turn from tight).

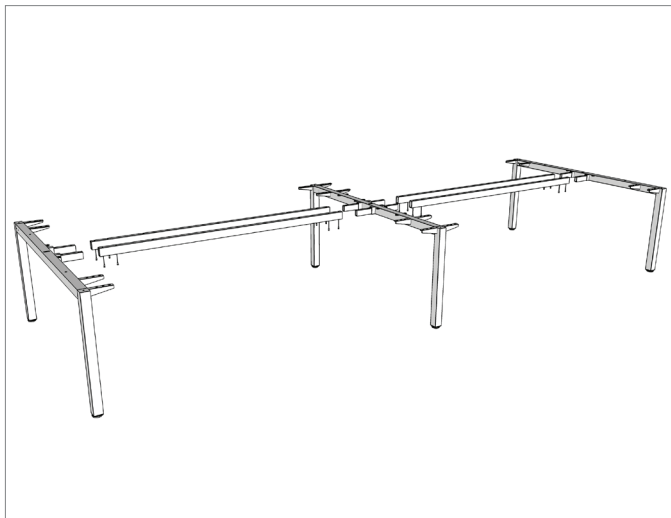


Step 2

Assemble screen brackets to frame, loosely (1 turn from tight).

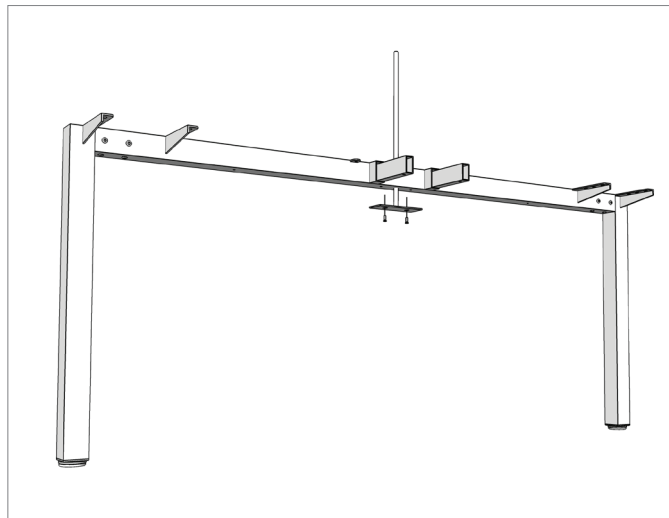


Step 3

Fix desk top with 5mm overhang over metal frame. Where desktops butt together, make sure these are fitted tight together.

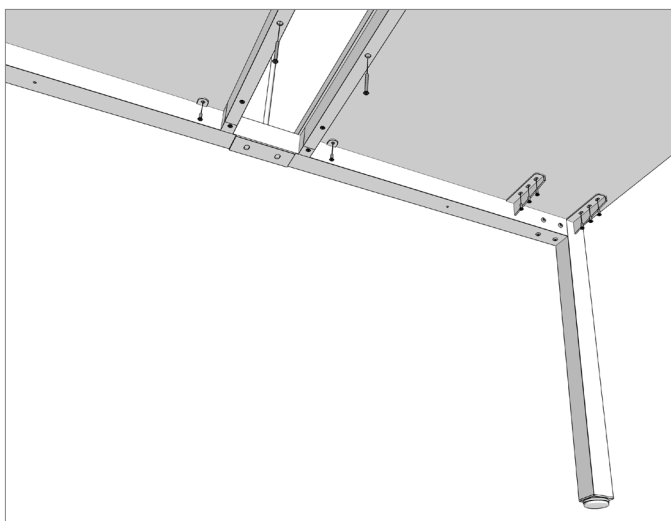


Step 4

Slide centre screen pole over bracket. Carefully remove end seal on centre screens & fit screen between end brackets & screw self tappers to fix screen tightly.

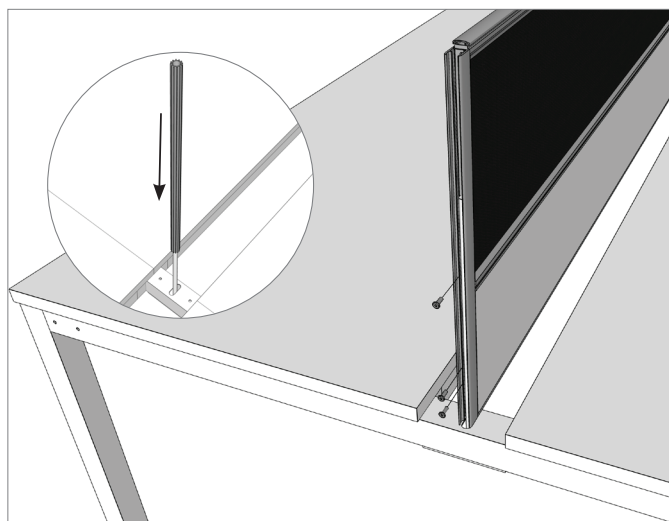


Step 5

Attach centre screen end seal and top cap with soft non-marking mallet.

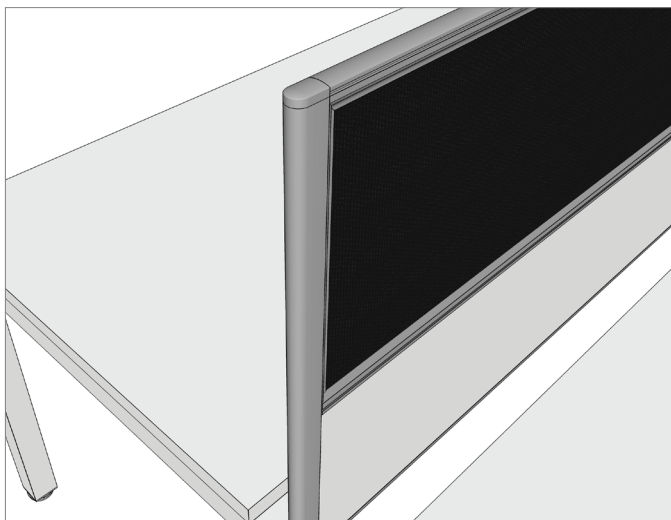


Step 6

Attach screens to centre pole with top slug connectors.

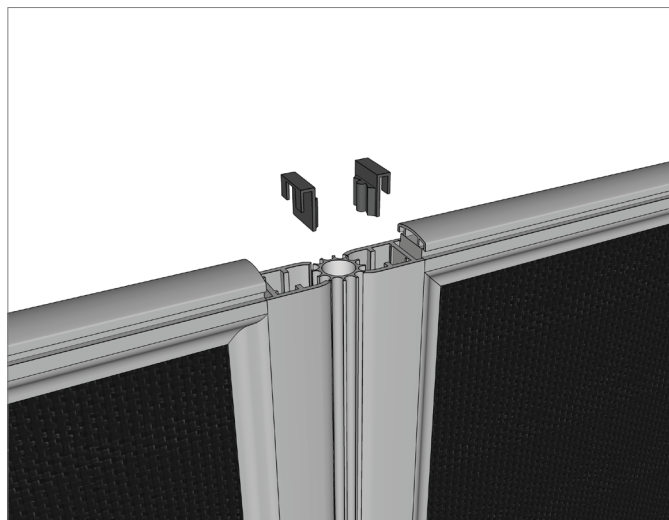


Step 7

Install all top caps simultaneously down all together gently tapping with a soft non-marking mallet.

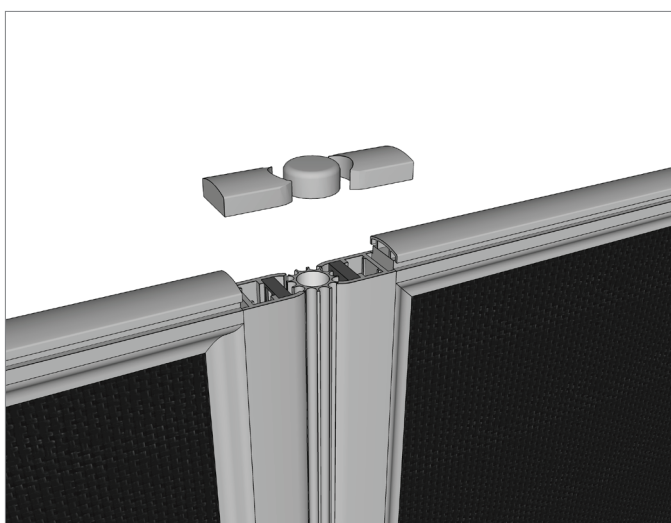


Step 8

If for whatever reason you have to remove the top seal, then to refit, slightly arc in the middle, placing the 2 ends into location, & gently tap down.

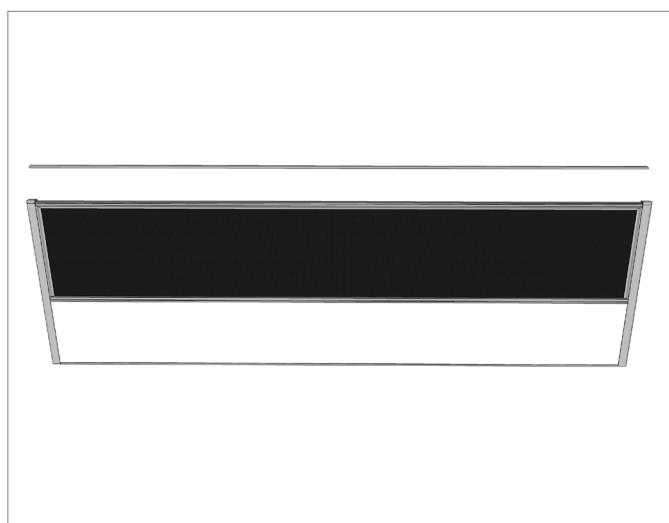


Step 9

Fully tighten all rail to frame screws, & then screen bracket screws.

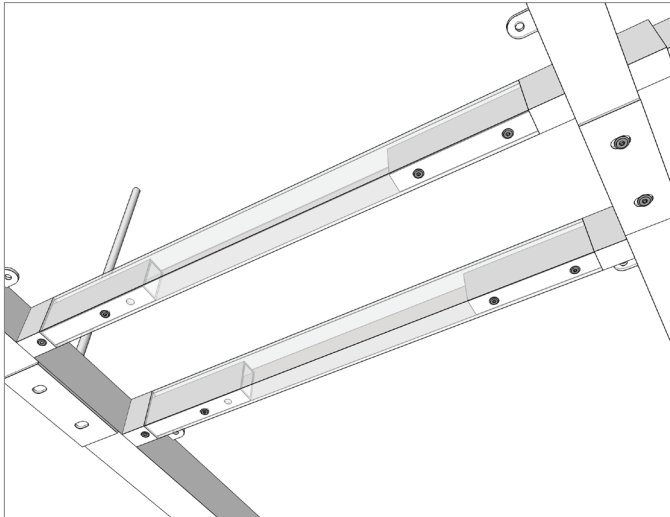

Step 10

Attach cable trays with screws provided.

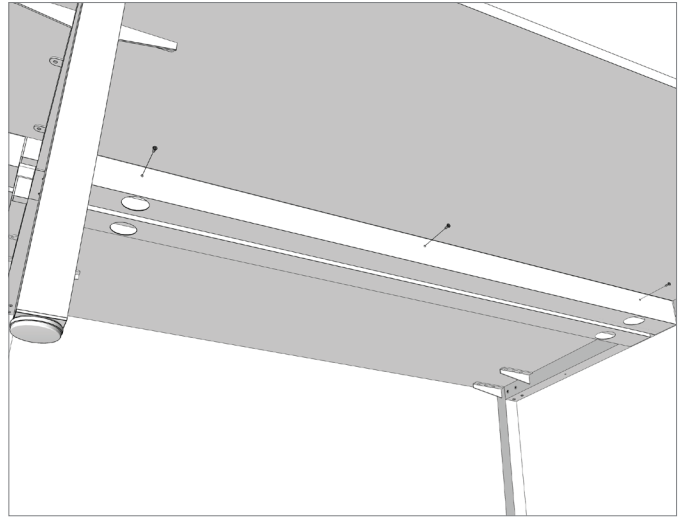

Complete

